

desire

Love♥oney

Discover a happier you

We are the sexual happiness people and since 2002 we've been listening to you to understand exactly what makes you happy. Thanks to the honest and unbiased feedback you've given us in hundreds of thousands of reviews, we've been able to continually refine the toys we create for your pleasure.

The result is Desire, a collection of luxurious sex toys expertly designed with only one thing in mind: ultimate sexual happiness.

www.lovehoney.co.uk

desire

Lovehoney

Introducing your Desire Remote Control Love Egg

Supreme satisfaction is yours for the taking with Desire's Love Egg. Surrender to the blissful sensations offered by its 8 patterns of waves and pulses and 12 levels of adjustable intensity.

Silken silicone envelops your love egg for unrivalled sensuality and stimulation. A generous cord ensures quick and simple removal once play has reached its gratifying conclusion.

Whisper-quiet and wirelessly operated, your egg has been lovingly designed for both intimate exploration at home and amorous adventures at large.

Keep your egg to yourself for heavenly solo arousal, or hand the remote to your partner for a transformative foreplay experience that begins before they even enter the room.

Desire Remote Control Love Egg

PLEASURE GUIDE

| ENGLISH | **5**

Before you get started


Your love egg needs charging before first use. Charge the love egg by plugging one end of the USB cable into a USB charging point, then unscrew the egg's tail and plug in the other end of the USB.

The light will flash during charging. When the flashing stops and the light is solid, your egg will be fully charged and ready to use.

The egg will take approximately 120 minutes to fully charge, and gives you up to 60 minutes of use between charges.

When the battery is running low the light will flash quickly to indicate charging is required.

To activate the remote controller, place pressure on the back of the controller in a downward motion to reveal the battery compartment. Twist the cap in an anticlockwise direction, take the included battery out and remove the protective paper disc. Place the battery back into the compartment, twist the cap back on in a clockwise direction and slide the controller base into place.

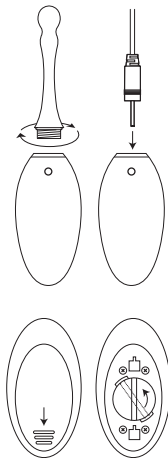


Mode button
Press to turn on
Changes pattern setting

Plus button
Increases intensity

Minus button
Decreases intensity

Light

Power button
Hold for 3 seconds
to turn on or off

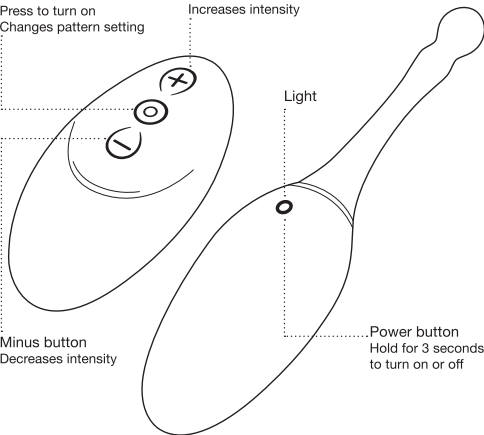

| ENGLISH | 7

Enjoying your Desire Love Egg

 
Before use, coat the love egg with water-based lubricant. Do not use silicone-based lubricant with the love egg.

To turn on the egg, hold down the power button for 3 seconds. The light will come on. To turn on the remote hold down the mode button for 2 seconds. Pressing any of the buttons on the remote will now activate the vibrating egg. You can control the speed of the egg by pressing the + and - buttons.

Cycle through the 8 vibration patterns by pressing the mode button on the remote. Each press will give you a different pattern, as illustrated on the opposite page. On each setting, use the + and - buttons on the remote to control the intensity of the vibrations.

Press and hold the power button on the egg for 3 seconds to switch it off. Press and hold the mode button on the remote for 2 seconds to switch it off.

Your egg can be used without the remote for solo pleasure. To turn on the egg, hold down the power button for 3 seconds. The light will come on. You can push the power button to cycle through the 8 vibration patterns. Press and hold the power button for 3 seconds to switch it off.



Pattern 1



Pattern 2



Pattern 3



Pattern 4



Pattern 5



Pattern 6



Pattern 7



Pattern 8

Looking after your Desire Love Egg

Your love egg should be cleaned before and after use with specialist sex toy cleaner, and left to air dry before storing.

Keep your love egg in the storage case provided, away from dust, heat and direct sunlight. A small opening in the back of the toy case can fit the width of the USB cable for discreet charging.

Using the travel lock

The travel lock prevents the egg from accidentally switching on when not in use. To activate, press and hold the power button on the egg for 5 seconds. The light will flash three times.

To deactivate the travel lock, press and hold the power button for 5 seconds once more.

Alternatively, plugging the toy into a USB port will also deactivate the travel lock.

The small print

To avoid injury or aggravation of pre-existing conditions, do not use on swollen or inflamed areas or skin lacerations. No medical claims are warranted or implied by use of this product.

The shape and appearance of the product inside this package are a trademark and trade dress of Lovehoney Ltd. Copyright 2015.

Electronic equipment in the EU

The crossed out wheelee bin symbol indicates that this toy should not be treated as household waste. Instead, take the toy to a recycling centre that deals with electrical and electronic equipment.



RoHS



Key details

Materials: Silicone and ABS plastic

Charging time: 120 minutes

Usage time: Up to 60 minutes

Standby time: 90 days (egg) / 1 year (remote)

Vibration functionality: 8 patterns, 12 speeds

Waterproof: Yes (egg) / No (remote)

Battery (remote): 1 x CR2032

Warranty

Lovehoney Ltd offers no-quibble 365-day returns on all products bought through our websites. Should you discover a defect or change your mind about your product, please contact customer care to be offered a replacement or a refund.


Customer care contact details:

0333 103 6969

help@lovehoney.co.uk

www.lovehoney.co.uk/returns

12 | ENGLISH |

 

desire
Lovehoney®

www.lovehoney.co.uk

© Lovehoney Ltd 2015
Lovehoney ® is a registered trademark of Lovehoney Ltd

V1 - 0815



FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.