

# User manual

Function introduction:

## 1. Button function:

Up lift: Move next. The music can change to the next one.


Down lift: Move previous (BACK). The music can change to the previous one.

Up middle Mode: When pressing the button for the first time, the Bluetooth can be turned on and search the Bluetooth in the range of 15M. When pressing it for the second time, the Bluetooth set can be turned off, and the music player will continue to work as what it does before you press this button.

Down middle: pause/play: The first time to press the button, the music will pause. The second time to press the button, the music will continue to play.

Up right: It aims at transmitting frequency. If you press it only once, the transmitting frequency will increase 0.1MHz. If you press the button for a long time, the transmitting frequency will increase quickly. You can see the current transmitting frequency from the digitron.

Down right : DOWN : It aims at transmitting frequency. If you press it only once, the transmitting frequency will decrease 0.1MHz. If you press the button for a long time, the transmitting frequency will decrease quickly. You can see the current transmitting frequency from the digitron.

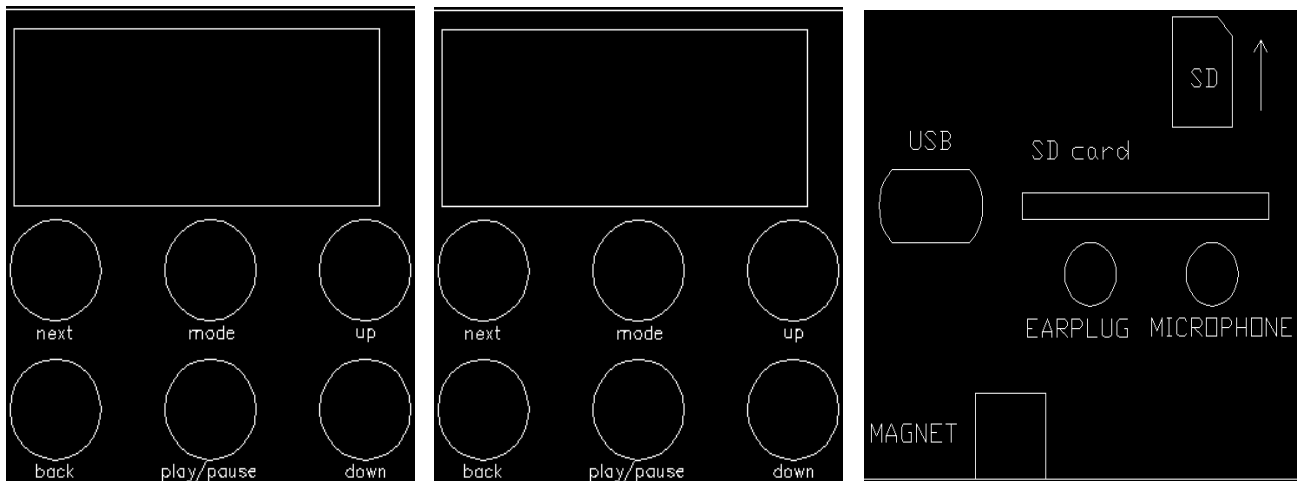

## 2. Display function:

Display: The digitron can display the current FM receiving frequency

## 3. Bluetooth transmission:

It has the built-in Bluetooth module. It can connect with other set by Bluetooth. Then press the MODE, it can play the music from other Bluetooth set.

4. Audio input:

There is a 3.5mm audio input port in the harmonize music control box. It can connect with other audio source to play other music.

5. Audio output:

There is a 3.5mm audio output port in the harmonize music control box. It can connect with the loudspeaker by the 3.5mm cable to play music.

6. USB download:

There is a mini USB in the harmonize music control box. It can connect with the computer by the data line and then users can copy or delete the music in the SD card.

7. SD card:

The harmonize music control box can only recognize WMA and MP3.

### FCC Requirement

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: 2ACO2-GV-MUSIC