

## REMOTE CONTROL FUNCTIONS

- 1-speed up for all dynamic modes
- 2-speed down for all dynamic modes
- 3-power on
- 4-timer off
- 5-power off
- 6- timer setting for 4h
- 7- timer setting for 6h
- 8- timer setting for 8h

### Color Select:

- 9-steady red color
- 10-steady green color
- 11-steady blue color
- 12-steady cool white color
- 13-steady yellow color
- 14-steady cyan color
- 15-steady purple color
- 16-steady rainbow colors

### Motion Select:

- m1-m4 cascading effects
- 17-m1 chase cascade- up/down
- 18-m2 trailing cascade- up/down
- 19-m3 stacking cascade- up/down
- 20-m4 fade in & out chase effect
- 21-m5 light stacking & building effect
- 22-m6 double chase effect
- 23-m7 two color chase
- 24-m8 cascading rainbow
- 25-26 rainbow colors only
- 25-fade: lights fade in synchronous mode
- 26-jump (7 color): lights jump in synchronous mode
- 27-asynchronous fade: fade between colors
- 28-asynchronous jump: jump between colors
- 29-auto run functions m1-m8 for each color combination and functions 25-28
- 30-32-diy: diy set up function combinations
- Auto: 12 motion effects changed automatically

DIY- Step 1 press 1 of 3 DIY buttons. Step 2 press ON button 3 times, the lights will change to steady red. Step 3 select a "color select" option next choose a "motion select" option, press ON button to set color and motion selection. Step 4 press ON button 2 times or wait 2 minutes for DIY function to save.

- TIMER - NOTE:** The timer mode must be started each time the tree is plugged in, or each time power is turned off then back on to the tree. Page 6 of 7
  - To enable the timer - Press TIMER button with desired time on hours(4hr,6hr,8hr). The timer will start at the time when this button is pressed. When timer is enabled the lights on the tree will flash once and remote LED will flash for several second and fade off to indicate the timer is enabled.
  - To disable the timer - Press TIMER Off button. The lights on the tree will flash GREEN once and the LED indicator on the remote will be on steady.

NOTE: The timer will be enabled until either the timer is disabled with the remote or power is removed from the power adaptor.



