# GXTW5(英语+西班牙语)说明书:35.5x21cm

TRUE WIRELESS GAMING EARBUDS

## SENTRY,

# (BC) BT899

# Fig 1

Fig 2

# **TRUE WIRELESS** EARBUDS

1 Using your True Wireless Earphones Charge the earbud and case first. Make sure charging case and earbuds are fully charged. STEP 1 Tum of the Bluetowth function from your music device. E.g., Mobile phone or music

STEP 1 Jum off the Biuletooth function from your music device. E.g., woure priorite or music device. STEP 2 Take out the earbuds from the charging case after they have been charged. The earphones will automatically turn-on. You will hear "Power On", Wait's seconds so that both earbuds can connect to each other. After the dual earbuds have connected to each other, you will hear a ture to suggest that both earbuds are paired successfully, and the status of the Right earbud will have blue light and red light flashing alternatively but Left earbud will have very slowly flashing blue light. StEP 3 You can now turn on the Bluetooth function of your mobile phone or audio device. Search and select BT399 on your device and connect. When the earbuds are connected with the device successfully, you will hear " Connected" and earbuds will have very slowly flashing the light.

blinking blue light. If you turn off the bluetooth function on your mobile phone.you will hear "Disconnected".

If you can on the buelloan intercont on your motion priorite, you win their basis on meters, and the status of the Right endud will have blue light and red light flashing alternatively but Left earbud will have very slowly flashing blue light. The pairing mode between both earbuds and device will remain for about 5 minutes, After that earbuds will turn auto-off if no device connection in 5 minutes, and you will hear "power off". to userve contension in 5 minutes, and you will near power on . \*After the initial settings, both earphones will auto pair with your device directly and you can skip Step 1 and 2. \* Fig 1 (shown on the image).

2 Button Function On/Off Turn on : Long press both left and right earphone (see Fig 1) for 3 second to turn on earphones; Long press left or right earphone top button (see fig 1) for about 6 seconds, to turn off earphones

to turn off earphones Answer / Hang Up When there is an incoming call, short press the top button (Fig 1) on the left or right earphone to answer the phone (see Fig 1 on the image) During the call, the earphones with slowly flashing blue light. short press the top button (Fig 1) on the left or right earphone to end the call. \* When playing music, and there is an incoming call, music will be auto-paused and auto play when end the call. **Reject / Call Back** When coming call, long press left or right earphone about 2 seconds to refuse the call. (fin 1

Reject / Call Back When coming call, long press left or right earphone about 2 seconds to refuse the call. (fig 1) Three-click the right earphone to resume back to the last call, three-click the left earphone to open the voice assistant.

to open the voice assistant. Play / Pause Music To pause playing music, short press either the left or right earbud (Fig 1) to pause. To continue playback, short press either the left or right earbud (Fig 1) to continue playback. If one of the earbuds have run out of battery, the other one will continue to work until it runs

out of power also. Last / Next Song Control When playing music, double-press the left earphone (Fig 1) to switch to the Last song; Double-press the right earbud to switch to the next song.

Charging the case and earbuds : Charge the charging case (fig 2) The charging case (fig 2) charges the earbuds. It is important that the charging case is recharged. To do this, Insert the provided USB charging cable to charge the charging case (Fig 2) with a USB power adapter.

The LED light on the case will keep on flashing when it is charging. When fully charged, the LED lights will keep on and still. Charging the case will take 5 hours to fully charge the case but charging amount times may vary depending on battery status. Nofe: When there is no charge left on the charging case, the case will start to flash to announce low battery and then turn off completely.

English

LED lights will keep on and still.
LED lights will keep on and still.
LED lights will keep on and still.
Charging the case will take 5 hos to fully charge the case but charging amount times may dytem there is no charge left on the charging case, the case will start to flash to announce low battery and then turn off completely.
Charge the earphones (Fig 1):
The charging case should be fully charged and have sufficient power before the arrhouts. Put the earbuds to put on gressing both earbuds (fig 1) for 5 does and the case. It may not charge, Please take out the earbuds and ne inductive pins on the charging case to be strest and and the targe of a strest take out the case will also turn on and still coording that the argent case will also turn on and still to confirm that charging case will also turn on and still to confirm that charging case will also turn on and still to confirm that charging case will also turn on and still to confirm that charging case. It may not charging case will be auto off.
When earphones are on low battery, you will hear a tune to announce low battery and the earphones are on low battery, you will hear a tune to announce low battery and the earphones are on low battery, you will hear a tune to announce low battery and the earphones are on low battery, you will hear at une to announce low battery and the earphones are on low battery, you will hear a tune to announce low battery and take on the charging case. (Turn off by pressing both earbuds nearbuds progent, the learbuds to for seconds at the sing batter of the arging case. (Turn off by pressing both earbuds nearbuds and the harding case. Therefore, the earbuds progent was this product to be free from defects in materials and workmanship for 90 days from the date of onginal purchase. This warranty does not product will be replaced if thermed to an authorized send the simulation case of a subtue difference as a strest. Went the earary batter of t

3 Frequently asked questions Bluetooth earbuds cannot turn on? 1)You can check if earbuds is with power or not ? If not, please fully charge both earbuds before turning it on. (Also charge the charging case as well to make sure there it has enough power to charge the earbuds) 2)Make sure the earbuds are properly charged by placing them securely into the charging case (#ro)

case (fig 2) 3)Turn on the earbuds please long pressing both earbuds for 3 seconds (fig 1)

Buetooth earbuds signal is unstable ? 1)Restart the Bluetooth earbuds by turning them off and then on. To do this long press (fig) 2)Please kindly check the compatibility and calling communication quality of the mobile phone. The playing device should be no more than 1.5 meter (2 feet) apart 4)Interference from other devices or areas (crowded areas) may cause some signal instability. Move to another area to see if it improves. Waste electrical products should not be disposed of with household waste. For the playing device should not be disposed of with household waste. For the playing device should be no more than 0.5 meter (2 feet) apart 4)Interference from other devices or areas (crowded areas) may cause some signal instability. Move to another area to see if it improves.

Why can't I can't hear voice / playback? 1)Please kindly check if your playback device volume is on or on mute status. 2)Please kindly check if Buetocht earbuds and phone are connected well. Resetting the device may be necessary (see below on how to reset) 3)Check the distance between earbuds and phone is too.

Reset : If the earbuds are not pairing correctly or continue to have issues , please delete the earbuds from your phone by going to the phone's Bluetooth settings and removing it. Them follow Steps 1-3 on the first page of this manual to re-pair your earbuds to your phone the setting setting and the setting settin

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sentry Industries Inc is under license. Other trademarks and trade names are those of their respective owners.

- SENTRYINDUSTRIES INC ONE BRIDGE STREET, HILLBURN, VY10931, USA TEL +1 8457532910

-if indested

undesired operation." FCC ID:2ACP4LBT899 Model #BT899

English

 
connected. -Consult the dealer or an experienced radio/TV technician for help Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

Charging your device Only use a power adapter with applicable country regulations and international and regiona safety standards. Other power adapters may not meet applicable safety standards, and using such adapters could pose a risk of death or injury.









English

English

## FCC Compliance Statement

FC "This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause independent of the section of th

TWOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio

Used in accordance with the instructions, they cause harming interference to fauld communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.

Avoid prolonged skin contact with the charging cable and connector when the charging cable is connected to a power source because it may cause discomfort or injury. Sleeping or sitting on the charging cable or connector should be avoided.

Choking hazard : The product, packaging and some of the included accessories may present a choking hazard to small children. Keep these accessories away from small children. The bags themselves or the many small parts they contain may cause choking if inosetaet.

Danger : Improper battery replacement may cause an explosion and injury.