


Quick Guide

IPX8 Bluetooth & MP3 Headphone

WHAT'S IN THE BOX


ITEMS	DETAILS
IPX8 Waterproof Headphone	1X
Magnetic USB Cable	1X
Swimming Ear Tips	S,M,L
Normal Ear Tips	S,M,L
Headphone Bag	1X
User Manual	1X

OVERVIEW

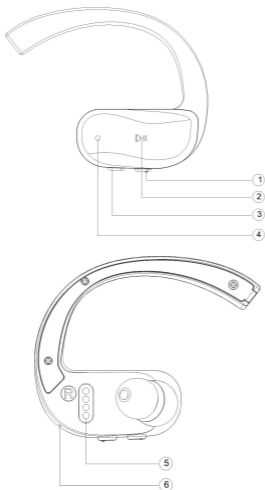

- ① ----- VOL + / PRE. / Mode Switch
- ② ----- Play / Pause / Phone Call / Playback Mode (Touch Button)
- ③ ----- VOL- / NEX. / Power
- ④ ----- LED Indicator
- ⑤ ----- Magnetic Charging
- ⑥ ----- Microphone

HOW TO WEAR

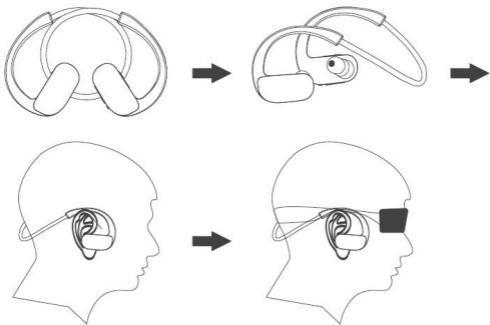

1. Use your both hands to hold the L and R side. Make sure the L and R side are in your corresponding Left and Right hand. (Pic.1)
2. Turn the headphone and make sure the L and R marks on the headphone are facing directly with each other.
3. Keep one side still, then spin the other side for 180 degree. Then you will see the headphone as shown in Pic. 2.
4. Hang the neckband over the top of your ears and behind your head. (Pic.3) Adjust to find the best suitable position.

HOW TO PAIR TO YOUR DEVICE

1. Turn on the device by long pressing the VOL- button for 7s until the voice prompt and Blue LED flashes.
2. Enter the Bluetooth menu of your device, search for the [NICE18T] and click to connect.
3. When the Blue LED turn solid, it means the connection has been established successfully. If the passkey input is required, input"0000".

Notice:

1. The device will automatically reconnect to the last connected device every time it turns on. If you want to connect to other devices, just turn off the Bluetooth of the last device or repeat Step 1 above.


HOW TO SWITCH TO MP3

1. Make sure the device is power on.
2. Long press the VOL+ button for 7s until you hear the voice prompt, then you have entered the MP3 mode.

Notice:

The device will automatically turn off when it has been paused for 6min.

HOW TO CHARGE

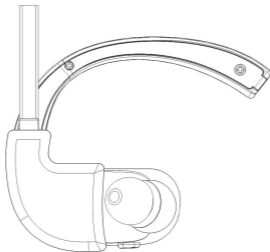

1. When you hear the voice prompt "Low Battery", it mean you should charge your device.
2. For charging, please turn off the device and connect the device to a reliable power source with the magnetic USB cable included in the package. (As show in above picture)
3. The standard charging time is about 2 hours. During charging, the Red LED indicator is solid. When the charging is finished, the Red LED will

turn off.

Notice:

Please keep your magnetic port dry and clean. Remember to clean the magnetic port with a cloth before you charge or transfer the music.

HOW TO TRANSFER MUSIC FILE

1. Turn on the device and connect the device to your computer with the magnetic USB cable included in the package.
2. When the Red LED turn solid, the connection is successful. Then a removable disk can be found on your computer. Right now, you can edit all your files in the device now.

Notice:

Make sure the magnetic port is always connected to the device during the data transfer(Blue LED flashes), otherwise the data on the devices maybe lost.

BASIC OPERATION

BLUETOOTH FUNCTION

Function	Operation
Power on/off	Long press the VOL- button for 7s
Play/Pause	Touch the Play/Pause button
PRE./NEX.	Long press the VOL+/VOL- for 2s
Volume Control	Press the VOL+/VOL- to adjust volume
Entering MP3 mode	Long press VOL+ button for 7s until the voice prompt

MP3 FUNCTION

Function	Operation
Play/Pause	Touch the Play/Pause button

PRE./NEX.	Long press the VOL+/VOL- for 2s
Volume Control	Press the VOL+/VOL- to adjust volume
Entering Bluetooth mode	Long press VOL+ button for 7s until the voice prompt
Playback Modes (SEQUENCE / SHUFFLE / SINGLE REPEAT)	Touch the Play/Pause button for twice
HANDS-FREE FUNCTION	
Function	Operation
Answer/End a call	Touch the Play/Pause button
Volume Control	Press the VOL+/VOL- to adjust volume

Notice:

- 1. The volume and break-point will be automatically saved when powering off.*
- 2. After power on, the Playback Mode will become default mode-SEQUENCE.*

SWIMMING TIPS

1. Before wearing it to swim, remember to click the VOL+ and VOL- button at the same time to disable Play/Pause button. After swimming, you can also active Play/Pause button by repeating above step. You can hear a voice prompt and see the LED flash five times after each operation.
2. The Bluetooth signal cannot transmit through water, so please use the MP3 during swimming.
3. Infiltrating water may block the earphone sections and reduce the speaker volume. To restore volume, please remove the ear buds and blow air into the headphone section to propel water out. Then squeeze the ear buds to drain the remaining water. Reinstall ear buds so that you can use the unit properly again.
4. Clean the remaining water on the headphone every time after swimming. As the remaining water may cause damage to the device

when you charge or transfer data.

Notice:

1. This product applies to IPX8 waterproof standards. This product is suitable for working faultlessly under continual submersion for 60 minutes at a depth of 1m. Testing environment are limited to fresh water, tap water, sweat and swimming pool water, liquid types other than above are not applicable to test results.

TROUBLE SHOOTING

Problem	Possible Cause	Solution
Can't turn on	Low battery	Please charge the device
Can't reconnect	Out of range	Take the device within 10m and click to connect on the phone
Can't play music file	No compatible audio file	Use MP3,WAV,FLAC format file
No sound during a call	Connection failed/Not is Bluetooth call mode	Reconnect the device/Change the phone call mode on the phone

SPECIFICATION

- IP rating: IPX8
- Touch control: Support
- Bluetooth version:4.1(BDR/EDR)
- Bluetooth profile: A2DP/AVRCP/HSP/HFP
- Bluetooth range: 10m

- USB type: Magnetic USB port
- File support: MP3 , WAV, FLAC
- Music time: 10H
- Memory capacity: 8GB
- Li-ion battery: 220mAh

STORAGE AND MAINTENANCE

1. Storage:

Store your product in cool and dry place.

2. Maintenance:

- a. The recommended working temperature range is 0-45°C (32-113°F); over hot/cold/humid environment may badly reduce the product battery life and harm the overall performance.
- b. Avoid using the product during a lightning storm.
- c. Please charge your unit first before using the device after a long time storage.
- d. Clean the product with a piece of dry cloth.
- e. If remaining water/sweat is found on the charging port, simply dry it with a soft cloth.
- f. Keep the product away from sharp edges/points.

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a

residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.