

ERP MODULE	
GND_D	
+5V_ERP_INT	
SOFT_START_RELAY	
+5V_A0	
GND_D	
MAIN_RELAY	

FRONT PANEL	
USB	
GND_D	GND_D
VBUS	DP
DM	VBUS
GND_D	NC

+5V_ERP_INT	
+5V_ERP	
+DIG_LEGACY	
GND_D	
UART_TX	
UART_RX	
EXT_PG00D_OUT	
EXT_PG00D_IN	
PSU_MODE_1	
PSU_MODE_0	
SOFT_GND	
NC	

LAYER MARKER	
BTM-1254	
PROGRAMMING	
BT_MISO	
BT_MOSI	
3V3_BT	
BT_CLK	
GND_D	

ARM PROGRAMMING	
VDDIO_3V3	
N.C.	
JTAG_TMS	
JTAG_TDI	
GND_D	
JTAG_TCK	
N.C.	
JTAG_TDO	
GND_D	

VDDIO_3V3	
3V3_A0	
GND_D	
12C_CLK	
BRD_DET	
5V0_A0	
12C_DAT	
GND_D	
PS_EN	
HDM_INT	

117025

