MF 003F User Manual



Introduction

The Wireless FM microphone accepts the karaoke music by paring your mobile phone or tablet with the microphone through embedded Bluetooth module and mixes the karaoke music with your voice through the microphone. The sound effect is added on the voice in order to get a more attractive singing effect. The mixed sound of singing is transmitted through FM band and can be accepted by any device with FM receiver function such as the motor vehicle, the home audio system, etc.

This is the simplest and most portable karaoke device. You can sing karaoke anywhere only if you have a FM receiver.

Quick Start Guide

- 1. Connect the FM receiver to a speaker or audio system and tune the FM receiver to 107 9MHz
- 2. Short press the On/Off Button on the microphone, the device will be powered on and then the On/Off indicator will be highlighted.
- 3. Pair your phone/tablet with the microphone through Bluetooth.
- 4. Access your Karaoke songs via your mobile phone, Tablet or iPad (available APPs), of your

- choice, or,
- Access your Karaoke songs via your mobile phone, Tablet or iPad at YOUTUBE.COM/VEVO/KARAOKE
- 6. Go KARAOKE!

Power Off


- 1. To power off the receiver (Pebble) and the microphone, the On/Off Button should be **long** press for at least 3 seconds until the On/Off indicator is off.
- 2. The microphone will be powered off automatically if no voice is detected for more than 10 minutes.

Charge

- 1. The On/Off indicator will indicate orange color if the microphone is in low power status.
- 2. It needs about 2 hours to complete the charging.
- 3. When it is in charging, it cannot be powered on.

Channel Switching

The channel should be changed synchronously on both the microphone and the FM receiver if the interference occurs.

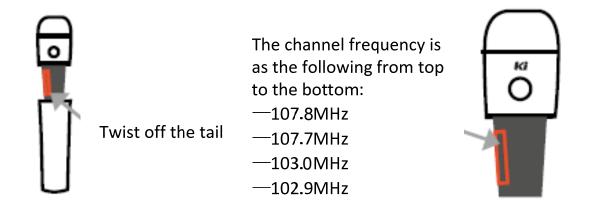

FCC NOTE:

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS OR CHANGE TO THIS EQUIPMENT. SUCH MODIFICATIONS OR CHANGE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.