 


CROSLEY

CR6251A

BOUND

Instruction Manual

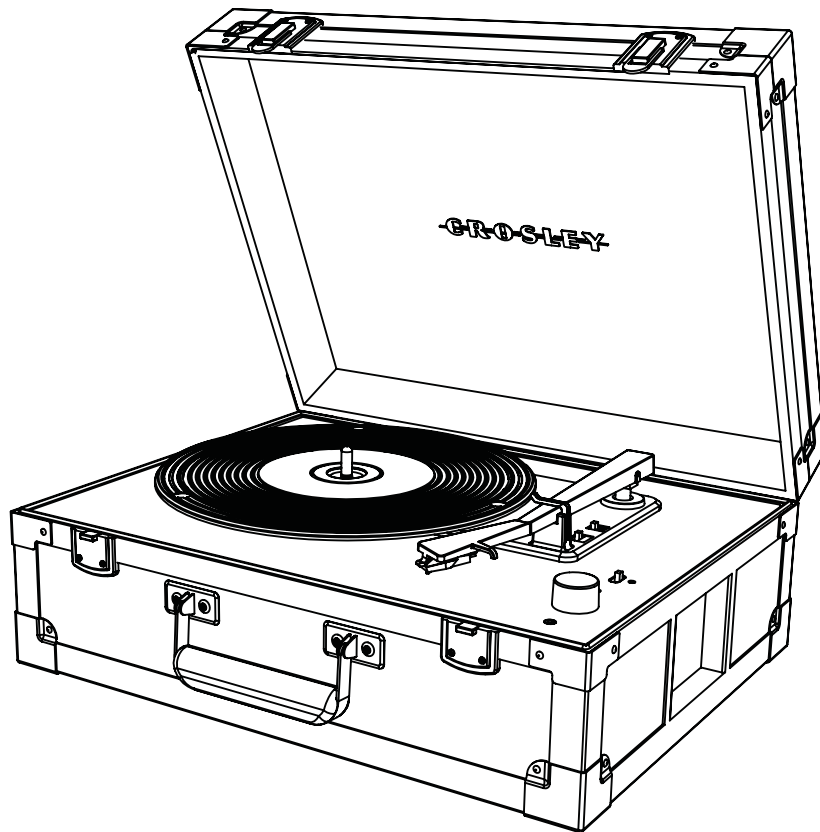

www.crosleyradio.com

ENGLISH

IMPORTANT SAFETY INSTRUCTION

PLEASE READ CAREFULLY ALL THE FOLLOWING IMPORTANT SAFEGUARDS THAT ARE APPLICABLE TO YOUR EQUIPMENT




1. Read Instructions - All the safety and operating instructions should be read before the product is operated.
 2. Retain instructions - The safety and operating instructions should be retained for future reference.
 3. Heed Warnings - All warnings on the product and in the operating Instructions should be adhered to.
 4. Follow Instructions - All operating and use instructions should be followed.
 5. Cleaning - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
 6. Attachments - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
 7. Water and Moisture - Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.
 8. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
 9. Ventilation - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
 10. Power Sources - This product should be operated only from the type of power source indicated on the marking label, if you are not sure of the type of power supply to your home. Consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
 11. Grounding or Polarization - This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
 12. Power - Cord Protection - Power - supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.
 13. Lightning - For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power - line surges.
 14. Power Lines - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
 15. Overloading - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
 16. Object and Liquid Entry - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
 17. Servicing - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
 18. Damage Requiring Service - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a. When the power-supply cord or plug is damaged.
 - b. If liquid has been spilled, or objects have fallen into the product.
 - c. If the product has been exposed to rain or water.
 - d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e. If the product has been dropped or damaged in any way.
 - f. When the product exhibits a distinct change in performance - this indicates a need for service.
 19. Replacement Parts - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
 20. Safety Check - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
 21. Wall or ceiling Mounting - The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
 22. Heat - The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.
- WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio TV technician for help.



ENGLISH

WARNING:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. DO NOT REMOVE COVER. PILOT LAMPS SOLDERED IN PLACE. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

| | | |
|--|--|--|
|  <p>The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute risk of electric shock to persons.</p> |  <p>CAUTION: TO REDUCETHE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER - SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p> |  <p>The exclamation point within an equilateral triangle is intended to alert user to the presence of important operating and maintenance (servicing) instruction in the literature accompanying the appliance.</p> |
|--|--|--|

SPECIFICATION

| | |
|--------------------|---------------------------------------|
| Power Supply | : AC adapter -(DC 12V 0.5A)(Included) |
| Power Consumption | : 12W |
| Speed | : 33 1/3 / 45 /78 RPM |
| Speaker | : 8Ω /5W x 2 |
| Replacement Needle | : NP-6 |

•DESIGN AND SPECIFICATION SUBJECT TO CHANGE WITHOUT NOTICE.



1220 East Oak Street • Louisville, Kentucky 40204
www.crosleyradio.com

Welcome

Thank you for purchasing the Crosley BOUND(CR6251A). Before operating this unit, please read this manual thoroughly and retain it for future reference.

About This Manual

Instructions in this manual describe the control functions of the CR6251A.

Included in this package:

- BOUND turntable
- 45 RPM Adapter
- AC Adapter
- 3.5mm stereo cable

Table of Contents

Getting Started

| | |
|-----------------------|---|
| Control Locators..... | 4 |
| Unpacking..... | 5 |
| Power Souce..... | 5 |

Operation

| | |
|--------------------------|---|
| Turntable Operation..... | 6 |
| Audio Output..... | 6 |
| Aux In..... | 6 |
| Bluetooth Operation..... | 7 |



General

| | |
|----------------------------|---|
| Troubleshooting Guide..... | 7 |
|----------------------------|---|

Control Locators

Unit Controls

  - 1 45 RPM Adapter
- 2 Tone Arm
- 3 Hold Down Clip
- 4 Auto Stop Control Switch
- 5 Speed Control Switch
- 6 Tone Arm Rest
- 7 Speaker
- 8 Bluetooth Switch
- 9 ON/OFF-Volume Control Knob
- 10 Headphone Jack
- 11 Aux In Jack
- 12 Line Out Jack
- 13 DC Jack
- 14 AC Adapter

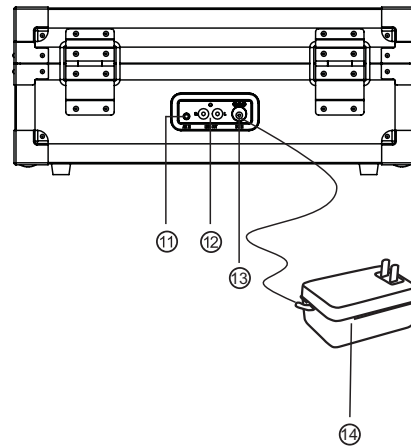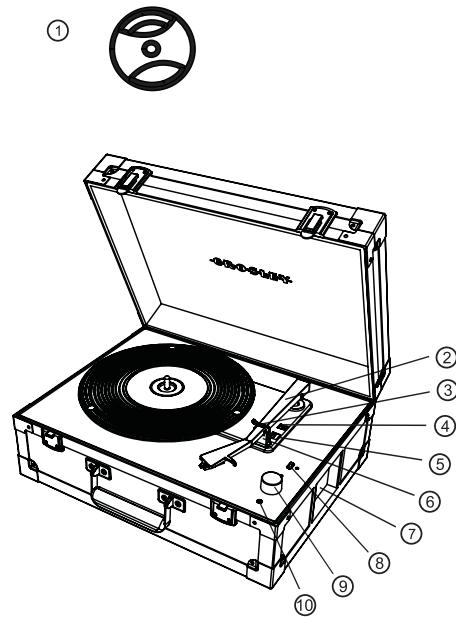


Getting Started

Unpacking


- 1 Remove packing materials from the unit.
Note: Save all packing materials.
- 2 Remove AC ADAPTER(14) from the giftbox.
- 3 Remove tie from AC ADAPTER(14).
- 4 Set the unit on its end, open the lid of the unit.



 - 5 Remove black tie-warp from the bottom of the TONE ARM(2).
- 6 Remove white protective needle cover by gently pulling towards the front of the unit.

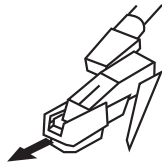

 - 7 Release tone arm HOLD DOWN CLIP(3) by gently pushing to the right. This will unlock TONE ARM(2) from its arm rest. Re-lock the HOLD DOWN CLIP(3) when moving the unit to another location.

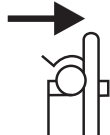


Power Source

- 1 Untie the wire on the AC ADAPTER(14).
- 2 Plug the AC ADAPTER(14) into appropriate wall outlet.
- 3 Plug the small end of the adapter into the DC JACK(13).

Headphone Jack Operation

- 1 Connect headphone to the HEADPHONE JACK(10).
- 2 Adjust volume to the desired listening level.

 NOTE: When using headphone, the sound from the unit's speakers will be cut off.

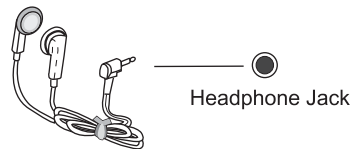

NOTE: Headphone is not included

Operation

Turntable Operation

- 1 Set the SPEED CONTROL SWITCH(5) to the correct speed (33 $\frac{1}{3}$, 45 or 78rpm).
- 2 Place the record on the turntable.
- 3 Move the TONE ARM(2) to the desired starting point on the record. The record will start playing.
- 4 Turn the VOLUME KNOB(9) to adjust the volume to the desired level.

Accessory: ADAPTER FOR 45 RPM

This adaptor allows you to play 45 RPM records.



 
- 1 Place the 45 RPM ADAPTER(1) over the spindle.
- 2 Gently place your 45 RPM record onto the turntable.
- 3 Follow the steps under turntable operation to play your record.

Audio Output

- 1 You can play the audio from the unit into your home stereo, television or other stereo sources by using the Audio Output feature.
- 2 To make this connection, you need a standard RCA cable (not included). Plug the red and white connectors on one end of the cable into the red and white LINE OUT JACK(12) on the back of the unit. Plug other end of the cable into the Aux input jack of your selected component.
- 3 Operate the unit as usual, you can hear the sound coming from the external stereo source.

NOTE: you can still listen to your unit when using

Audio Output

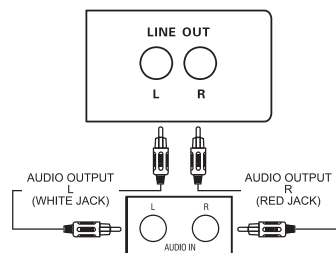


AUX IN

- 1 Plug one end of the provided 3.5mm stereo cable into the AUX IN JACK(11).
- 2 Plug the other end of the stereo cable into the output jack of your desired external music device.
- 3 Check the volume level of your external device.
- 4 Refer to the user manual for correct operations of the external device to play music.

General

Bluetooth Operation

- 1 Set the Bluetooth SWITCH(8) to Bluetooth mode 
- 2 You will hear an activation tone from the unit.
- 3 Turn on the Bluetooth feature of your music device, search for Crosley CR 251A and pair.
- 4 Once your device is successfully paired with the unit, you will hear a confirmation tone from the unit.
- 5 Play and stream music from your device to the unit.

Troubleshooting

The unit does not operate.

- 1 The AC Power cord is not connected. Make sure it is connected to an AC outlet at the back of the unit.

No sound is coming from the unit.

- 1 The white protective needle cover was not removed.
- 2 Turn up the volume.
- 3 Make sure the AUX IN JACK is not plugged with a stereo cable.

Tone arm will not move.

- 1 Black tie wrap was not from underneath tone arm.
- 2 Tone arm hold down clip was not released.

ENGLISH

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

--Reorient or relocate the receiving antenna.

--Increase the separation between the equipment and receiver.

--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

--Consult the dealer or an experienced radio/ TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, Human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.

CE2200