

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION:
CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.


NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

Instruction Sheet

BATTERY OPERATED

Replace with 4XAA and 2XAA size batteries. Alkaline batteries recommended. Phillips/cross head screwdriver(not included) needed to replace batteries.

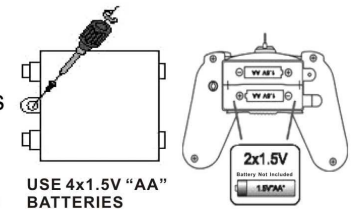

! CAUTION:

- 1.Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions.
- 2.Do not mix old batteries and new batteries or alkaline,standard (carbon zinc) or rechargeable (nickel-cadmium) batteries.
- 3.Always remove weak or dead batteries from the product.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference. Batteries should be replaced by an adult

! CAUTION:

- 1.Always followthe instructions carefully.Use only batteries specified and be sure to insert item correctly by matching the + and • polarity markings.
- 2.Donot mix old batteries and new batteries or standard(carbon • zinc) with alkaline batteries.
- 3.Remove exhausted or dead batteries from the product.
- 4.Remove batteries if product is not to be played with for a long time.
- 5.Do not short • circuit the supply terminals.
- 6.Should this product cause,or be affected by,local electrical interference,move ti away from other electrical e quipment,Reset(switching off and back on again or removing and re • inserting batteries)if necessary.
- 7.RECHARGEABLE BATTERIES:Do not mix these with any other types of batteries.Always remove from the product before recharging.Recharge batteries under adult supervision.DO NOT RECHARGE OTHER TYPES OF BATTE RIES.