



Pursue Your Dreams

Model: Vox

Trade Mark: DREAMWAVE

Thank you for purchasing Vox BLUETOOTH SPEAKER!

Vox built in Bluetooth V4.0 with 20watts output. The compact size easy to carry out and enjoy the music from smart phone everywhere. Hope you will like it!!

www.godreamwave.com

Product Introduction



- 1.Standby mode
2.Charge/Play/Pause
3.Volume-
4.Volume+
5.Line In
6.USB TV recharge
7.DC input 1.5V



\*Enjoy music playback for up to 20 hours at 50% of max volume output. Use of the power bank function will decrease playback time. Dreamwave will not ensure compatibility with third party device or charging cables. Due to continuous product development, specifications may be subject to change without prior notification.

Installation

- 1. Press STANDBY button to switch the unit on and the standby indicator will light up.
2. Insert audio cable into LINE IN and the device will switch to LINE IN mode automatically.
3. When you have finished listening, press the STANDBY button on the front panel to turn it off. The power indicator will switch off and the machine will go into standby mode.
4. Bluetooth instruction guide
a. When the product is in Bluetooth mode, it will automatically pair with the last paired device and the LED will blink twice per second. Once it is paired the LED will blink once every two seconds.
b. When a device does not pair within 20 seconds, press the PLAY/PAUSE button for three seconds. The LED will blink twice per second and it will start to search for device. Once the device name Vox is selected for pairing a password prompt will be displayed. To connect as in password "0000". The LED will blink once every two seconds once the connection is successful.
c. To disconnect a paired device, press PLAY/PAUSE button for three seconds. Note that disconnection works within a distance of 10 meters.
5. Hands free profile
After the mobile phone is paired to the device, press the PLAY/PAUSE button to receive incoming calls. Stay within 20-30 cm of the device for better communication. Press PLAY/PAUSE again to end the call. To decline an incoming call, press the PLAY/PAUSE button for seconds. Press twice to redial the last call.

6. Bluetooth indicator status:

- a. When reconnecting to the last paired device, the LED will blink twice per second.
b. Once the device is successfully paired, the LED will blink once every two seconds.
c. When searching for a device, the LED will blink once every second.

7. Failure problems:

a. When there is a failure while searching for devices, turn the power off and then on again. Wait 20 seconds until the LED starts to blink once every second and the product will start to search for device again.
b. When you are not able to pair a new device, turn off the last paired device in order to pair the new device.


8. Attention: When the machine is in Bluetooth mode and a Bluetooth device is disconnected or powered off, ensure that you wait for more than 30 seconds before trying to reconnect.

9. Insert the power jack into the DC input to charge the machine. It takes approximately 6 hours to fully charge the machine and it can be charged while playing music. While charging the power indicator will blink and it will stop blinking when charging is complete.

NOTE:

- The original adaptor must be used to charge the product as other adaptors will damage the device.
a. Most branded Bluetooth devices that have previously been paired with this Bluetooth speaker will automatically re-connect. If your mobile phone does not automatically re-connect then you must connect manually.

- b. When most branded Bluetooth devices are connected, the Bluetooth device can control the play/pause/stop/skip/next song functions.
c. The device supports Hands-Free Profile with support for HFP, the device can control a paired mobile phone in order to make and receive hands-free voice calls.
d. Smart saving power features: This device has micro-controllers for smart power saving. When the device detects no input signal for 5 minutes, it will enter into standby mode in order to save power.

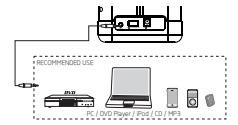

NOTE:

Insert the plugs fully into the jacks. Loose connections may produce a humming sound or other noise interference.

Connection Instructions:


- 1. Insert 3.5 mm signal audio input jack.
2. Insert the mini USB cable from the machine into the device's USB jack to charge. Note: Battery performance varies with the content played and loudness at which it is played. In typical usage, the speaker's battery lasts up to four hours.

Note:

\*If the device is not connected to the Bluetooth speaker, please shut down and several seconds after the reset and connect with the Bluetooth speaker. The speaker automatically shut down after 30 minutes when no device to connect the Bluetooth speaker or no music playing.

What's in the box

- Vox X 1
- User guide X 1
- 3.5mm AUX cable X 1
- AC adapter X 1
- Charge cable X 1

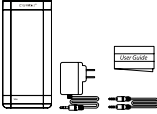

Technical Information

- Power: 20w
V4.0, A2DP, AVCP
Rechargeable Lithium battery (3000mAh), up to 18hours play time at about 2/3 of full volume, 7 hours at max volume, full bass status.
NET Weight: 1.9 kg

Trouble shooting

- Apply to All Dreamwave Bluetooth speaker
- The trouble shooting steps in this article apply if audio is intermittent, crackling or distorted when streaming via Bluetooth.
1. Try playing other audio files. Ensure that audio can play fine from the same audio device when using a headphones.
2. If Step 1 is not the case, try listening to audio by connecting the speaker to the Bluetooth device using the AUX-in cable. This will isolate if it's a Bluetooth connection issue or not. Remember to disconnect per the Bluetooth connection first.
3. If the issue only happens when connecting via Bluetooth, do the following:
a. Make sure what you are connecting is this speaker (select "Vox" within the Bluetooth list on your device)
b. Make sure the volume is not in the minimum
c. Adjust the distance between the speaker and the Bluetooth device.
d. Reset the speaker to its factory default settings.
e. Clear the current pairing entry from your Bluetooth device.
f. To isolate, close other devices Bluetooth.
g. Try re-pairing the speaker and the Bluetooth device.
4. If the issue happens when connecting either on Bluetooth or AUX-in, please contact Dreamwave Customer Support via email.

FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be located or operating in conjunction with any other antenna or transmitter.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

- CAUTION: This symbol indicates that there are important operation & maintenance instructions in the literature accompanying this unit.
RISK OF ELECTRIC SHOCK: DO NOT OPEN: This symbol indicates that there are important operation & maintenance instructions in the literature accompanying this unit.
To reduce the risk of fire or electrical shock, do not expose this product to rain or moisture. The product must not be exposed to dripping and splashing and no object filled with liquids such as a vase of flowers should be placed on the product.
Change or modification not expressly approved by the manufacturer could void the user's authority to operate this device.
To prevent electric shock, match wide blade of plug to wide slot, full insert.

FCC ID: 2AC01877-01 CE RoHS