



## MULTIMEDIA SPEAKER SYSTEM

HE-620700



### DEAR CUSTOMER:

Thank you to buy the product!  
Prior to first use, please read the manual carefully.

### Operation explanation:

#### SPECIFICATIONS:

Output Power: 12000W(RMS)  
Drive Units: 4 x 6.5" +8 x 2.5"  
Frequency Response: Satellites: 120Hz - 20KHz  
Subwoofer: 20Hz - 170KHz  
FM : 87.5-108 MHZ  
Separation:  $\geq 40$ dB  
S/N:  $\geq 70$ dB  
Distortion:  $\leq 0.5\%$  (1K,1W)  
Power Supply: ~200V-240V 50Hz-60Hz  
Dimensions: Subwoofer: W215xH820xD341.5(mm)  
Satellite: W215xH820xD341.5(mm)

#### Features:


- Quality 2.0 speaker system with built-in amplifier
- Full audio spectrum performances, ideal for your favourite entertainment from Mp3, Mp4, CD/DVD movies and digital playbacks
- Specially designed woofer cabinet for bass and resolution
- Comes with remote control and 3.5mm stereo connection

#### Package contents:


Subwoofer cabinet ..... 1 pc  
Satellite speakers ..... 2 pcs  
Remote control ..... 1 pc  
User manual ..... 1 pc  
Audio input cord ..... 1 pc  
FM ANT ..... 1 pc  
Warranty card ..... 1 pc

NO.1
 
### Front panel

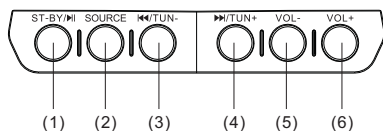

MAIN UNIT (FRONT CONTROLS)

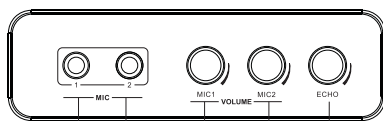 


MAIN UNIT (TONE CONTROLS)

- 1. ST-BY/PLAY/PAUSE:** Long press to St-By ON and short press to St-By OFF in all modes. In USB/BE mode - Short press to Play/Pause the songs. In FM/AUX/DVD mode - Short press to mute the set.
- 2. SOURCE:** Short press to select the all modes (USB/FM/BE/AUX/DVD). USB drive should be inserted to select the mode.
- 3. PREVIOUS/TUN-:** In USB/BE mode - Short press to select the previous song. In FM mode - Short press to adjust the FM down frequencies by manual tuning-. Long press to auto tune the down frequency channels one by one.
- 4. NEXT/TUN+:** In USB/BE mode - Short press to select the next song. In FM mode- Short press to adjust the FM Up frequencies by manual tuning+. Long press to auto tune the up frequency channels one by one.
- 5. VOL-:** Press to decrease the volume level in all modes.
- 6. VOL+:** Press to increase the volume level in all modes.
- 7. MIC1 & MIC2 :** Both MIC Sockets are to be used for wired MIC and MIC will be worked in all modes.

- 8. MIC1 VOLUME KNOB:** If Wired MIC or Cordless MIC is ON then rotate the knob to adjust the MIC Volume level in all modes, This knob will be work with both MIC (wired and cordless).
- 9. MIC2 VOLUME KNOB:** If MIC is ON then rotate the knob to adjust the MIC Volume level in all modes.
- 10. ECHO KNOB:** If MIC is ON then rotate the knob to adjust the MIC Echo effect in all modes.

### How to use the remote control

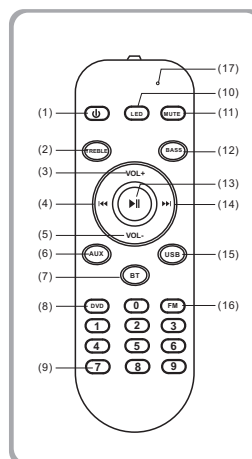 

1. Power
2. TREBLE
3. VOL+
4. MUTE
5. VOL-
6. AUX
7. BT
8. DVD
9. 0~9
10. LED
11. MUTE
12. BASS
13. Play/Pause
14. Stop
15. USB
16. FM
17. Indicator light



NO.2

NO.3

1.  $\psi$ : Power or standby modes.
2. TREBLE: Adjust the treble volume by TREBLE +/- at the range of -6dB+6dB.
3. VOL- : means you can increase volume.
4.  $\ll$ : Play the previous song by pressing " $\ll$ " at USB/BT input mode.  
Choose previous channel by pressing " $\ll$ " at FM input mode.
5. VOL- : To decrease the volume.
6. AUX: AUX input mode selection.
7. BT: Bluetooth reader mode selection. When you enter Bluetooth input mode, LED display right bottom start to flashing (2 seconds) to search the Bluetooth device. Turn on your mobile Bluetooth device and search the device name " BT SPEAKER ", paired them well. When you have successfully paired your mobile to the speaker system, the LED right bottom stop flashing. When start to play your mobile music, the LED flashed every one second. The functions as "PREVIOUS/NEXT", "PLAY/PAUSE", can operate via the front panel. On BT mode, when connecting with mobile, press " $\ll$ " for 3 seconds, bluetooth function can be force-disconnected.
8. DVD: To reset the system. All settings changes to default levels after reast.
9. 0-9 NUMERIC KEYS: Can select songs directly in USB by pressing 0-9 keys.  
i.e.: Can select song number 9 when you press number 9 in USB mode, number 0-9, can be used together. can select channels directly in FM mode by pressing 0-9 keys. i.e.: If you want to listen channel having frequency 94.2MHz. press number 9 4 2 and soon will play 94.2MHz channel.
10. LED: Press "LED" each time to change LED effects, LED1, LED2, LED3, LED4, LED5, LED6, LEDF.
11. MUTE: Turn volume off. Depress again to activate the sound.
12. BASS: To decrease/increase the BASS by pressing.
13.  $\parallel$ : Play/pause in USB/BT mode, In FM mode long press for the full automatic search.
14.  $\gg$ : Play the next song by pressing " $\gg$ " at USB/BT input mode.  
Choose next channel by pressing " $\gg$ " at FM input mode.
15. USB: USB reader mode selection.
16. FM: FM tuner mode selection.
17. Indicator light: If there is a button operation, the red light will flash one time.

NO.4


## Rear panel

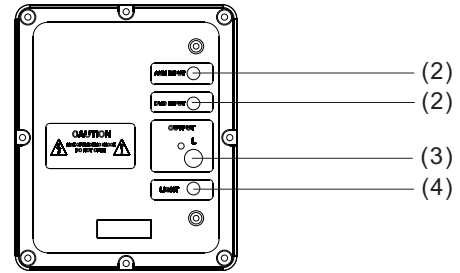  


- |                                                                 |                                        |
|-----------------------------------------------------------------|----------------------------------------|
| 1. ANTENNA                                                      | 3. Output                              |
| 2. Input                                                        | Connect the satellite speakers.        |
| Connect to sound sources such as computer, CD player, Mp3, etc. | 4. LIGHT                               |
|                                                                 | Control shiny light effect of speaker. |

NO.5

## System connection diagram

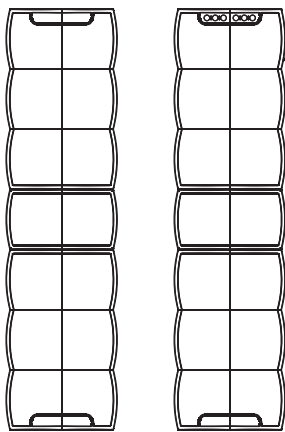 

Ideal listening position and placement

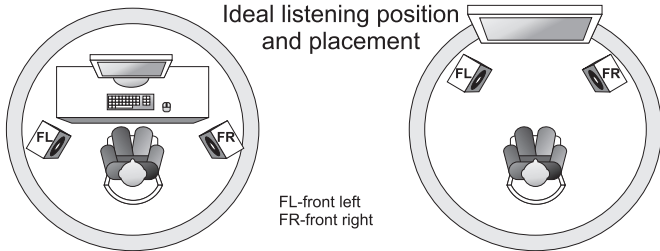 

FL-front left  
FR-front right

- ① Place the 2 speakers at both side of the TV or DVD

NO.6

### FCC Part 15.19 Warning Statement

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

### FCC Part 15.21 Warning Statement

NOTE: THE GRANTEE IS NOT RESPONSIBLE FOR ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

### FCC Part 15.105 Warning Statement

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### RF warning statement:

The device has been evaluated to meet general RF exposure requirement. To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

\*if the remote control cannot function, it is because the battery of remote control has been used up. thank you.



NO.7