

- 5.) When USB is working, press the PREV and NEXT button to choose the previous or the next song; Press VOL- and VOL+ button to adjust the volume.
- 6.) When the USB is removed, it switches to the FM mode automatically.
- 7.) After stop using the unit, turn off the power switch, unplug the power cord.

Bluetooth Connection

Select BT mode by pressing "Mode" key, search for available BT in your device, Find "Bluetooth Speaker" and connect.

FEATURES

- Analog audio input.
- Support USB music player in Mp3 file format
- Bluetooth connect with any available devices.
- Built in 3 channel power amplifier.
- Compatible with MP3, MP4, PC, DVD, TV etc.


SPECIFICATIONS

Output Power	: 18W + 10W x 2
Frequency response	: 40Hz - 20KHz
Impedance	: Subwoofer 4Ohm+ Satellite 8Ohm
Signal to Noise ratio	: ≥80dB
Separation	: ≥45dB
Subwoofer drive	: 4"
Satellite speaker drive	: 2**2
Power	: AC110V 60Hz

4

“ ” 折叠线

SUPER BASS 2.1CH MULTIMEDIA SPEAKER

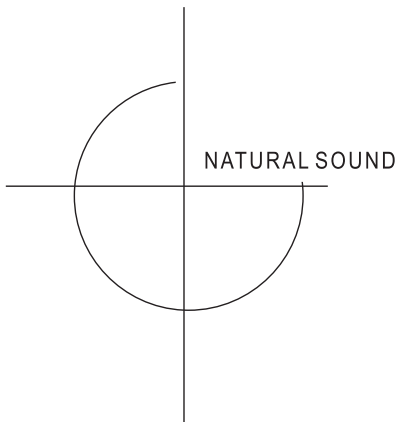

Warning:
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation, changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
--- Reorient or relocate the receiving antenna.
--- Increase the separation between the equipment and receiver.
--- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
--- Consult the dealer or an experienced radio/TV technician for help.

“ ” 编辑范围线不用印刷

2.1 CH COMPUTER MULTIMEDIA SPEAKER

SP0281BT



DEAR CUSTOMER
Congratulations on your purchase!
Please read this manual careful and keep it for future reference

“ ” 折叠线

“ ” 编辑范围线不用印刷

SAFETY PRECAUTION



WARNING:
To prevent fire or shock hard, do not expose the unit to rain or moisture.
To prevent rain and water splash, apparatus should not put such as vase filled with liquid.
The plug as disconnection device, it should be easy to operate

*Note: This product is for indoor use only.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions before using the product.
- 2) Read all warnings carefully.
- 3) Follow all instructions carefully.
- 4) Do not use this apparatus near water.
- 5) Clean only with dry cloth.
- 6) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 7) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 8) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet consult an electrician for replacement of the obsolete outlet.
- 9) Protect the power cord from being waled on or pinched particularly at plugs convenience receptacles, and the point where they exit from the apparatus.
- 10) Only use attachments/accessories specified by the manufacturer.
- 11) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.




- 12) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 13) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

1

PACKING LIST

- | | |
|-----------------------|-----------|
| 1. Subwoofer | : 1 unit |
| 2. Satellite Speakers | : 2 units |
| 3. Audio Cable | : 1 unit |
| 4. User Manual | : 1 unit |
| 5. Wire Control | : 1 unit |


DESCRIPTION OF THE WIRED CONTROL

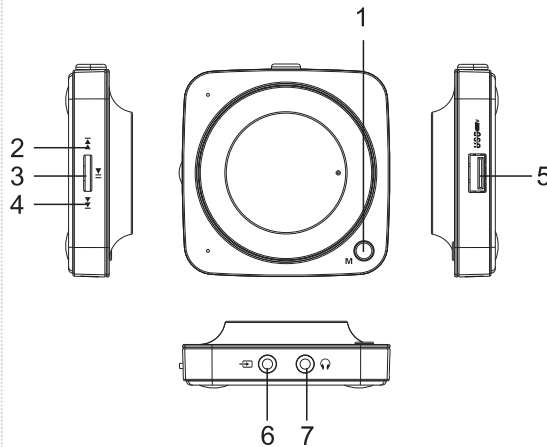

1. Mode
2. Previous
3. Play/pause
4. Next
5. USB input
6. Audio output
7. Headphone

2

SUBWOOFER REAR SIDE DESCRIPTION

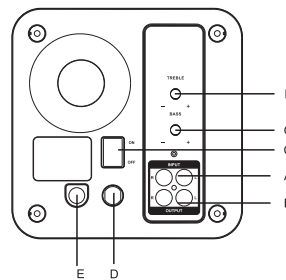

- A. STEREO INPUT
RCA Connectors to take input from external audio source
- B. STEREO OUTPUT
Front Left & Front Right
- C. POWER ON/OFF switch
- D. POWER INPUT
AC110V 60Hz
- E. LINE CONTROL
- F. TREBLE
- G. BASS

UNIT OPERATION

- 1.) First plug the cable of the satellite into the output jack on the rear panel of the woofer, one end of the audio card into the input jack on the rear panel, the other end into the output jack of the computer or any external audio source, the power cord into the power plug socket. Then switch on the unit, the blue indicator of wire controller lights up, the unit starts to play and the default mode is AUX mode, if USB slots have no memory connected.
- 2.) Rotating the VOLUME knob to adjust the volume; rotating the TREBLE knob to adjust the treble; rotating the BASS knob to adjust the bass;
- 3.) When inserted a USB, it will play from the device last inserted;
- 4.) When USB is working, press the PLAY/PAUSE button to pause the music, press the PLAY/PAUSE button again to resume music.

3