


R/C WATCH MANUAL

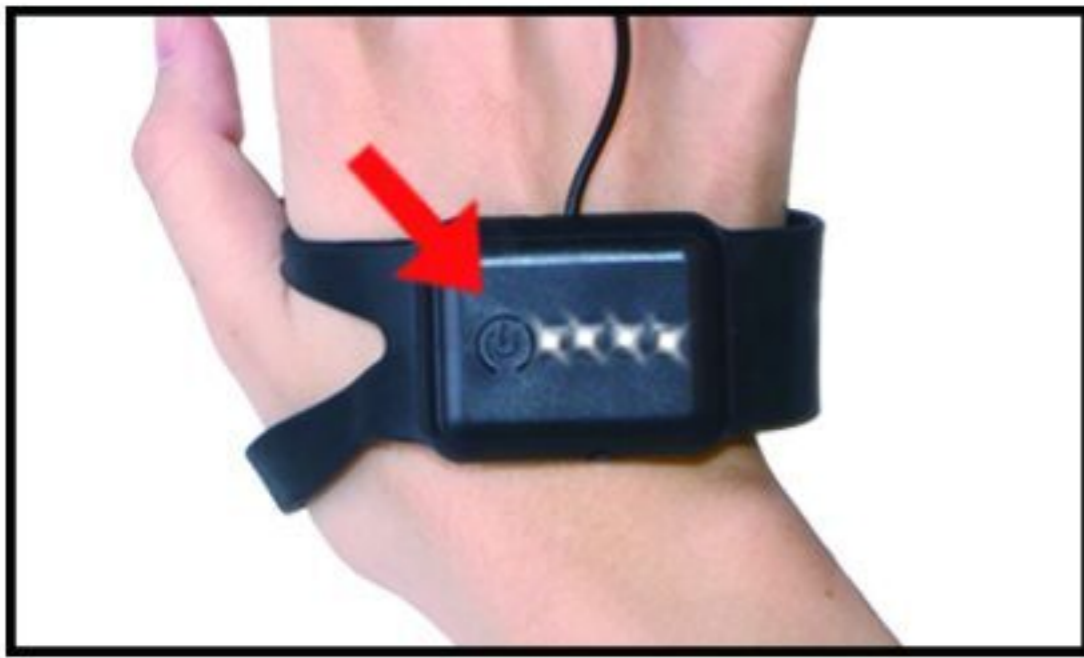

1: BOOT

Long press 2S switch machine, switch machine when 3 LED flash 3 times quickly at the same time.

2: After booting.

A: When there is no upper code and zero, the red light on the far left and the third white light flash slowly, and the middle blue light is always on.

B: The leftmost red light will stay on after the code up and reset, and it will be mode 1 by default.



C: Click the finger button the second blue light is always on, switch to mode 2; Click the finger button again to switch to mode 1 and cycle in turn.

D: Double click the finger button on the third white light is always on, switch to mode 3.

E: Click the power key to pause the operation. The left red light flashes quickly. Click the power key again to resume the operation.

F: Press and hold the fingertip key to enter the auto demo mode, and release to release the auto demo.

G: When charging, the LED on the far right is always on and off when fully charged.

A: Mode 1: Did not press the fingertip button



Press the forward key

—Car advance

Press the back key

—Car astern

Press the left key

—Car left cross

Press the right key

—Car right cross

Press the front left key

—Car is leaning to the left

Press the front right key

—Car is leaning to the right

Press the left rear key

—Car is lurching to the left

Press the right rear key

—Car is lurching to the right



Press the up and down key ---
Car deformation

(Note: This operation is different depending on the product configuration. They are: lighting control / lifting adjustment / torsional deformation)

B: Mode 2: Click on the fingertip button



Press the forward key —Car advance
Press the back key —Car astern



Press the left key ---
Left rotation of car (volume -)
Press the right key ---
Right rotation of car (volume +)



Press the front left key —Car is going ahead and turning left
Press the front right key —Car is going ahead and turning right
Press the left rear key —Car is backing and turning left
Press the right rear key —Car is backing and turning right

C: Mode 3: Double click on the fingertip button



Press the up and down key ---
Car deformation

(Note: This operation is different depending on the product configuration. They are: lighting control / lifting adjustment / torsional deformation)



Press the forward key —Switch to music MP3
Press the back key —Switch to music MP3



Press the left key ---VOL DOWN
Press the right key ---VOL UP

Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.