


Model: Check for modifications to this kit and, if approved by the user, be responsible for completing and the user's liability for operation of the equipment.

AIRCRAFT MODELS

INSTRUCTION MANUAL

2.4GHz

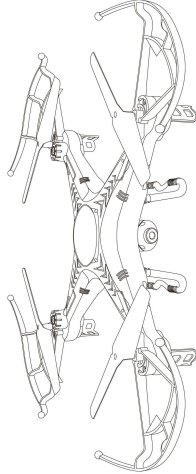

Contents	
1	INTRODUCTION
1-2	SAFETY PRECAUTIONS
3	GENERAL PACKAGE CONTAINS
4	ASSEMBLY AND INSTALLATION
5	TRANSMITTER AND RECEIVER
6	CONTROLS
7	FLIGHT ADJUSTMENT AND SETTING
8	FLIGHT PRACTICE
9	TRAVELING AND STORAGE
10	TROUBLESHOOTING
11	APPENDIX

Thank you for choosing our RC product. In case there are any critical damage to the product, please read through this instruction before you fly this product. Thank you again, and hope you have an amazing flying experience.



ABLE TO ADD CAMERA

3. FLIGHT ADJUSTMENT AND SETTING

Please practice simulation flight before actual flying.

Please refer to the below pictures shown until you get used to using the remote controller on the open space, and the back of the aircraft aligns the motor.

- Exercises each operate the remote control joystick (each operation mode of forward, backward, left, right, up, down, left, right, up, down, left, right, up, down).
- Before the elevator / rudder post and left / right operation, do not mind to turn, right and left, and move naturally with the motor control and control.

4. AIR CRAFT INSTRUCTION

Adjustment of each trim

Slowly raise the throttle stick and just as the helicopter lift-off the ground, you can use the trim to correct the action if the helicopter leans in a different direction.

- Adjustment of rudder trim... When leans right, adjust the trim to left side. When leans left, adjust the trim to right side.
- Adjustment of elevator trim... Just before the helicopter lift-off, the nose lean forward/backward... When leans backward, adjust the trim up. When leans forward, adjust the trim down.
- Adjustment of helicopter trim... Just before the helicopter lift-off, the body lean left/right... When leans right, adjust the trim to left side. When leans left, adjust the trim to right side.

5. TRANSMITTER BATTERY INSTALLATION

Remove the battery cover from the transmitter.

Insert the battery into the transmitter.

Close the battery cover.

1. IMPORTANT NOTES

- This product is NOT A TOY. If any cause damage by use it wrongly. Please use this product follow by this instruction. And please use the product follow by this instruction and please to read disassembly the product. Otherwise, manufacturer shall not be responsible to any damage or injury occurred during the operation or as a result of RC aircraft models.

2. SAFETY NOTES

- CAUTION:** Fly only in safe areas away from other people. Do not operate RC aircraft within the vicinity of crowds or in any other place where people are gathered. Please be aware of the surrounding environment and avoid any injury occurred during the operation or as a result of RC aircraft models.
- WARNING:** Special design for indoor & outdoor, please keep it away from obstacle. This product is suitable for indoor & outdoor (the wind grade should be no more than 4). Please choose a place without obstacle, and keep distance from crowd and pets, don't play it near to be damaged by collision landing, entanglement and lead to a fire, electric shock and cause losses of lives and property.
- NOTE:** Obtain the assistance of an experienced pilot. The products are suitable for more than 14 years old age, at the beginning it will have some certain difficulty in learning, suggestion guidance by experienced when playing.

3. GENERAL PACKAGE CONTAINS

- Li-Polymer battery
- Camera
- Charger
- Blades x 4
- Motor
- Receiver board
- Light strip
- 4 Axis base
- Protective frame

5. REMOTE CONTROLLER INSTRUCTION

POWER INDICATOR

FLIPPING BUTTON

FORWARD AND BACKWARD FINE-TUNING

LEFT TURN/RIGHT TURN

LEFT AND RIGHT FLY FINE-TUNING

PHOTO

VIDEO

POWER SWITCH

6. TRANSMITTER BATTERY INSTALLATION

Open the battery cover on the back of the controller.

Insert the battery into the transmitter.

Close the battery cover.

7. CHARGING BATTERIES

Use the charger to the vehicle battery charging.

Charge the battery.

Li-polymer Battery

8. BINDING OF RADIO TRANSMITTER AND RECEIVER

Install the battery into the air craft as the picture shown. Then place the aircraft on where it fits. Connect the battery with the air craft.

Lower the throttle stick to the lowest position then turn on the remote controller. Wait until the indicator stops flashing. Then it's ready to fly.

Please disconnect the battery and the air craft, when finish using.

Please always disconnect the battery in order to protect the battery and to have a longer battery life.

3

10. TROUBLE SHOOTING DURING FLIGHT

Situation	Cause	Way to deal
Receiver status LED blinks 4 seconds after flight vehicle battery inserted. No response to battery input.	1. Power to transmitter and receiver.	Repeat the power up initializing process.
No response after battery is connected to flight vehicle.	2. Check transmitter and receiver terminals.	1. Turn on transmitter and ensure flight vehicle battery is inserted. 2. Use fully charged batteries. 3. Re-charge the battery and ensure connection between battery contacts.
Motor not respond to throttle stick control LED frames.	Flight vehicle battery depleted.	Fully charge the battery, or replace with a fully charged battery.
Main rotor spins but unable to take off.	1. Deformed main blades. 2. Flight vehicle battery depleted.	1. Replace main blades with fully charged battery. 2. Charge battery.
Strong vibration of flight vehicle.	1. Deformed main blades.	1. Replace main blades.
Tail stall off trim after take off. The aircraft cannot speed during left/right procedure.	1. Damaged tail rotors. 2. Damaged tail drive motor.	1. Replace main blades. 2. Replace the main motor.
Forward after trim adjustment during tower.	1. Gyroscope midpoint not forward.	1. The boom will lift. Refine the horizontal rotor point, repeat.
Flight vehicle still wanders after trim adjustment during tower.	1. Motor off. 2. Cone loose.	1. Replace the motor. 2. Installed light cone.

11. PARTS LIST

NO	Name	Quantity
1	4 Axis cover	1
2	4 Axis base	1
3	Receiver board	1
4	Li-polymer Battery	1
5	Motor	4
6	A Blade	2
7	B Blade	2
8	Light strip	4
9	Protective frame	1

2

3

The contents of the packaging of materials, specifications or parts of this manual for information. The Company will not be liable for printing material transaction is responsible for and can not take the initiative to inform consumers, any updates or transactions, mainly in the company's website.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference from authorized radio communication systems.

FCC ECE

7