

# R/C WATCH MANUAL



## 1: BOOT

Long press 2S switch machine, switch machine when 3 LED flash 3 times quickly at the same time.

## 2: After booting.

A: When there is no upper code and zero, the red light on the far left and the third white light flash slowly, and the middle blue light is always on.

B: The leftmost red light will stay on after the code up and reset, and it will be mode 1 by default.



C: Click the finger button the second blue light is always on, switch to mode 2;

Click the finger button again to switch to mode 1 and cycle in turn.

D: Double click the finger button on the third white light is always on, switch to mode 3.

E: Click the power key to pause the operation. The left red light flashes quickly.

Click the power key again to resume the operation.

F: Press and hold the fingertip key to enter the auto demo mode, and release to release the auto demo.

G: When charging, the LED on the far right is always on and off when fully charged.

## A: Mode 1: Did not press the fingertip button

Press the forward key  
—Car advance  
Press the back key  
—Car astern  
Press the left key  
—Car left cross  
Press the right key  
—Car right cross



Press the front left key  
—Car is leaning to the left  
Press the front right key  
—Car is leaning to the right  
Press the left rear key  
—Car is lurching to the left  
Press the right rear key  
—Car is lurching to the right



Press the up and down key —  
Car deformation

(Note: This operation is different depending on the product configuration. They are lighting control / filling adjustment / torsional deformation)

## B: Mode 2: Click on the fingertip button



Press the forward key —Car advance  
Press the back key —Car astern



Press the left key —  
Left rotation of car (volume -)  
Press the right key —  
Right rotation of car (volume +)



Press the front left key —Car is going ahead and turning left  
Press the front right key —Car is going ahead and turning right  
Press the left rear key —Car is backing and turning left  
Press the right rear key —Car is backing and turning right

## C: Mode 3: Double click on the fingertip button



Press the up and down key —  
Car deformation

(Note: This operation is different depending on the product configuration. They are lighting control / filling adjustment / torsional deformation)



Press the forward key —Switch to music MP3  
Press the back key —Switch to music MP3



Press the left key —VOL DOWN  
Press the right key —VOL UP