

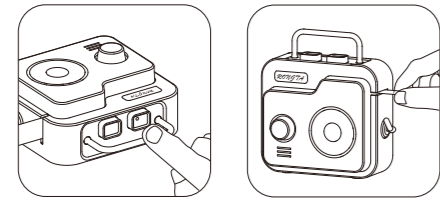
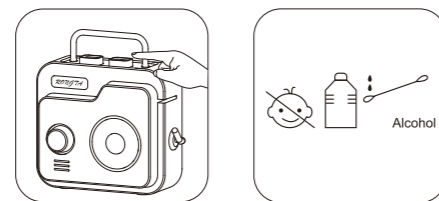
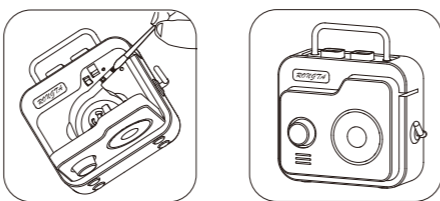
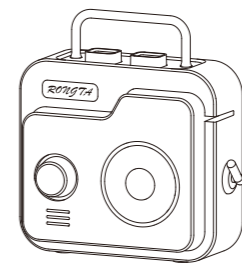
料号:

R1-快安指南(容大 英文)-V1.0版本

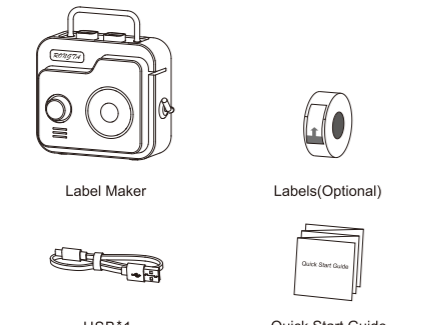
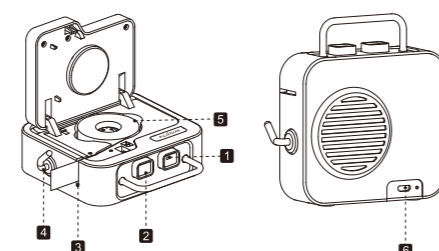
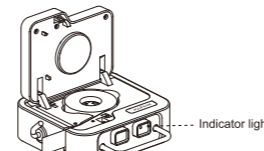
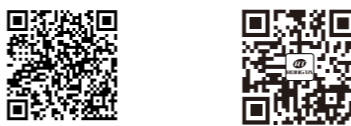
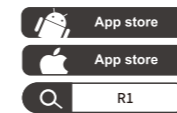
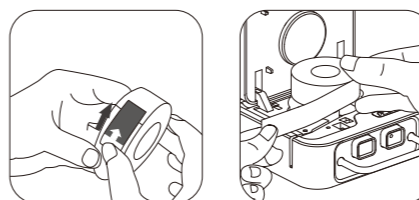
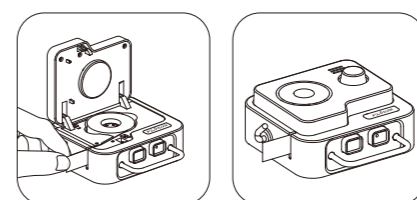
单页尺寸: 70x85mm 整体平面尺寸:490x85mm

材质: 80克双胶纸 工艺: 正反面单黑印刷(6折页)

注: 蓝色线条不印刷, 仅示意尺寸

<p>5 Click power for label location identification 6 The label is out of the paper, and the positioning is completed</p>  <p>Warning When installing or replacing the label roll for the first time, label position identification is required (step 5). If the label position identification is not performed, there will be a lack of first printing and no poor centering.</p> <p>7</p>	<p>Clean printer head</p> <p>1 Turn off the printer, press the right button then open the front cover 2 Use a cotton swab dipped in a small amount of alcohol, clean printer head</p>  <p>Battery Warning</p> <ul style="list-style-type: none"> Do not dismantle, crush or throw into fire. Do not continue to use if severe swelling occurs. Do not place in a high temperature environment, do not use the battery after immersion in water. There is a danger of explosion if the battery is replaced with the wrong type, always dispose of the used battery according to the instructions. <p>8</p>	<p>8 Wipe the print head gently 9 Wait for the alcohol to evaporate for 30 seconds and then turn it on, double-click the power button to print the self-test page</p>  <p>Warning Do not scratch the print head with hard objects, otherwise the print head will be damaged and the printing effect cannot be guaranteed</p> <p>9</p>	<p>Product Specifications Device Parameters</p> <table border="1"> <tr><td>Model</td><td>RONGTA R1</td></tr> <tr><td>Printing method</td><td>Direct thermal</td></tr> <tr><td>Printing width</td><td>12mm</td></tr> <tr><td>Support Consumables</td><td>Labels, continuous paper</td></tr> <tr><td>Print density</td><td>light, standard, dark</td></tr> <tr><td>Print resolution</td><td>203dpi</td></tr> <tr><td>Print head life</td><td>50KM</td></tr> <tr><td>Communication Interface</td><td>Bluetooth 4.2</td></tr> <tr><td>Product size</td><td>110*112.8*50.5mm</td></tr> <tr><td>Battery</td><td>1800mAh 3.7V</td></tr> <tr><td>Power input</td><td>5V = 1A</td></tr> <tr><td>Power supply</td><td>Lithium battery</td></tr> <tr><td>Supported operating systems</td><td>Android IOS</td></tr> </table> <p>10</p>	Model	RONGTA R1	Printing method	Direct thermal	Printing width	12mm	Support Consumables	Labels, continuous paper	Print density	light, standard, dark	Print resolution	203dpi	Print head life	50KM	Communication Interface	Bluetooth 4.2	Product size	110*112.8*50.5mm	Battery	1800mAh 3.7V	Power input	5V = 1A	Power supply	Lithium battery	Supported operating systems	Android IOS	<p>Troubleshooting</p> <p>Can't print, skip paper, not centered, missing, etc</p> <p>1. Please check that the label paper is correctly placed in the machine? Please make sure that the label paper is put into the machine with the printing side up. If the label paper is incorrectly placed, it cannot be printed.</p> <p>2. Please check whether to press the power button to allow the machine to calibrate and locate the label paper after turning on the machine? After startup, when installing or replacing a label roll for the first time, you need to press the power button to remove a blank label to identify the label position.</p> <p>When printing is unclear</p> <p>1. Please check whether there is foreign matter or paste in the print head? Please use a cotton swab dipped in a small amount of alcohol to gently wipe the dirt on the print head. After wiping, do not turn it on immediately and wait for the alcohol to evaporate and dry. Turn on the power and double-click the power button to view the self-test page (do not scrape the printer head with hard objects, otherwise the thermal film will be permanently damaged and cannot be repaired).</p> <p>2. Please check if the printer has enough power? The green light is flashing, please connect the machine to the charging cable and use it after charging for at least half an hour.</p> <p>Printer can't connect</p> <p>1. Please check that the printer is turned on and the Bluetooth of the mobile phone is enabled.</p> <p>2. Please check if the device is connected in the APP? This product requires device connection in the APP.</p> <p>3. Please check whether the mobile phone is authorized? Due to the requirements of the mobile phone system, Android phone will use your geographical location when connecting, you need to enable GPS and confirm authorization (other mobile phone systems do not need to enable this function).</p> <p>11</p>	<p>QUICK START GUIDE</p>  <p>Mark the small beauty of life keep every moment of small happiness</p> <p>V1.0</p>
Model	RONGTA R1																														
Printing method	Direct thermal																														
Printing width	12mm																														
Support Consumables	Labels, continuous paper																														
Print density	light, standard, dark																														
Print resolution	203dpi																														
Print head life	50KM																														
Communication Interface	Bluetooth 4.2																														
Product size	110*112.8*50.5mm																														
Battery	1800mAh 3.7V																														
Power input	5V = 1A																														
Power supply	Lithium battery																														
Supported operating systems	Android IOS																														

85 mm

<p>Unpacking checklist</p>  <p>Attention If you use a power adapter to charge, you should purchase a power adapter that has been certified by CCC and meets the standard requirements.</p> <p>1</p>	<p>Machine description Outward components</p>  <p>1 Power button 2 Opening key 3 Paper outlet 4 Paper cutting handle 5 Paper Storehouse 6 USB interface</p> <p>2</p>	<p>Machine description Power Indicator</p>  <p>Power button description</p> <table border="1"> <tr><th>Button</th><th>Operate</th><th>Function</th></tr> <tr><td>Power button</td><td>Press and hold for 5 seconds</td><td>ON/OFF</td></tr> <tr><td>Power button</td><td>Press and hold for 3 seconds</td><td>Paper Out (Label Positioning)</td></tr> <tr><td>Power button</td><td>Double click</td><td>Print selftest page</td></tr> </table> <p>Indicator light description</p> <table border="1"> <tr><td>Green light is always on</td><td>Fully charged, normal use</td></tr> <tr><td>Red light flashing</td><td>No paper, the paper compartment cover is not closed</td></tr> <tr><td>Red light is always on</td><td>Charging</td></tr> <tr><td>Green light flashing</td><td>Low battery remind</td></tr> </table> <p>3</p>	Button	Operate	Function	Power button	Press and hold for 5 seconds	ON/OFF	Power button	Press and hold for 3 seconds	Paper Out (Label Positioning)	Power button	Double click	Print selftest page	Green light is always on	Fully charged, normal use	Red light flashing	No paper, the paper compartment cover is not closed	Red light is always on	Charging	Green light flashing	Low battery remind	<p>APP download</p> <p>Method 1: Please use your mobile phone to scan the QR code to download the APP</p>  <p>Follow the official account for more benefits and service support</p> <p>Method 2: Search and download</p>  <p>4</p>	<p>Paper roll installation</p> <p>1 Take out the label paper and tear off the release sticker 2 Open the paper compartment cover and put in the paper roll</p>  <p>3 Please pull out the label paper to 5mm length so that it can be printed normally 4 Close the lid</p>  <p><small>⊙ The illustrations and text descriptions used in this guide may be different from the actual ones, and the actual objects shall prevail</small></p> <p>5</p>	<p>6</p>
Button	Operate	Function																							
Power button	Press and hold for 5 seconds	ON/OFF																							
Power button	Press and hold for 3 seconds	Paper Out (Label Positioning)																							
Power button	Double click	Print selftest page																							
Green light is always on	Fully charged, normal use																								
Red light flashing	No paper, the paper compartment cover is not closed																								
Red light is always on	Charging																								
Green light flashing	Low battery remind																								

85 mm

420 mm

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following

two conditions: (1) This device may not cause harmful interference, and (2) this device

must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital

device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the

user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible

for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.