



Bluetooth®

BICYCLE SPEAKER WITH HEADLIGHT

User Manual

Manual de usuario • Mode d'emploi

Model: Y018



INTRODUCTION

- ≥ Thank you for purchasing this Y018 sporty Bluetooth speaker. We hope you will enjoy it.

Speaker with MP3 playback and LED flashlight, specially designed for your bike, with rechargeable lithium battery. Now wherever you go by bike, you will enjoy the MP3/WMA files from your microSD/SDHC card thanks to its powerful speaker.

Meanwhile, Insert Micro SD before turning on the device, it will search Bluetooth automatically. Please press button M, if you want to listen to the music in Micro Card.

We recommend you to read the following user manual in order to take the most advantage from your product, on a safely way and with the best performance.

CARE AND MAINTENANCE

- ≥ Do not use corrosive or abrasive cleaning products.
- ≥ Keep the device clean and without dust.
- ≥ Do not disassemble the device. Any repair should be done by Soundbts
- ≥ Make sure that your Energy Bike Music Box is off while you are not using it.
- ≥ Recharge your Energy Bike Music Box battery when it has completely run down battery.
- ≥ Do not interrupt the battery recharge process of the Energy Bike Music Box until the device has been recharged

TECHNICAL SPECIFICATIONS


- ≥ Plays MP3/WMA files from microSD/SDHC card with capacity up to 32 GB.
- ≥ 120 lm LED Flashlight integrated.
- ≥ FM radio function with 20 presets.
- ≥ 7 different EQ modes.
- ≥ Volume control.
- ≥ Bluetooth speaker
- ≥ Total output power (RMS): 3W.
- ≥ Frequency response: 20 Hz ~ 20 KHz.
- ≥ S/N ratio: 90 dB.
- ≥ Headphones output 3.5mm.
- ≥ Rechargeable lithium battery through USB.
- ≥ Capacity: 500 mA / 3.7V.
- ≥ Net weight: 87g.

PRODUCT CONTENT

- ≥ Sporty Bluetooth speaker.
- ≥ Mount holder for bicycle.
- ≥ USB 2.0 battery charger cable.
- ≥ User Manual.

PRODUCT OVERVIEW.

1. EQ/CH: Shuffle/Channel.
2. MODE: Bluetooth speaker/Card reader / Radio/Bluetooth
3. Previous/Volume --
4. Next/Volume +.
5. Play/Pause.
6. Flashlight function.
7. MicroSD/SDHC port.
8. On/Off.
9. Headphones output.
10. Recharge battery port.
11. LED: Mode indication lights.
12. LED Flashlight.
13. Mount holder for bicycle.

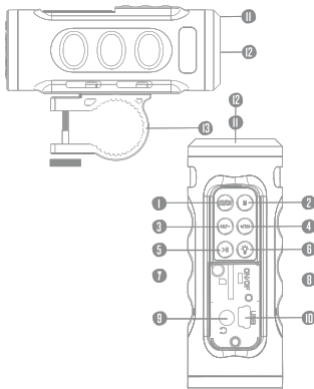

RECHARGE BATTERY

- ≥ It's very recommendable to recharge completely the Y018 sporty speaker battery before the first use.

In order to recharge the battery, switch off the Y018 sporty bluetooth speaker device and connect the mini USB connector of the USB cable into the battery power plug (10), then connect the other end of the USB power cable into a free USB port of your computer or other recharge device by USB.

In the process of charging, the red light will be bright. Push ON/OFF button to OFF, only red light is on. The light is off, when the battery capacity is full. the light Will automatically shut down.

Switch on the Y018 sporty bluetooth speaker, using the On/Off button (8), insert your microSD/SDHC card and start enjoying it. In case you want to listen to the Radio& Search Bluetooth nearby, press the MODE button (3), after turning on the Y018 sporty bluetooth speaker.

When the battery has been run down the red LED will blink repeatedly. From that moment, it is recommended to recharge the battery.

IMPORTANT: In order to keep the battery in good conditions, it is highly recommended not to recharge the battery until it is completely empty. By the same way, do not interrupt the charging process until the battery is completely charged, with the red indicator light switch off.

GENERAL FUNCTIONS

≥Y018 sporty bluetooth speaker when playing Bluetooth or music in Micro SD, Bluetooth is on. And plays MP3/WMA files from microSD/SDHC memory cards. You can also listen to the radio & going to search Bluetooth nearby.

When switching on the Y018 sporty bluetooth speaker with the microSD/SDHC inserted, the device will start playing MP3/WMA files automatically. Y018 sporty bluetooth speaker plays the card readers first, by default. Press the MODE button (1) it will search Bluetooth automatically. Press the MODE(2) you can listen to the radio.

During the radio FM function, the LED (11) will be switched on. When playing MP3/WMA files through Micro SD/MMC cards, LED (11) will blink indicating the MP3/WMA reading mode.

Press MODE button (2) in order to select different functions. This will allow choosing between Bluetooth, Radio FM and microSD/SDHC functions.

To turn up or down the Volume, keep the Previous/Volume - (3) or Next/Volume + (4) buttons for few seconds. The LED (11) will blink to note that the device is adjusting the volume, when modify it.

RADIO FM FUNCTION

- ≥ Use the Radio function, by pressing the MODE button (2). Before using radio you have to search radio stations first. The device will save them in memory to select between them later. It is not necessary to repeat this search unless change of location or modification of the radio station signal.

Search radio stations by pressing the EQ button (2) during 3 seconds. The device will make a radio stations search and will save up to 20 radio stations found in the device internal memory. This process may take a few minutes.

In order to select between different stations, you have just to press Prev—or Prev+ (1). Stations will appear at the same order as they were saved.

IMPORTANT NOTE: If you want to improve the reception quality of the radio stations, connect the 3.5mm headphones, as a receiving antenna.

MP3 FUNCTION WITH EXTERNAL MEMORIES

- ≥ In order to play MP3/WMA files, insert an external microSD/SDHC memory card in the indicated slot (7).

If you switch off the Y018 sporty bluetooth speaker or remove the microSD/SDHC, the player will start playing the first song when you insert again the same

external memory, or switch on the device. The first song will be the first one you save in the microSD/SDHC memory card.

Change the track by using the Next/Volume + (4) and Previous/Volume - (3) buttons. This will go directly to next track, press and keep MODE (3) button pressed, during 2 seconds.

To change the equalization mode, press the EQ/CH button (1). Y018 sporty bluetooth speaker has in total 7 different equalizations: Natural, Rock, Pop, Classic, Soft, Jazz & Deep Bass.

BLUETOOTH

≥ If you want to enjoy Y018 sporty bluetooth speaker with Bluetooth, Push on/off button from “off” to “on”, and it is going to search Bluetooth nearby.

Music in Micro SD is priority, if Micro SD is inserted into the device when playing music with Bluetooth.

PLAYBACK ORDER

≥ Both folders and tracks contained in the memory card are read by writing chronological order.

For example: if we copy two folders of music called ‘A’ and ‘B’, and we copy first folder ‘B’ and later folder ‘A’, the first folder played will be the first song of ‘B’ folder.

Naturally, if we copy a block of the folder in the memory card, playback order will be alphabetically.

Exception: if songs contained in a folder are copied one by one to the memory card, playback order will be chronologically. Then, the first song that has been copied in the memory card will be first song played.

HEADPHONES/ LINE-OUT FUNCTION

≥ Listen to the Y018 sporty bluetooth speaker privately, connect headphone in the 3.5mm output (9) and keep pressing the EQ/CH button

(1) during 2 seconds, the speaker will be disabled. If you want to listen again the speaker, keep pressing the EQ/CH button (1) during 2 seconds again.

If you want to enjoy Y018 sporty bluetooth speaker with an external speaker, connect one side of the audio cable (not included) in the headphones output

(9) and the other side into other speaker input. In order to listen only to the external speaker, keep pressing the EQ/CH button (1) during 2 seconds.

FLASHLIGHT FUNCTION

≥ headphones includes a Flashlight. Press Flashlight button (6), in order to change sequentially from one state to another: light on → light in save mode → intermittent light → light off → light on (again).

FCC Warning

- ≥ This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- ≥ FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.