



Subtune

# Bluetooth Turntable

Model: ITVS-550BT



## Instruction Manual

PLEASE READ THIS INSTRUCTION MANUAL CAREFULLY BEFORE USE AND KEEP IT FOR FUTURE REFERENCE.

CONTENTS	
SAFETY INSTRUCTIONS	2
SPECIFICATIONS	3
TURNABLE LAYOUT	4
TURNABLE OPERATION	5
POWER SUPPLY	5
BASIC OPERATION	5
TURNABLE NEEDLE REPLACEMENT	5
BLUETOOTH OPERATION	6
AUX-IN OPERATION	6
EARPHONE OPERATION	6
FCC STATEMENT	7
CALIFORNIA PROP 65 WARNING	7
WARRANTY	7

1

### SAFETY INSTRUCTIONS

- Read these instructions – All the safety and operating instructions should be read before the product is operated.
- Keep these instructions – The safety and operating instructions should be retained for future reference.
- Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
- Follow all instructions – All operating and use instructions should be followed.
- Do not use this apparatus near water – The appliance should not be used near water or moisture (for example, in a wet basement, near a swimming pool, or near other wet areas).
- Clean only with a dry cloth.
- Do not block any ventilation openings. Keep at least 5 cm around the apparatus for sufficient ventilations. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not obstruct the safety purpose of the subjected or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
- Only use attachment/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or wall-mounted by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/rack combination to avoid injury from tipping.
- Unplug the apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Please keep the unit in a well-ventilated environment.
- Only use attachment/accessories specified or provided by the manufacturer.
- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping and/or objects filled with liquids, such as vases, shall not be placed on apparatus.
- The main plug is used as disconnect device, the disconnected device shall remain readily operable.
- This product is not intended for commercial use, Household Use Only.

2

21.  This equipment is a Class II or double insulated electrical appliance. It has not been designed in such a way that it does not require a safety connection to electrical earth.

22.

Warning: To reduce the risk of fire or electrical shock, do not expose the apparatus to rain or moisture. No naked flame sources such as candles shall be placed on top of the apparatus.

Caution: Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this device. Usage of controls or adjustments or performance of procedures other than those specified herein may result in hazardous exposure.

### SPECIFICATIONS

Power Supply: ..... AC Adaptor: 100-240, 50/60Hz  
 ..... DC-3V 1A

Speaker Impedance: ..... 4ohm, 3W

Max Power Consumption: ..... 6W


Included: ..... Turntable, Instruction Manual, AC Adaptor

Design and specification are subject to change without notice.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.  
 Other trademarks and trade names are those of their respective owners

3

### TURNABLE LAYOUT

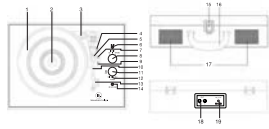

- TURNABLE PLATTER
- TURNABLE SHAF
- 45 RPM ADAPTOR
- LIFT LEVER
- TOUR ARM CLIP
- LINE-IN JACK
- SPEED SELECTION SWITCH
- FUNCTION (BT, LINE-IN, PHONO) KNOB
- AUTO AND MANUAL STOP SELECTION SWITCH
- TOUR ARM
- AUTO ON/OFF AND VOLUME CONTROL KNOB
- POWER/BLUETOOTH LIGHT INDICATOR
- STYLUS CARTRIDGE
- HEADPHONE JACK
- BUCKLE
- HANDLE
- SPEAKERS
- RCA OUTPUT JACK
- POWER ADAPTOR JACK

4

### TURNABLE OPERATION

**POWER SUPPLY**  
 Insert the adaptor plug into the DC IN jack on the rear of the unit, then connect the AC/DC adaptor (EV-18-AC100-240V-50/60Hz) to a AC/DC wall outlet.

**BASIC OPERATION**

- Let the BUCKLE on the front of the turntable and open the lid.
- Power on the unit by turning the VOLUME CONTROL KNOB clockwise. The red LED will light to show that the turntable is turned on. Turn the FUNCTION KNOB to the PHONO position.
- Place a record on the TURNABLE PLATTER and select the desired speed (33 1/3 / 45 / 78) by sliding the SPEED SELECTION SWITCH according to the record.
- NOTE:** When playing a 45 rpm record, use the included 45 RPM ADAPTOR located in the holder near the tone arm.
- Open the TOUR ARM CLIP to release the TONE ARM. Push the LIFT LEVER backwards to raise the arm. Gently move the tone arm to the desired position over the record. The turntable will begin to spin when the arm is moved toward the record. Push the lift lever forward and lower the arm slowly onto the desired position on the record to begin playing.
- Please Note:** The record will begin to spin only when the tone arm is moved over the record (the Auto Stop is turned ON).
- If the AUTO AND MANUAL STOP SELECTION SWITCH is turned ON, the record will stop automatically when finished. If this switch is OFF the record will NOT stop automatically when finished.
- To select the volume level, turn the VOLUME CONTROL KNOB to adjust the volume.

**HOW TO REPLACE THE TURNABLE NEEDLE**  
 Removing the Stylus from the Cartridge

- Place a screwdriver at the tip of the stylus and push downward as shown in direction "A". **WARNING:** when applying force to stylus, too much may damage or break the stylus.
- Remove the stylus by pulling the stylus forward and pushing downward.

Installing the Stylus

- Hold the tip of the stylus and insert the stylus by pressing the stylus in direction "B".
- Push the stylus upward as in direction "C", until the stylus locks into the tip position.



5

### BLUETOOTH OPERATION

An external device with Bluetooth Connectivity can be wirelessly connected to this apparatus using the Bluetooth function.

- Power on the unit by turning the VOLUME CONTROL KNOB clockwise. The red LED will light to show that the turntable is turned on.
- Turn the FUNCTION KNOB to the BT (Bluetooth) position, the blue LED light will begin to flash.
- Turn your external device Bluetooth Setting ON. Wait a moment, then look for the Bluetooth pairing name "Subtune Turntable".
- Select the Bluetooth pairing name, to connect the unit. Once connected, the blue LED light will stop flashing.
- You are now connected to your external device via Bluetooth!
- Rotate the VOLUME CONTROL KNOB to adjust the sound level.

**AUX-IN OPERATION**

An external (auxiliary) audio source (i.e. personal CD/MP3 Player/Mobile phone or computer) can be connected to this apparatus via the LINE-IN JACK.

- Plug a detachable Aux Cable (not provided) into the LINE-IN socket on the function panel of the apparatus.
- Turn the FUNCTION KNOB to the LINE-IN position.
- Plug the other end of the Aux Cable into the Headphone or Line Out socket of your External Source.
- Power on the unit by turning the VOLUME CONTROL KNOB clockwise. The red LED will light to show that the turntable is turned on.
- Rotate the VOLUME CONTROL KNOB to adjust the sound level.

**EARPHONE OPERATION**  
 Plug the earphone jack into the earphone port on the function panel to listen to the record. The sub-woofer will stop playing once the earphones are plugged in.

**NOTE:** For best performance and product maintenance, unplug the turntable when not in use.

6

### FCC STATEMENT

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

1. This device complies with Part 15 of FCC Rules.  
 Operation is subject to the following two conditions:  
 2) This device must accept any interference received, including interference that may cause undesired operation.  
 Note: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**FCC Radiation Exposure Statement:**  
 This equipment complies with FCC radiation exposure limits in accordance with the FCC's OET Bulletin 65, Section 1.135. These limits apply during normal operation.

### CALIFORNIA PROP 65 WARNING

\*WARNING: This product contains a chemical known to the State of California to cause birth defects or other reproductive harm. For more information on these regulations and a list of chemicals, log on the following website address: <http://www.oehha.ca.gov/prop65.html>

7

### WARRANTY

Innovative Technology Electronics Corp.  
 Limited Warranty: 90 Days Labor, One Year Parts

Innovative Technology Electronics Corp. IT warrants the product to be free from "Defects" in materials and workmanship for a period of "One Year" from the date of the original purchase. The warranty is not transferable. It applies to the original purchaser. It does not extend to the product if it is altered or modified in any way. It is further agreed that IT will cover the cost to repair or replace damaged parts (not for a full replacement) on the item, or one that has equivalent value and features, to return an item, supply IT parts, return address, phone number, item purchased, receipt of purchase and reason for return to the RMA number.

All returns must be in the original packaging or reasonable substitute to prevent damage. Customer must include their shipping address and telephone number inside of package. No return will be shipped back to a PO Box or APO address.

Please include your check or money order in the amount of:

- USD \$50.00 for items \$150.00 to \$249.99 (Price Paid Per Unit)
- USD \$75.00 for items \$250.00 to \$499.99 (Price Paid Per Unit)
- USD \$125.00 for items \$500.00 and up (Price Paid Per Unit)

Shipping fees are non-refundable.

In the event that Innovative Technology Electronics Corp. (IT) is unable to repair or replace a product (IT) shall not be liable for any INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING REASONABLE ATTORNEY'S FEES) OR ANY OTHER DAMAGES, INCLUDING REASONABLE ATTORNEY'S FEES, TO THE EXTENT PERMITTED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSES ARE HEREBY DISCLAIMED TO THE EXTENT OF THE DURATION OF THIS WARRANTY.

Some states do not allow the disclaimer or limitation of consequential damages or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. The warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Made In China.

8