

D

C

B

A

## NEO A2 Lite 2.4GHz Wireless AirMouse

Thank you for purchasing the NEO A2 Lite.


NEO A2 Lite is a double-sided 2.4GHz wireless air mouse and keyboard. NEO A2 Lite utilizes the latest six-axis gyroscope and accelerometer technology to give users total control of their MINIX media hub or other compatible electronic devices. Whilst, the spacious keyboard has been specifically designed to enable efficient typing, ideal for writing emails and other typing based activities whilst sitting on the sofa.

- Six-axis gyroscope & accelerometer
- Spacious keyboard
- Advanced power management
- Battery Type : 2<sup>nd</sup> AAA batteries (not included)
- Operating range up to 10 meters
- Multi-OS support: Windows, Mac OS X, Android and Linux

### Package Content

- 1 x NEO A2 Lite 2.4GHz Wireless AirMouse
- 1 x USB Receiver
- 1 x User Guide

Key Pad Layout

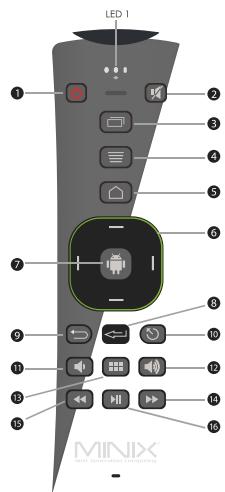

- |           |   |
|-----------|---|
| <b>1</b>  | Long Press - Power Options Menu                                 |
| <b>2</b>  | Short Press - Standby Mode                                      |
| <b>3</b>  | Mute  |
| <b>4</b>  | Recent apps list (Shortcut)                                     |
| <b>5</b>  | Menu (Options)  |
| <b>6</b>  | Launcher Home screen (Shortcut)                                 |
| <b>7</b>  | Directional Pad   |
| <b>8</b>  | Left-click (or Enter when using D-Pad)                          |
| <b>9</b>  | Enter   |
| <b>10</b> | Return / Back   |
| <b>11</b> | Activation Key<br><small>Press to activate mousepointer</small> |
| <b>12</b> | Volume Down   |
| <b>13</b> | Volume Up   |
| <b>14</b> | List of apps installed (Shortcut)                               |
| <b>15</b> | Fast Forward (for stock video player)                           |
| <b>16</b> | Rewind (for stock video player)                                 |
| <b>17</b> | Play / Pause  |

### Basic Instructions

#### Installation

1. Open battery covers on the back of the keyboard, remove the USB receiver.
2. Insert 2 x AAA batteries.
3. Plug the micro receiver into a USB port on your MINIX media hub or other compatible electronic device.

#### How to use

- The air mouse pointer function is 'OFF' by default.
- Press **[S]** button to activate the mouse pointer function.
- Rotate up-down, left-right to control the mouse cursor.
- Swing your wrist to form an easy and smooth motion.

#### How to recalibrate

- If the cursor begins to drift please follow these instructions:
- 1. **Press and hold [Fn]+[P]** for approximately **3 seconds**.
- 2. Lay the air mouse on a flat surface, LED 1 should glow.
- 3. LED 1 will then go off and flashing 3 times.
- 4. Recalibration is now complete.

#### How to change air mouse axials

- Press and hold **[Fn]+[C]** together.

#### How to switch between white and orange characters

- Press **[Fn]**

### FCC Certification Requirements

**Caution: Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

**This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.**