 


H9

Action Camera
Wi-Fi · Waterproof · Ultra HD




THE BASICS

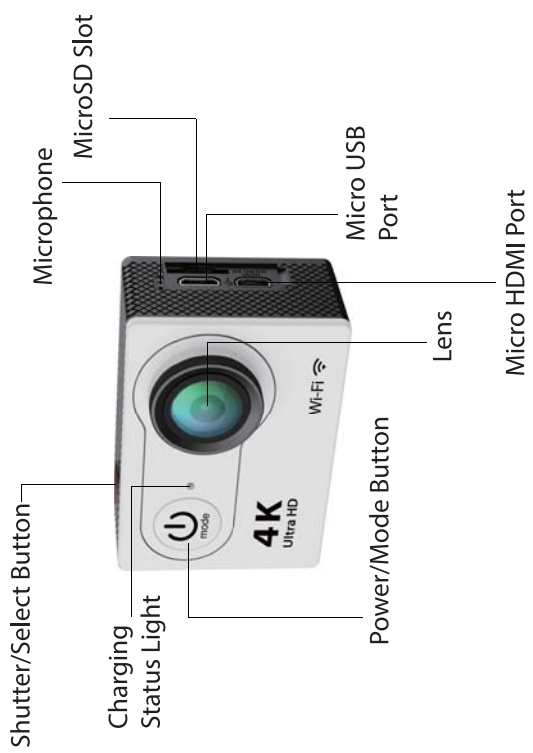

ACCESSORIES

			
Waterproof Housing	Mount 1	Mount 2	Mount 3
			
Mount 4	Mount 5	Frame	Handle Bar/Pole Mount
			
Helmet Mounts	Protective Backdoor	Battery	Tethers
			
USB Cable	Charger	Tripod (Optional)	

 Battery Door Latch

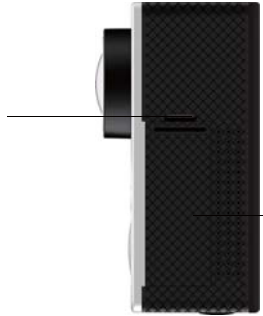

Battery Door

WATERPROOF HOUSING

Select /Shutter Button



Up/Playback Button

Down/Wi-Fi Button

Power/Mode Button

Latch

MOUNTING YOUR CAMERA

Attach your camera to helmets, gear and equipment.



GETTING STARTED

HELLO

Congratulations on your new camera! This user manual will help you learn the basics of capturing life's most incredible moments!

To power ON:

 
Press the **Power/Mode Button**.

To power OFF:

Press and hold the **Power/Mode Button**.

OVERVIEW

Turn camera ON and repeatedly press the **Power/Mode Button** to cycle through camera modes and settings. The modes will appear in following order:

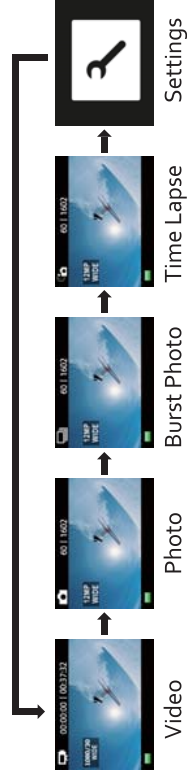



Record Video



Capture a single photo.



Capture photo bursts



Shoot a series of photos at set time intervals



Adjust camera settings, resolution and more.

SETTINGS



Press the **Shutter/Select Button** to enter the settings menu. Repeatedly press the **Power/Mode Button** to cycle through options and press the **Shutter/Select Button** to select desired option. Or use the **Up/Playback or Down/Wi-Fi Button** to cycle through the various options.

Video Resolution:

4K25/2.7K30/1080p60/1080p30/720p120

MicroSD Card	4k25/2.7k30	1080p60	1080p30/720p120
32 GB	60 mins	120 mins	240 mins
16 GB	30 mins	60 mins	120 mins

Looping Video: Off/On (4K & 2.7K not supported)

Time Stamp: Off/Date/Date & Time

Exposure: +-2.0/+-1.7/+-1.3/+-1.0/+-0.7/+-0.3/0

Photo Resolution: 12M/8M/5M/4M

Burst Photo: 3 Photos

Time Lapse: 2s/3s/5s/10s/20s/30s/60s

Continuous Lapse: Off/On

Power Frequency: 50Hz/60Hz/Auto

Language: English/Traditional Chinese
/Italian/Spanish/Portuguese/German/
Dutch/France/Czech/Polish/Turkish/
Russian/Japanese/Korean/Thai

Date & Time: MM/DD/YY, DD/MM/YY,
or YY/MM/DD

Sound Indicator: Shutter On/Off, Start Up 1/2/3/
None, Beep On/Off, Volume
0/1/2/3

Upside Down: On/Off

Screen Saver: Off/1 min/3 min/5 min

Power Saver: Off/1 min/3 min/5 min

Format: No/Yes

Reset: No/Yes

Version

VIDEO MODE



To record Video, verify the camera is in **Video** mode. If the **Video** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears.

To start recording:

Press the **Shutter/Select Button**. The camera will emit one beep and the **Camera Status Lights** will flash while recording.

To stop recording:

Press the **Shutter/Select Button**. The **Camera Status Lights** stop flashing and the camera emits one beep to indicate recording has stopped.

This camera automatically stops recording when the battery is out of power. Your **Video** will be saved before the camera powers **OFF**.

PHOTO MODE



To capture a **Photo**, verify the camera is in **Photo** mode. If the **Photo** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears.

To take a photo:

Press the **Shutter/Select Button**. The camera will emit the camera shutter sound.

BURST PHOTO MODE



To capture a **Burst Photo** series, verify the camera is in **Burst Photo** mode. If the **Burst Photo** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears. In **Burst Photo** mode, your camera takes 3 photos in 1.5 seconds.

To take a Burst Photo series:

Press the **Shutter/Select Button**. The camera will emit camera shutter sounds.

TIME LAPSE MODE



To capture a **Time Lapse** series, verify the **Continuous Lapse** is **ON** and camera is in **Time Lapse** mode. If the **Time Lapse** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears. In **Time Lapse** mode, your camera captures a series of photos at **2,3,5,10,20,30** or **60** second intervals.

To take Time Lapse:

Press the **Shutter/Select Button**. The camera initiates countdown and emits the camera shutter sound each time a **Photo** is taken.

PLAYBACK

Playing Back Videos and Photos

To enter the Playback menu:

1. Verify the camera is in **Camera modes**.
2. Press the **Up/Playback Button** to enter the **Playback** menu.
3. Repeatedly press the **Power/Mode Button** to cycle through **Video** and **Photo**.
4. Press the **Shutter/Select Button** to select desired option.
5. Use **Up/Playback Button** or **Down/Wi-Fi Button** to cycle through the various options.
6. Press the **Shutter/Select Button**.
7. To return to the **Playback** menu, press the **Power/Mode Button**.
8. To exit, hold down the **Up/Playback Button** for two seconds.

STORAGE/MICROSD CARDS

This camera is compatible with **16GB** and **32GB** capacity **microSD**, **microSDHC**, and **microSDXC** memory cards. You must use a **microSD** card with at least a **Class 10 speed** rating. We recommend using brand name memory cards for maximum reliability in high-vibration activities.

BATTERY

To charge the battery

Use the 1A USB charger and USB cable that come standard with your camera.

*Third-party chargers and accessories may not be supported.

* Charging Time: 5 hours

COMPATIBILITY

* Compatibility varies by device. Content playback, sharing and access to the camera's memory card might be not available on some devices.

CAMERA APP

Connecting to the Ez iCam App (4K & 2.7K not supported)

The **Ez iCam App** lets you control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, photo playback and sharing of select content and more.

1. Download the **Ez iCam App** to your smartphone or tablet at the **Google Play** or **Apple App Store**.
2. Press the **Power/Mode Button** to power camera **ON**.
3. Make sure the camera is in **Camera modes**.
4. Press the **Down/Wi-Fi Button** to turn on **Wi-Fi***.
5. In your smartphone or tablet's Wi-Fi settings, connect to the network called "**ICAM-H9**" followed by a series of numbers.
6. Open the **Ez iCam App** on your smartphone or tablet.

* Press and hold the **Down/Wi-Fi Button** for three seconds to turn **OFF Wi-Fi**.

The **Ez iCam App** is compatible with smartphones and tablets listed below.

For Apple iOS

- * iPhone 6/6s/7 (Plus)(iOS10)
- * iPad Air & Mini (iOS10)

For Android:

- * Android 4X Quad-core devices



iOS / Android
App Download

FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.