# **Instruction Manual**

Model No.: 33834

DESC.: Bluetooth & Noise Canceling Headphone

Thank you for purchasing this Bluetooh headphone.

Please read this instruction and warnings carefully before use to ensure safe and satisfactory enjoyment of this product.

# Important safety information

Adjust the headphone sound to the proper volume. Loud sound may damage your hearing.

Don't turn the volume so high that you can't hear what's around you.

Use cautiously or temporarily discontinue use in potential hazardous situations.

Do not use the headphone while ridding a bicycle, motor bike, or driving a car. The use of headphone may cause a traffic hazard and is illegal in many areas.

Not exposure or toss headphone into a fire. It will probably caused an accident

Don't disassemble headphone if you are not an expert.


Place out of reach of small children to prevent accidental ingestion of small parts.

#### WARNING

This headphone is not waterproof. To prevent a fire or shock hazard, do not place any container filled with liquid near it (such as a vase or flower pot) or expose it to dripping, splashing, rain or moisture.

To prevent a fire hazard, do not place any naked flame sources (such as lighted candle) on the headphone.

# **Description of the appliance**

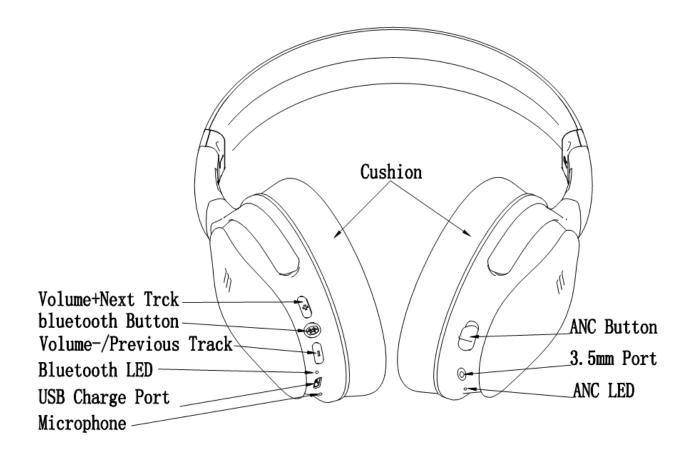

# **Specifications**

Bluetooth Solution: CSR
Bluetooth version: V5.0

Support agreement: A2DP, AVRCP, HFP, HSP

Operating distance: 10M

Battery: 300mAh

Charging time: about 3 hours Charging current: 220mA

Music playing time: about 16 hours (50% volume, noise canceling off)

ANC working time: about 8 hours

Driver Unit: Ø40mm

Sensitivity: 105dB/1mW(S.P.L at 1KHz)

Frequency Range: 20Hz-20KHz

Rated Power: 10mW Max. Power: 20Mw ANC solution:MAX

Noise reduction performance: up to 20dB

## **Battery charging**

The headphone's battery must be recharged before use.

Headphone's battery must be charged with the micro-USB cable included in package as accessory.

Connect the micro-USB in the cable to the appropriate charging port of the headphone, and the USB plug on the other end to a USB port on a computer or wall charger.

When recharging begins, the LED indicator on the headphone will light red.

Full recharging requires about three hours; when recharging is completed, the Red LED indicator will turn Blue.

When the battery is approaching depletion, a beep sound will be heard in the headphone at 5-minutes intervals.

#### Note

Battery recharging time and using time may vary depend on ambient temperature and frequency of use.

Do not place metal objects near the headphone's charging port, since dangerous electrical shorts or abnormal heating may occur.

Please don't attempt to change the rechargeable lithium battery that should last the lifetime of the headphone. Please don't dispose used batteries/electronics with ordinary solid waste, since they contain toxic substances.

Please turn off your headphone after your usage to get a longer battery life.

# Pair headphone with Bluetooth devices

- 1. Hold Bluetooth button for three seconds before you hear Power on. The blue LED indicator flashing three time, and then enter the pairing mode (the LED indicator's flashing blue and red)
- 2. When in the paring mode, if pairing is not completed within 90s, the headphone will enter standby mode, and you have to restart for pairing. The headphone will automatically turn off within 15 minutes if no action.
- 3. Turn on the bluetooth device you wish to pair with, and keep it within one meter range of headphone. Search for the pairing name " 33834" in your device pairing list.
- Select/click pairing name "33834" till you hear voice "collected"
   Paired headphone will flash blue LED at the intervals of three seconds.

**Notes:** 1. When the headphone has already paired with a device, it will automatically connect when both device and headphone powered on and stay within 1m. If you want to pair with another device, you have to disconnect the bluetooth connection from the first device. And the headphone will search for another device and later paired.

2. The headphone can connect with 2 devices the same time. When you play with 1 device, you can pause another one by hand, and the bluetooth will maintain connection. You can switch to different device for play.

#### **Noise Canceling Function**

When you slide the ANC button to the "On" side, the green LED will light on, then you can enjoy the headphone in Noise cancellation mode. When you don't need the Noise cancellation function, please slide the NC button to the OFF side.

#### Making calls with the headphone

| Functions          | Status of headset | Operation                    |
|--------------------|-------------------|------------------------------|
| Redial Last number | Standby mode      | Short press bluetooth button |
|                    |                   | twice quickly                |

| Volume up         | Conversation mode | Short press "+" button          |
|-------------------|-------------------|---------------------------------|
| Volume down       | Conversation mode | Short press " - " button        |
| Answering calling | Ringing           | Short press bluetooth button    |
| Reject calling    | Ringing           | Press and hold bluetooth button |
|                   |                   | for one second, and release     |
|                   |                   | until you hear indication       |
|                   |                   | sound                           |
|                   |                   |                                 |

#### Notes:

Not all the mobile phones support all the functions listed above. Please refer to the instruction of your mobile phone. Some functions and indication tones may vary with mobile phones

# **Playing Music**

To use the wireless headphone to listen to music from a bluetooth device, you must firstly perform pairing with the bluetooth device which use the A2DP audio profile.

Controls when listening to music

| Functions      | Status of headphone Operation          |                              |
|----------------|--|------------------------------|
| Play           | pausing                                | Short press Bluetooth button |
| Pause          | Playing Music Short press Bluetooth bu |                              |
| Previous Track | Playing                                | Long press Volume + button   |
| Next Track     | Playing                                | Long press Volume - button   |
| Volume +       | Playing Short press Volume + bu        |                              |
| Volume -       | Playing                                | Short press Volume - button  |

• When sound volume is set to maximum or minimum levels a beep sound will be produced from the headphone.

# Disconnecting from the bluetooth device

Hold the wireless headphone bluetooth button for about five seconds to turn off the power.

# Troubleshooting

| Problem                       | Remedy  |
|-------------------------------|---|
| Power won't turn on           | Recharge the wireless headphones                                |
| The batteries will not charge | Confirm that computer is ON.                                    |
|                               | Confirm that computer is not in power-saving mode.              |
|                               | Confirm that accessory micro-USB cable is securely connected to |
|                               | both the wireless headphone and computer.                       |
| Can't perform pairing         | Place the wireless headphones and bluetooth device closely      |

|  | together when performing pairing                                     |
|--|--|
| Can't perform bluetooth connection                 | Confirm that power is turned on for both wireless headphones and     |
|  | bluetooth device.  |
|  | Confirm that bluetooth function is turned ON in the device you are   |
|  | connecting to  |
| No sound when playing music                        | Confirm that power is turned on for both wireless headphones and     |
|  | bluetooth device.  |
|  | Confirm that connection with bluetooth device is set for profile     |
|  | A2DP.  |
|  | Confirm that the connected music playback device is set for PLAY.    |
|  | Confirm that sound volume controls on both wireless headphones       |
|  | and music playback device are set to appropriate levels.             |
|  |  |
| Sound is distorted when playing music              | Check that no other devices utilizing the 2.4GHz wavelength are      |
|  | nearby, and that no obstructions black the signal path.              |
| Can't use the hands-free operation                 | Confirm that wireless headphones and bluetooth device are            |
|  | connected using the profile HFP or HSP. If connection that to the    |
|  | bluetooth device is in profile A2DP, it may be necessary to change   |
|  | connection profiles(depending on the specifications of the bluetooth |
|  | device).   |
| Communication distance is short, sound is garbled. | Check that no other devices utilizing the 2.4GHz                     |
|  | wavelength(including microwave ovens, wireless radios, etc.) are     |
|  | nearby. and that no obstructions block the signal path.              |
|  |  |

Name/Title: David Fuge / Sr. Director, Program Management

Company: Monoprice, Inc

Address: 1 Pointe Dr Suite# 400 Brea, CA 92821, USA

Tel: 562-392- 9046 Fax: 909-912-1320

E-Mail: David.Fuge@monoprice.com

#### FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.