



## Soundstage 3 Portable Speaker



P/N 43666

## User's Manual

# SAFETY WARNINGS AND GUIDELINES

Please read this entire manual before using this device, paying extra attention to these safety warnings and guidelines. Please keep this manual in a safe place for future reference.

- This device is intended for indoor use only.
- Do not expose this device to water or moisture of any kind. Do not place drinks or other containers with moisture on or near the device. If moisture does get in or on the device, immediately remove it from its power source and allow it to fully dry before reapplying power.
- Do not touch the device, the power cord, or any other connected cables with wet hands.
- If operating this speaker in a humid environment, ensure that no condensation occurs. Condensation could cause damage to the speaker cone and could cause a short in the amplifier, which in turn could cause fire or severe electric shock.
- Do not install this device on an unstable surface where it could fall and cause either personal injury or damage to the device and/or other equipment.
- Do not expose this device to excessive vibration or extreme force, shock, or fluctuations in temperature or humidity.
- Avoid prolonged exposure to excessive volume levels, which could cause hearing damage. Reduce the volume to minimum before using this speaker, then increase the volume to a comfortable listening level.
- Do not expose this device to excessively high temperatures. Do not place it in, on, or near a heat source, such as a fireplace, stove, radiator, etc. Do not leave it in direct sunlight.
- Do not place or install this device in an area where it can be exposed to excessive amounts of dust, humidity, oil, smoke, or combustible vapors.
- Prior to operation, check the unit and power cord for physical damage. Do not use if physical damage has occurred.
- Before plugging the unit into a power outlet, ensure that the outlet provides the same type and level of power required by the device.
- Unplug this device from the power source when not in use.

- Take care to prevent damage to the power cord. Do not allow it to become crimped, pinched, walked on, or become tangled with other cords. Ensure that the power cord does not present a tripping hazard.
- Never unplug the unit by pulling on the power cord. Always grasp the connector head or adapter body.
- Ensure that power is turned off and disconnected before making any electrical connections.
- This device contains a Lithium battery. Dispose of this device only in accordance with local, state, or federal regulations for electronic waste.
- Charge the battery before first use and at least once every three months to keep it fresh and capable of holding the full charge.
- Clean using a soft, dry cloth only. Do not use chemical cleaners, solvents, or detergents. For stubborn deposits, moisten the cloth with warm water.
- This device has no user serviceable parts. Do not attempt to open, service, or modify this device.

## CUSTOMER SERVICE

The Monoprice Customer Service department is dedicated to ensuring that your ordering, purchasing, and delivery experience is second to none. If you have any problem with your order, please give us an opportunity to make it right. You can contact a Monoprice Customer Service representative through the Live Chat link on our website [www.monoprice.com](http://www.monoprice.com) or via email at [support@monoprice.com](mailto:support@monoprice.com). Check the website for support times and links.

## PACKAGE CONTENTS

Please take an inventory of the package contents to ensure you have all the items listed below. If anything is missing or damaged, please contact Monoprice Customer Service for a replacement.

1x Soundstage 3 Portable Speaker

 
1x 3.5mm Audio Cable

1x AC Power Cord

1x User's Manual


## PRODUCT OVERVIEW

### Front Panel

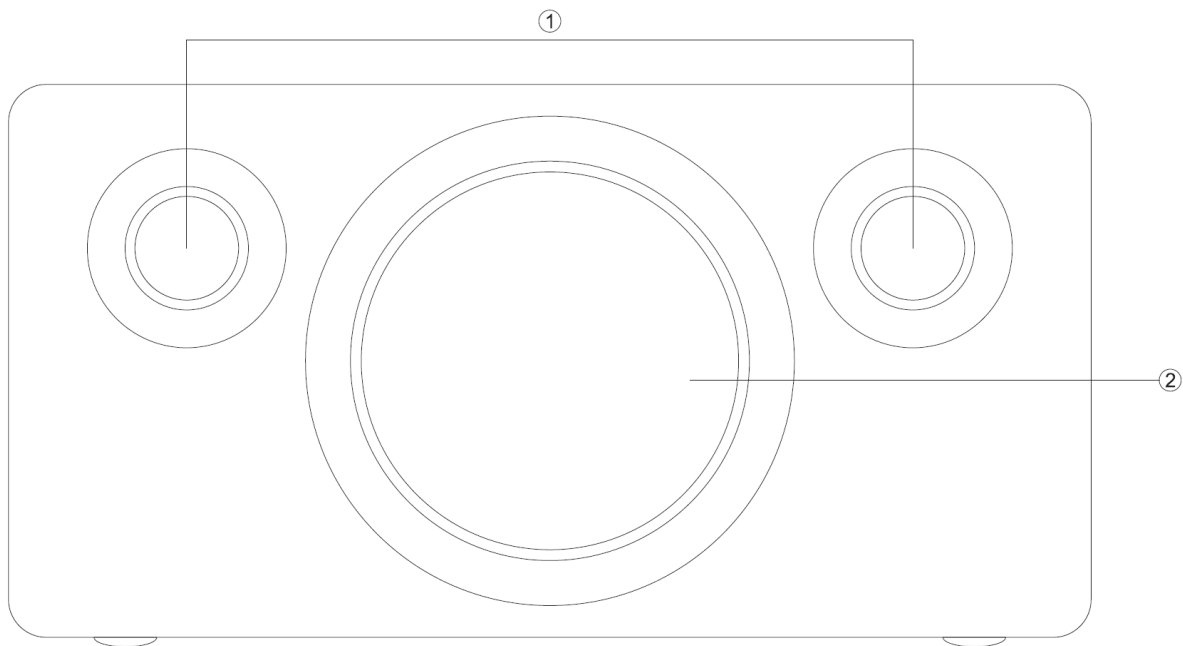


1. **Tweeters:** Two 1" silk dome tweeters.
2. **Woofers:** One 5.25" concave aluminum cone woofer.

## Top Panel

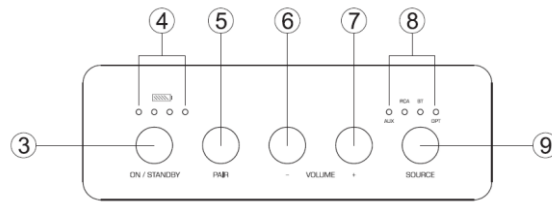 

3. **ON/STANDBY:** Press the button to power the speaker on or to put it into standby mode.
4. **BATTERY:** The 4 LEDs illuminate to indicate the charge level of the internal battery.
5. **PAIR:** Press the button to put the speaker into Bluetooth® pairing mode.
6. **VOLUME—:** Press the button to decrease the volume level.
7. **VOLUME+:** Press the button to increase the volume level.
8. **SOURCE INDICATORS:** One of the LEDs illuminates to indicate the selected input.
9. **SOURCE:** Press the button to cycle through the available inputs. The cycle order is the same as the order of the **SOURCE INDICATORS:** AUX (3.5mm AUX IN), RCA, BT (Bluetooth®), and OPT (digital optical S/PDIF).

## Rear Panel

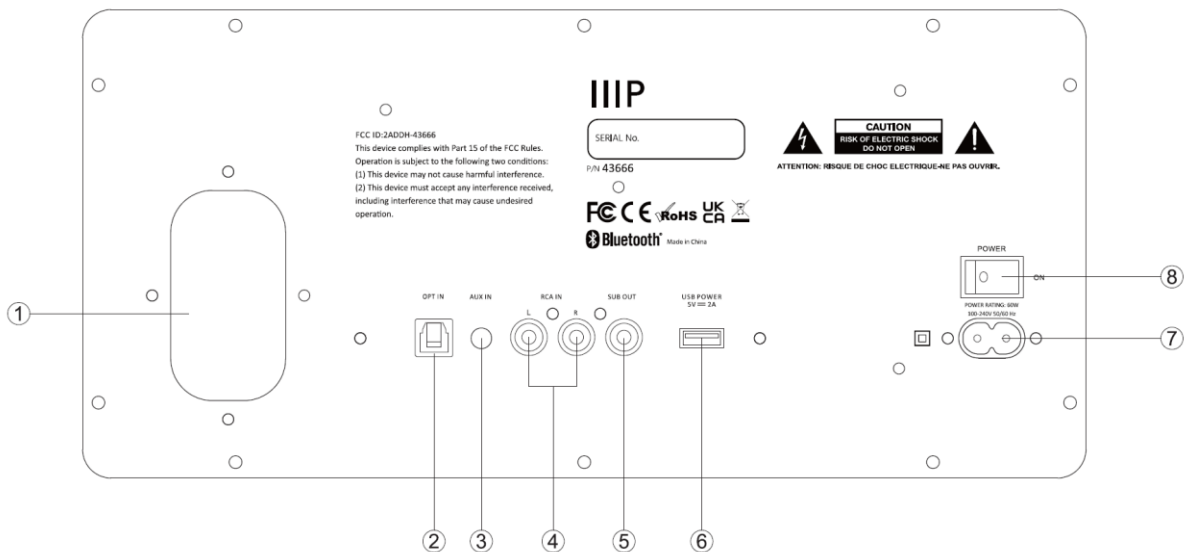 

1. **BASS REFLEX PORT:** Bass reflex port for improved bass response.
2. **OPT IN:** Digital optical S/PDIF input.

3. **AUX IN:** 3.5mm stereo analog input.
4. **RCA IN:** Stereo analog RCA input.
5. **SUB OUT:** Mono analog RCA jack for connecting an external subwoofer (available separately).
6. **USB POWER:** USB charging port with 5 VDC, 2A output for charging mobile devices.
7. **AC INPUT:** Unpolarized IEC 60320 C8 input for connecting the included **AC Power Cord**.
8. **POWER:** Master power switch for turning the speaker on or off.

## INSTALLATION

Perform the following steps to install the Soundstage 3 speaker. Ensure that power is turned off and disconnected on all equipment to be connected before making any electrical connections.

1. Ensure that the **POWER** switch on the rear panel is in the **OFF** position.
2. (Optional) Plug one end of the included **3.5mm Audio Cable** into the **AUX IN** jack on the rear panel, then plug the other end into the output of an audio source device, such as the headphones output on your smartphone.
3. (Optional) Plug one end of a stereo RCA cable (available separately) into the **RCA IN** jacks on the rear panel, then plug the other end into the stereo analog RCA output on your audio source device.
4. (Optional) Plug one end of a digital optical S/PDIF cable (available separately) into the **OPT IN** port on the rear panel, then plug the other end into the digital optical S/PDIF output on your audio source device.
5. (Optional) Plug one end of a mono RCA cable (available separately) into the RCA input on a subwoofer (available separately), then plug the other end into the **SUB OUT** jack on the rear panel.
6. (Optional) Plug one end of a USB charging cable (available separately) into the **USB POWER** port on the rear panel, then plug the other end into the charging input on your mobile device or other USB powered device.

7. Plug one end of the included **AC Power Cord** into the **AC INPUT** on the rear panel, then plug the other end into a nearby AC power outlet.
8. Place the **POWER** switch on the rear panel in the **ON** position. This puts the speaker into standby mode.
9. Press the **ON/STANDBY** button on the top panel to turn the speaker on.

## CHARGING

This speaker contains an internal Lithium battery. As long as the speaker is plugged into a live AC power outlet and the **POWER** switch on the rear panel is in the **ON** position, the internal battery will automatically charge.

## BLUETOOTH PAIRING

Perform the following steps to pair the speaker with your Bluetooth® device.

1. Place the **POWER** switch on the rear panel in the **ON** position.
2. Press the **ON/STANDBY** button on the top panel to turn the speaker on.
3. Repeatedly press the **SOURCE** button on the top panel until the **BT LED** in the **SOURCE INDICATORS** group illuminates.
4. Press the **PAIR** button on the top panel to put the speaker into Bluetooth® pairing mode. The **BT LED** in the **SOURCE INDICATORS** group will start flashing, indicating that the speaker is in Bluetooth pairing mode.
5. Open the Bluetooth settings on your mobile device and scan for nearby Bluetooth devices.
6. Locate and select the **MP43666** entry. If prompted for a passcode, enter **0000** (four zeros). Once connected, the **BT LED** in the **SOURCE INDICATORS** group will stop flashing and will illuminate steadily.

*Note that the speaker will remember the device it was last paired to. To reconnect after the connection has been broken, open the Bluetooth settings on your device and select **Connect** to reestablish the connection.*

## SPECIFICATIONS

P/N	43666
Supported Audio Channels	2.1
Amplifier Type	Digital Class D Amplifier
Frequency Response	42Hz ~ 20kHz
Crossover Frequency	3.0kHz
Woofer Driver	1x 5.25" concave aluminum cone
Tweeter Drivers	2x 1" silk dome
Low Frequency Amplifier Power	1x 30 watts
High Frequency Amplifier Power	2x 10 watts
Inputs	3.5mm stereo analog, RCA stereo analog, digital optical S/PDIF, Bluetooth®
Outputs	Mono analog subwoofer, USB power
Bluetooth® Version	4.2
Bluetooth Pairing Name	MP43666
Bluetooth Range	Up to 32 feet (10 meters)
Power Source	AC or internal battery
AC Input Power	100 ~ 240 VAC, 50/60 Hz
Battery Type	Lithium-ion
Battery Capacity	8800mAh
Battery Life	Up to 10 hours (50% volume)
USB Power Output	5 VDC, 2A
Dimensions	13.6" x 6.9" x 7.3" (345 x 176 x 185 mm)



## TECHNICAL SUPPORT

Monoprice™ is pleased to provide free, live, online technical support to assist you with any questions you may have about installation, setup, troubleshooting, or product recommendations. If you ever need assistance with your new product, please come online to talk to one of our friendly and knowledgeable Tech Support Associates. Technical support is available through the online chat button on our website [www.monoprice.com](http://www.monoprice.com) or through email by sending a message to [tech@monoprice.com](mailto:tech@monoprice.com). Check the website for support times and links.

To download the latest drivers, firmware, manuals, etc., go to [www.monoprice.com](http://www.monoprice.com) and type the P/N into the search bar. If available, support files are linked at the bottom of the product page.

## REGULATORY COMPLIANCE

### Notice for FCC



**FCC ID: 2ADDH-43666**

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Modifying the equipment without Monoprice's authorization may result in the equipment no longer complying with FCC requirements for Class B digital devices. In that event, your right to use the equipment may be limited by FCC regulations, and you may be required to correct any interference to radio or television communications at your own expense.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.  
The device can be used in portable exposure condition without restriction.

## Radio Notice for FCC

### Caution

This FCC Part 15 radio device operates on a non-interference basis with other devices operating at this frequency. Any changes or modification to said product not expressly approved by Monoprice, including the use of non-approved antennas, could void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## EU Conformity with applicable directives



This equipment complies with the essential requirements listed below:

- Radio Equipment Directive (RED) 2014/53/EU
- RoHS 2 Directive 2011/65/EU with Directive (EU) 2015/863

## UK Conformity with the relevant Union harmonization legislation



This equipment complies with the essential requirements listed below:

- Radio Equipment Regulations 2017
- Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012

*Monoprice™ and all Monoprice logos are trademarks of Monoprice Inc.*

*The Bluetooth® word mark and logos are registered trademarks of Bluetooth SIG, Inc.*