



SB-100SW 2.1-ch 36in Soundbar with Wireless Subwoofer



P/N 38036

**User's Manual**

# CONTENTS

SAFETY WARNINGS AND GUIDELINES .....	3
FEATURES .....	4
CUSTOMER SERVICE.....	4
PACKAGE CONTENTS .....	5
PRODUCT OVERVIEW .....	5
Soundbar Front Panel .....	5
Soundbar Rear Panel.....	6
Soundbar Side Panel.....	6
Subwoofer Rear Panel.....	7
Remote Control.....	7
PAIRING THE SOUNDBAR AND SUBWOOFER.....	9
IR REMOTE CONTROL .....	10
USB PLAYBACK.....	10
BLUETOOTH PAIRING .....	11
TECHNICAL SUPPORT .....	12
REGULATORY COMPLIANCE.....	12
Notice for FCC .....	12
Radio Notice for FCC .....	13
Notice for Industry Canada.....	13
Radio Notice for Industry Canada.....	14

## SAFETY WARNINGS AND GUIDELINES

Please read this entire manual before using this device, paying extra attention to these safety warnings and guidelines. Please keep this manual in a safe place for future reference.

- This device is intended for indoor use only.
- Do not expose this device to water or moisture of any kind. Do not place drinks or other containers with moisture on or near the device. If moisture does get in or on the device, immediately unplug it from the power outlet and allow it to fully dry before reapplying power.
- Do not touch the device, the power cord, or any other connected cables with wet hands.
- If operating this speaker in a humid environment, ensure that no condensation occurs. Condensation could cause damage to the speaker cone and could cause a short in the amplifier, which in turn could cause fire or severe electric shock.
- Do not install this device on an unstable surface where it could fall and cause either personal injury or damage to the device and/or other equipment.
- Do not expose this device to excessive vibration.
- Do not expose this device to excessively high temperatures. Do not place it in, on, or near a heat source, such as a fireplace, stove, radiator, etc. Do not leave it in direct sunlight.
- Do not place or install this device in an area where it can be exposed to excessive amounts of dust, humidity, oil, smoke, or combustible vapors.
- Prior to operation, check the unit and power cord for physical damage. Do not use if physical damage has occurred.
- Before plugging the unit into a power outlet, ensure that the outlet provides the same type and level of power required by the device.
- Unplug this device from the power source when not in use.
- Take care to prevent damage to the power cord. Do not allow it to become crimped, pinched, walked on, or become tangled with other cords. Ensure that the power cord does not present a tripping hazard.

- Never unplug the unit by pulling on the power cord. Always grasp the connector head or adapter body.
- Ensure that power is turned off and disconnected before making any electrical connections.
- Remove the battery from the controller if it will go unused for a lengthy period of time.
- Clean using a soft, dry cloth only. Do not use chemical cleaners, solvents, or detergents. For stubborn deposits, moisten the cloth with warm water.
- This device has no user serviceable parts. Do not attempt to open, service, or modify this device.

## FEATURES

- Includes a wireless Bluetooth® connection
- Features digital coaxial, digital optical, and 3.5mm AUX inputs
- Supports playback of mp3 files from a USB flash drive (up to 32GB capacity)
- Includes an IR remote control
- 120 watts power output
- Includes a wireless subwoofer

## CUSTOMER SERVICE

The Monoprice Customer Service department is dedicated to ensuring that your ordering, purchasing, and delivery experience is second to none. If you have any problem with your order, please give us an opportunity to make it right. You can contact a Monoprice Customer Service representative through the Live Chat link on our website [www.monoprice.com](http://www.monoprice.com) or via email at [support@monoprice.com](mailto:support@monoprice.com). Check the website for support times and links.

 
## PACKAGE CONTENTS

Please take an inventory of the package contents to ensure you have all the items listed below. If anything is missing or damaged, please contact Monoprice Customer Service for a replacement.

- 1x Soundbar
- 1x Wireless subwoofer
- 1x IR remote control
- 2x AC power cords
- 1x 3.5mm audio cable
- 1x User's manual


## PRODUCT OVERVIEW

### Soundbar Front Panel

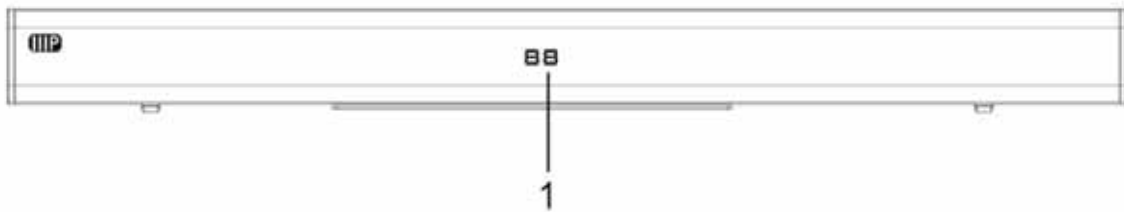

1. **Display:** The Display uses two characters to indicate the operating mode.
  - **bt:** The soundbar is powered on and in Bluetooth® Mode. The letters flash while in Bluetooth pairing mode.
  - **OP:** The soundbar is powered on and in OPTICAL Mode.
  - **CO:** The soundbar is powered on and in COAXIAL Mode.
  - **AU:** The soundbar is powered on and in AUX Mode.
  - **US:** The soundbar is powered on and in USB Mode.


## Soundbar Rear Panel

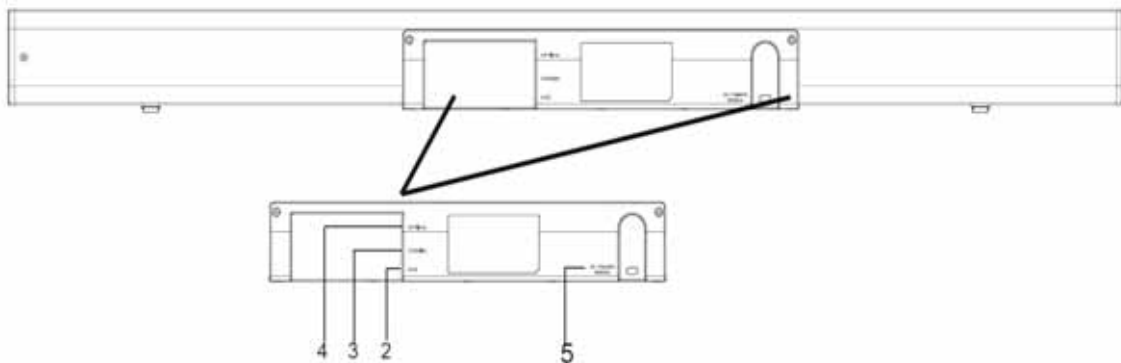 

2. **AUX:** 3.5mm stereo analog AUX audio input.
3. **COAXIAL:** Digital coaxial audio input.
4. **OPTICAL:** Digital optical audio input.
5. **AC IN:** AC jack for connecting the included AC power cord.


## Soundbar Side Panel

 1. **Standby:** Press hold the **Standby** button for about 2 seconds to turn the soundbar on or to put it in Standby Mode. With the soundbar powered on, press and hold the **Standby** button for 1 second to cycle through the various inputs.
2. **Volume+:** Press the + button to increase the volume level.
3. **Volume-:** Press the - button to decrease the volume level.
4. **USB:** USB port for connecting a USB flash drive (up to 32GB capacity) with mp3 files.

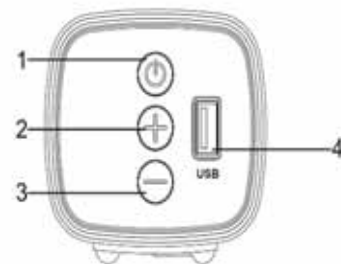


## Subwoofer Rear Panel

 1. **Pairing Indicator:** The LED indicates the pairing status with the soundbar.
2. **WPS Pairing Button:** Press the button to initiate wireless pairing with the soundbar.
3. **AC IN:** AC jack for connecting the included AC power cord.

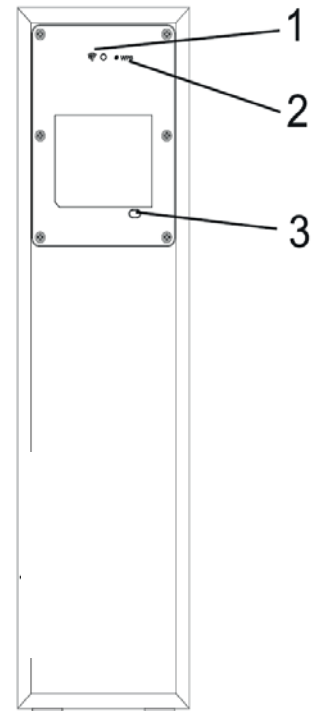

## Remote Control

 1. **POWER:** Press the button to turn the soundbar on or to put it into standby mode.
2. **PAIR:** Momentarily press the button to connect or disconnect the paired device. Press and hold the button for about 2 seconds to put the soundbar in Bluetooth® pairing mode.
3. **LUM:** Press the button to turn the indicator on or off. This does not function when the soundbar is in standby mode.
4. **LOOP:** Loop playback. This functions only in USB mode.

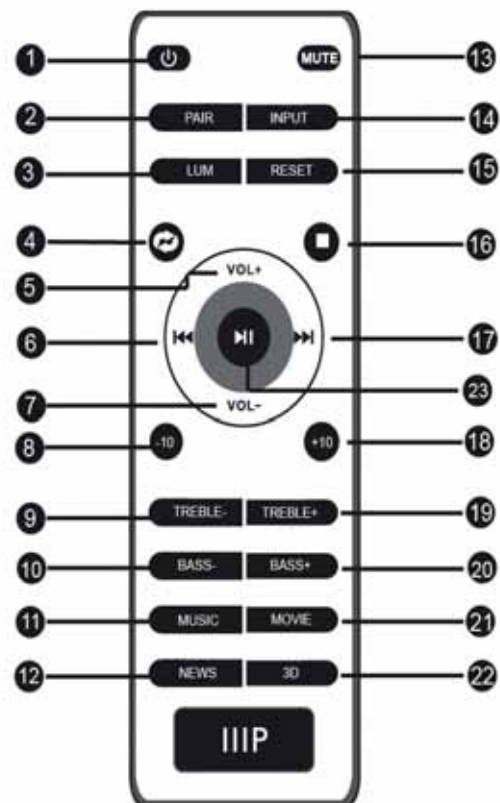

5. **VOL+:** Press the button to increase the volume level.
6. **PREV:** Press the button to skip back to the previous track. This functions only in Bluetooth® and USB modes.
7. **VOL-:** Press the button to decrease the volume level.
8. **-10:** Skips back 10 tracks. This functions only in USB mode.
9. **TREBLE-:** Press the button decrease the treble response.
10. **BASS-:** Press the button to decrease the bass response.
11. **MUSIC:** Press the button to select the Music EQ effect.
12. **NEWS:** Press the button select the News EQ effect.
13. **MUTE:** Press the button turn audio muting on or off.
14. **INPUT:** Press the button to cycle through the inputs. The cycle order is AUX (3.5mm analog), USB, BT (Bluetooth®), OPT (digital optical), and COA (digital coaxial).
15. **RESET:** Press and hold the button for about 2 seconds to reset the volume levels and switch to the Music EQ effect.
16. **STOP:** Press the button to stop audio playback. This functions only in USB mode.
17. **NEXT:** Press the button to skip forward to the next track. This functions only in Bluetooth® and USB modes.
18. **+10:** Press the button to skip ahead 10 tracks. This functions only in USB mode.
19. **TREBLE+:** Press the button to increase the treble response.
20. **BASS+:** Press the button to increase the bass response.
21. **MOVIE:** Press the button to select the Movie EQ effect.
22. **3D:** Press the button to select the 3D EQ effect.
23. **PLAY/PAUSE:** Press the button to start or pause playback. This functions only in Bluetooth® and USB modes.



## PAIRING THE SOUNDBAR AND SUBWOOFER

Perform the following steps to pair the subwoofer with the soundbar.

1. Ensure that the subwoofer is located within about 32 feet (10 meters) of the soundbar. If there are any obstructions, the maximum range is reduced.
2. Plug one of the included AC power cords into the **AC IN** jack on the subwoofer, then plug the other end into a nearby AC power outlet. The **Pairing Indicator** will begin flashing slowly.
3. Use a small pin to momentarily press the **WPS Pairing Button**. The **Pairing Indicator** will begin flashing rapidly.
4. Plug one of the included AC power cords into the **AC IN** jack on the soundbar, then plug the other end into a nearby AC power outlet.
5. Press the **STANDBY** button on the soundbar side panel to turn the soundbar on.
6. Within about 30 seconds, the **Pairing Indicator** on the subwoofer will cease flashing and illuminate solid, indicating that the subwoofer is paired with the soundbar.

 
### Notes:

- The subwoofer and soundbar will remember the pairing and will pair again automatically when turned on.
- If the soundbar is off or in Standby Mode, the Pairing Indicator will change to solid red after about 5 minutes, indicating that it is in Waiting Mode.

## IR REMOTE CONTROL

You will need to install two AAA batteries (not included) in the remote control before it can be used. Perform the following steps to install batteries.

1. Invert the remote, then slide the battery compartment cover back to remove it.
2. Insert two AAA batteries (not included) in the battery compartment, taking care to match the polarity markings.
3. Slide the battery compartment cover back in place.

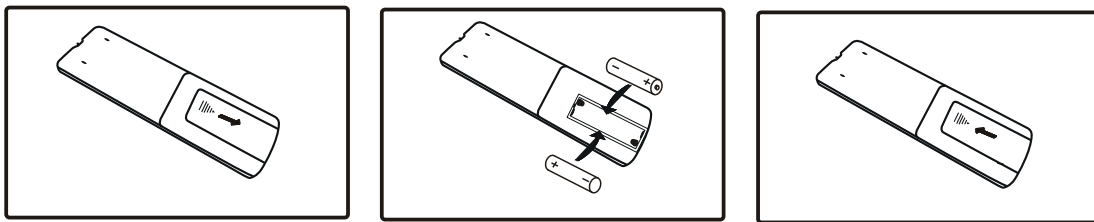

## USB PLAYBACK

The soundbar features the ability to playback mp3 audio files stored on a USB flash drive. The flash drive can have a capacity up to 32GB and can store mp3 files in both the root directory and subdirectories. The mp3 files can have filenames up to 8 characters long, not including the mp3 file extension.

To begin playback, insert the drive into the USB port on the side panel. The soundbar will automatically switch to USB mode and will begin playing files. You can use the remote control to stop, pause, or resume playback and to skip forward or backward through the files on the drive.

## BLUETOOTH PAIRING

Perform the following steps to pair the soundbar with your mobile device.

1. Ensure that your mobile device is located within about 3 feet (1 meter) of the soundbar.
2. Press and hold the **STANDBY** button on the soundbar side panel for 2 seconds or press the **STANDBY** button on the IR remote control to turn the soundbar on.
3. Press the **STANDBY** button on the soundbar side panel repeatedly until the **Display** flashes **bt**, indicating the soundbar is in Bluetooth® pairing mode. Alternatively, use the **INPUT** button on the remote control instead of the **STANDBY** button on the soundbar.
4. Open the Bluetooth settings on your mobile device and scan for nearby Bluetooth devices.
5. Locate and select the **SB-100SW** entry. If prompted for a passcode, enter **0000** (four zeros). If you cannot locate the **SB-100SW** entry, restart the soundbar and try again.
6. Once the soundbar is paired with your mobile device, the display will cease flashing and will show **bt**.

### Notes:

- To play audio from your mobile device, it must support the Advanced Audio Distribution Profile (A2DP).
- If your mobile device supports the Audio Video Remote Control Profile (AVRCP), you can use the soundbar's remote control to control audio playback.

## TECHNICAL SUPPORT

Monoprice is pleased to provide free, live, online technical support to assist you with any questions you may have about installation, setup, troubleshooting, or product recommendations. If you ever need assistance with your new product, please come online to talk to one of our friendly and knowledgeable Tech Support Associates. Technical support is available through the online chat button on our website [www.monoprice.com](http://www.monoprice.com) or through email by sending a message to [tech@monoprice.com](mailto:tech@monoprice.com). Check the website for support times and links.

## REGULATORY COMPLIANCE

### Notice for FCC



This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Modifying the equipment without Monoprice's authorization may result in the equipment no longer complying with FCC requirements for Class B digital devices. In that event, your right to use the equipment may be limited by FCC regulations, and you may be required to correct any interference to radio or television communications at your own expense.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the

user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Radio Notice for FCC



### Caution

This FCC Part 15 radio device operates on a non-interference basis with other devices operating at this frequency. Any changes or modification to said product not expressly approved by Monoprice, including the use of non-approved antennas, could void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Notice for Industry Canada

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

## Radio Notice for Industry Canada

### Caution

This IC RSS-210 radio device operates on a non-interference basis with other devices operating at this frequency. Any changes or modification to said product not expressly approved by Monoprice, including the use of non-approved antennas, could void the user's authority to operate this device.

This device complies with IC RSS-210. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

*The Bluetooth® word mark and logos are registered trademarks of Bluetooth SIG, Inc. HDMI®, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.*