



 
kitsound.co.uk

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Kondor Ltd. is under license. Other trademarks and trade names are those of their respective owners.

All trademarks are acknowledged as the property of their respective owners. Unless otherwise stated their use does not imply that the trademark owner is affiliated with KitSound or endorses the products herein.

Products showing the 'Crossed Through' wheelee bin symbol must be recycled separately from household waste at the end of their useful life. Please DO NOT dispose of this appliance in normal household waste. Your local appliance retailer may operate a 'take-back' scheme when you are ready to purchase a replacement product, alternatively contact your local government authority for further help and advice on where to take your appliance for recycling.

Please recycle this packaging responsibly.



IMMERSE 75

ACTIVE NOISE CANCELLING WIRELESS HEADPHONES

Please read this manual carefully before use.



- Please don't get the product wet. If your product is IP rated, please follow guidelines on how to safely use your product overleaf
- Please don't take the product apart. There are no user serviceable parts inside
- Please don't modify or alter the product or accessories
- Please don't expose the product to extreme temperatures or rapid changes of hot to cold or vice versa
- Please don't use damaged cables or plugs, or loose electrical sockets
- Please don't touch the device, cables, plugs, or the electrical socket with wet hands or other wet body parts
- Please don't pull the cable excessively when disconnecting it if the cable is not fixed
- Please don't bend or damage the cable
- Please don't drop or cause an impact to the product or the device
- Please don't place naked flame sources, such as lighted candles, on the product

Protect your hearing and ears when using a headset



 
- Excessive exposure to loud sounds can cause hearing damage
- Exposure to loud sounds while walking may distract your attention and cause an accident
- Always turn the volume down before plugging the earphones into an audio source and use only the minimum volume setting necessary to hear your conversation or music
- In dry environments, static electricity can build up in the headset. Avoid using headsets in dry environments or touch a metal object to discharge static electricity before connecting a headset to the device
- Do not use a headset while driving or riding. Doing so may distract your attention and cause an accident, or may be illegal depending on your region

Battery Information

- Batteries may malfunction if they are not used for extended periods
- Over time, unused devices will discharge and must be recharged before use
- Disconnect the charger from power sources when not in use
- Use the batteries only for their intended purposes
- Follow all instructions in this manual to ensure the longest lifespan of your device and battery. Damages or poor performance caused by failure to follow warnings and instructions can void your manufacturer's warranty
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like
- **Please do not dispose of battery in a fire or an oven, or mechanically crush or pierce the battery, as this may result in explosion.**
- **Please do not subject the battery to extremely low air pressure, which may result in an explosion and/or the release of flammable liquid or gas.**

Getting started

1. Press and hold for 4 seconds
2. Connect to 'KS Immerse 75'
3. Play your music

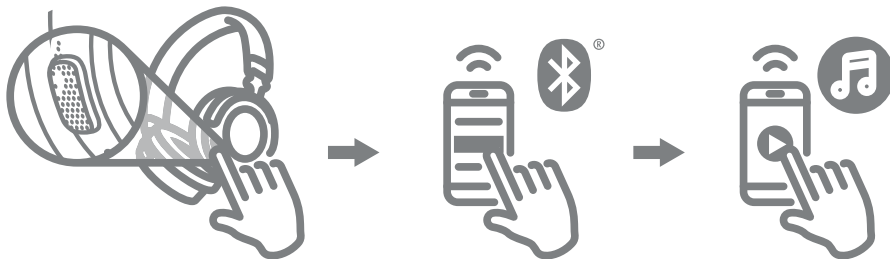


Further information is provided in the following pages of this manual.

Box contents

- Immerse 75 Active Noise Cancelling (ANC) Wireless Headphones
- Micro USB to 3.5 mm audio cable
- Micro USB charge cable
- User manual
- Carry pouch

Functions

 1. MFB (Multi-function Button)
2. Volume+/Next Track
3. Volume-/Previous Track
4. LED Indicator
5. Micro USB Charging Port
6. Microphone
7. ANC LED
8. ANC Button

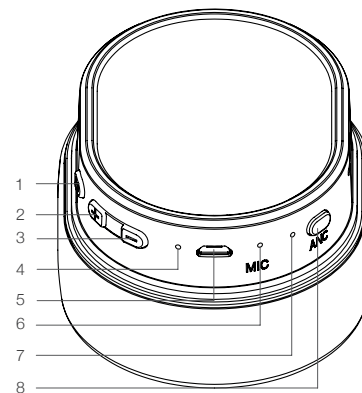

Note: For the purposes of this manual, “ANC” is shorthand for “Active Noise Cancelling”.

Instructions for use

Getting started

Charging the battery

Give the headphones a full charge before their first use

1. Connect the micro USB charge cable to the Micro USB Charging Port (5) and plug into power
2. The LED Indicator (4) will be red whilst charging which will take up to 3 hours
3. Once fully charged the LED Indicator (4) will turn off

Note: The first charge may take up to 3.5 hours to complete.

Note: The LED Indicator (4) will flash red and a low battery tone will sound every 5 minutes to show low battery status, indicating that a recharge is required.

Pairing the headphones to your device

1. Hold the MFB (1) down for 4 seconds. You will see the LED Indicator (4) flash white and enter pairing mode
2. Turn on your iOS, Android, or Windows device's Bluetooth ON and search for new devices
3. Select "KS Immerse 75" from the list of found devices. If asked for a passcode, enter '0000' and the device will pair
4. Once connected, an audio tone will sound and the LED Indicator (4) will flash white every 10 seconds. You can then answer the phone or listen to your music
5. To power off the headphone, hold MFB (1) down for 3 seconds. You will see the LED Indicator (4) flash red for 1 second before turning off

Note: The next time you switch the headphones on they will automatically search for and attempt to connect to the last paired device.

Note: If the music device is taken further than the transmission range of the headphone (10 metres) the headphone will enter a "link-loss" state. The headphone will be able to automatically re-pair to the music device when it comes back within the acceptable range. The link-loss period will last 10 minutes, if the device does not come back within range the headphone will begin searching for a new device.

Note: If no connection is made with the headphones for more than 20 minutes the headphone will power off.

Removing pairing records

1. From standby mode, hold MFB (1) together with Volume+ (2) for 5 seconds to delete pairing records

Re-pairing or pairing new devices

1. Turn Bluetooth connectivity off on any previously paired devices or remove pairing record as stated in the previous section of this manual
2. Follow the 'Pairing the headphones to your device' instructions from step 1

Call handling

Answer a call	Press MFB (1) to answer. You can adjust the volume by using Volume+ (2) or Volume- (3)
Reject a call	Hold MFB (1) for 1 second to reject the incoming call
End call	Press MFB (1) while in the call to end it
Redial	Press MFB (1) twice in quick succession to redial the last phone number you called on your device
Mute microphone	Press MFB (1) twice in quick succession whilst in a call to mute the microphone and repeat to unmute the microphone
Switch microphone	Hold Volume+ (2) for 1 second in order to switch between the headphone microphone to the microphone of the handset
Voice dialling	Hold MFB (1) for 1 second and wait for audio tone before giving voice command to device. Note: This feature requires a compatible IOS or android handset

Playing music

Bluetooth

Play/Pause	Press MFB (1)
Adjusting the volume	Press Volume+ (2) or Volume- (3). The volume can also be controlled on your device
Changing track	Press and hold Next Track (2) or Previous Track (3)

Wired use

1. Turn off the headphones
2. Plug the micro USB to 3.5 mm audio cable into the Micro USB Charging Port (5) and the other end into your device

Note: All functions are controlled via your device.

Noise Cancellation

The ANC Button (8) can be used to toggle the active noise cancellation on and off when using the headphones.

When ANC is turned on, the ANC LED (7) will shine green.

ANC on/off (with Bluetooth audio)	Upon start-up the headphones will enter Bluetooth mode with ANC automatically turned on. Short press ANC Button (8) to toggle ANC mode on/off. Bluetooth mode will automatically enter standby after 20 minutes without a signal. ANC will continue to work, please be sure to manually turn off ANC after use.
ANC on/off (without Bluetooth audio)	Whilst the headphones are powered off, short press ANC Button (8) to toggle ANC mode on/off. In this mode the headphone will reduce background noise after without the use of the Bluetooth music function. Note: User must manually turn off the ANC in this mode after use to conserve battery.

Note: The Bluetooth mode and ANC mode of the headphones operate separately, this enables the user to continue cancelling noise even when the music playback has finished. Perfect for sleeping on long journeys. Please always be sure to check the ANC status of the headphone after use and turn off the ANC function manually when powering off the headphones.

Specifications

Bluetooth® technology v5.0	
Bluetooth connectivity distance	up to 10 m
Frequency band	2.402-2.480 GHz
Transmission power	4 dBm (conducted)
S/N	80 dB +/- 2 dB
Frequency response	20 Hz – 20 kHz
Drivers	40 mm
Output RMS	10 mW / 32 Ω
Battery	LiPo
Play time	up to 15 hours (ANC + Bluetooth at 70% vol) up to 30 hours (Bluetooth only at 70% vol)
Charging time	up to 3 hours
IP rating	none
Working temperature	-10°C ~ +55°C
Headphone (mm)	H195 x W135 x D73
Cable length	0.8 m
Weight	257 g

Troubleshooting

We hope you've now got all the information you need to get started, but if you're having problems with anything, please feel free to contact us at: support@kitsound.co.uk

Hereby, Kondor Ltd declares that the radio equipment type, Immerse 75, is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: <http://kondor.co.uk/product-documents>.

FCC ID: 2ADFF-KSIMM75

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The use and operation of this speaker is beyond our control. Warranty of the KS Immerse 75 is limited to defects caused by faulty manufacture or defects in materials only. No warranty whatsoever is given or implied for damage caused by the user under any circumstances.

This does not affect your statutory rights.

Please do not attempt to open this product. There are no user serviceable parts inside, in particular if your product has an embedded, non-replaceable battery, do not attempt to access or remove the battery as this may cause personal injury and will damage the product.

Making any attempt to open the product or carry out repair voids any and all warranties.

We are sorry for any inconvenience caused by minor inconsistencies in these instructions, which may occur as a result of product improvement and development.