


EVG7 DL46

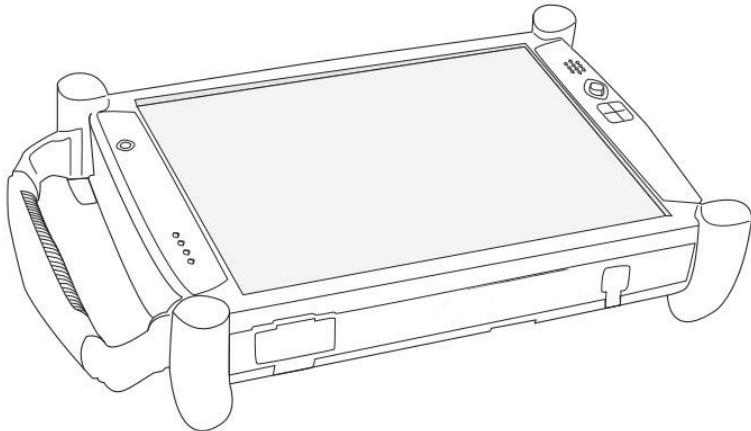

Getting Started

Congratulations on your purchase of a Tablet PC. The Tablet PC is a fully functional PC with built-in LAN, and wireless connectivity. With your Tablet PC you will be able to organize and access important business and personal information. In addition, you will be able to send and receive e-mail and access the Internet.

This Manual contains all the information you need to set up and use your Tablet PC. It describes all the features of the Tablet PC in an easy-to-read yet thorough manner.

Inventory

This Tablet PC is designed for years of productive and pleasurable computing. Use this section to keep details of your purchase. This information will be required should you need to make repairs to your Tablet PC during the warranty period. Update this section when you add new options.

DATE OF PURCHASE:

PLACE OF PURCHASE:

DEALER'S NAME:

DEALER'S ADDRESS:

TELEPHONE:

E-MAIL ADDRESS:

CONTACT PERSON:

MODEL NUMBER:

SERIAL NUMBER:

Safety and Maintenance

You can use your Tablet PC under a wide range of environmental conditions. However, to ensure long use and continued high performance, consider the following factors when setting up your Tablet PC:

Follow all warnings and instructions noted in this documentation and in the Windows Help program.

The first time you use your Tablet PC, we recommend that you carefully read the Making Connections section of this manual and initialize the battery to ensure optimum battery performance.

Unplug the Tablet PC from the power outlet before cleaning. Use a damp cloth for cleaning. Do not use aerosols, solvents, or strong detergents.

Slots and openings in the system cabinet are for ventilation purposes. Do not block or cover these openings or the system could overheat. Do not use or store the Tablet PC near a source of heat or dust.

On the base or rear panel of this Tablet PC, there is a label with information on the power requirements of this system. These requirements must be followed. If you are unsure of your local power supply, consult your dealer or local Power Company.

Do not step on or place anything on the power cord.

If you use the Tablet PC with an extension cord, ensure that the total ampere ratings of all the devices sharing the extension do not exceed the rating of the extension cord or the rating of the wall outlet.

Never push foreign objects into the Tablet PC through any of the slots or openings. Dangerous voltages are present, which could cause electric shock or fire, or damage sensitive components.

High performance Processors


Celeron 1037U , 1.8 Ghz

High Capacity Hard Disk Drive

The Tablet PC has a high capacity hard disk drive, to store your favorite programs and large multimedia files.

Quick Start

Turning on the Tablet PC for the First Time

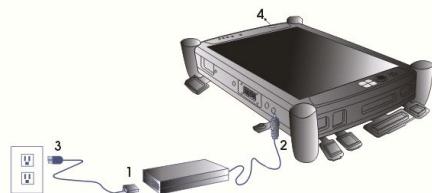

1. Connect the AC adapter power cord to the AC adapter.
2. Connect the AC adapter to the DC power port on the bottom side of your Tablet PC.
3. Connect the AC adapter power cord to an AC outlet.
4. Press the power button to turn on the power.

Loading Windows

The following section is for installing the Windows operating system only. If you are installing a different operating system, please check with your vendor for installation details.

After the Start Wizard updates your system settings, the Welcome to Windows screen will appear. You may disable this feature by clearing the check box labeled

show this screen each time Windows starts

Some software comes preloaded with Windows. New users can familiarize themselves with this software by selecting Programs from the start menu, then clicking on programs to run them.

^

Adjusting the Volume

You can adjust the volume with hot key:

Fn + Arrow Up (Five way control key): volume up

Fn + Arrow Down (Five way control key): volume down

Alternatively, you can adjust

the volume with the Windows

volume control applet located

on the taskbar.

Adjusting the Brightness

Use the following hot key combinations to adjust the LCD panel

brightness:

Fn + Arrow Right (Five way control key): increases the brightness

Fn + Arrow Left (Five way control key): decreases the brightness

Turning off Your Tablet PC

Turning off the Tablet PC properly is important to maintaining your Tablet PC.

1. On the Start menu, click

2. Click the

Turn Off

radio button in

Turn Off Computer

.

the

Turn Off Computer

Windows

screen, and then click

OK

\

If you are going to be away from the Tablet PC for a short period, there are ways of conserving power without shutting down the system.

Warning:

Shutting off the Tablet PC improperly

may result in data loss.

Hardware and Software

This chapter introduces the different components and controls of your Tablet PC, including the hardware components, the software, and the audio and video systems.

Getting Started

Before you begin using your Tablet PC, read this chapter to familiarize yourself with the main components installed in the system.




Front View

1. Speaker
2. Five Way Control Key
 - Up/Down (Volume Control)
 - Left/Right (Brightness Control)
 - & Enter Button
3. WiFi
4. Screen Rotate Button
5. Function Button
6. Security Access Button
7. Power Button
8. LCD Panel
9. Internal Microphone
10. LED Status Indicator




Right View

1. MIC
2. Earphone
3. LPT
4. USB 2.0 X2
5. Modem Connector
6. DC-in Jack
7. RS232

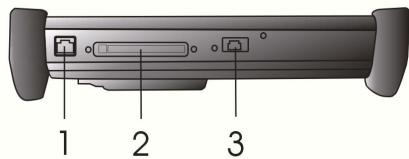

Top View

1. LAN Port
2. USBX2 . , SD
3. Mini USB Connecter

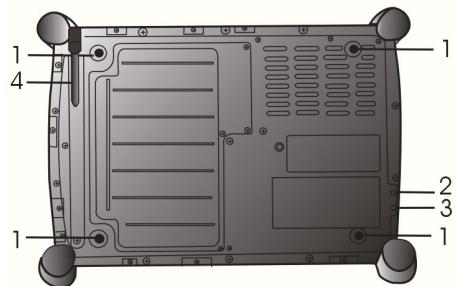

Bottom View

1. Screw
2. Reset Button
3. Digitizer/Touch Switch Button
4. Stylus

Power Indicators

The power indicators show which power source the system is using. They also show battery status and low battery power alerts. The power indicators remain active and viewable even when the LCD panel is closed.

Icon Light / Description

Blue = Wireless LAN/Bluetooth is in use

Green =Tablet PC is reading from, or writing to the built-in hard disk.

Green = Battery fully charged

Green= Battery fully charged

Flashing Red = Battery power critically low

Blue = Power is on and the is on and the battery is in use

Flashing Blue = Power is in suspend mode

Front View BuFront View Buttons

The seven hot keys are unique features of your Tablet PC. The function as follows

Icon Function

Power Button

Press and hold the Power Button for at least 2 seconds to turn on the system and go into standby automatically. If the unit has been sitting unused for a while. Press momentarily to turn on the system or to exit from standby. Press and hold for at least 4 seconds to force turn off the system.

These settings can be changed

Security Button

Implement Secure Attention Sequence (SAS)

Similar function as pressing Ctrl+Alt+Delete on a standard keyboard

Function Button

Access to secondary operation of some buttons on the front bezel (shown in the illustration above).

Access to secondary operation of some buttons on the front bezel (shown in the illustration above).

Enter Button

Same function as on a standard keyboard

UP/Down Button

Same function as on a standard keyboard.

Left/Right Button

Under Normal Mode:

Same function as on a standard keyboard.

Under Calculation Mode:

Arrow Left / Arrow Right : + / -

Function Keys

Hold the Fn key while pressing the function key.

Fn + Down = Volume down

Fn + Up = Volume up

Fn + Right = Brightness Increase


Fn + Left = Brightness Decrease

Fn + Security = ESC key

Replacing a Memory Card

Removing a Memory Card

1. Turn off the Tablet PC and disconnect the AC adapter. Turn the Tablet PC upside down and lay it on a flat surface.
2. Carefully remove the two RAM compartment cover screws and remove the RAM compartment cover.
3. Carefully remove the Bluetooth module screws, unplug bluetooth harness then remove bluetooth module.
4. Gently pull tabbed latched in the direction of the arrows (1). The card will pop up slightly.
5. Pull upwards on the card and then slide the card out (2).

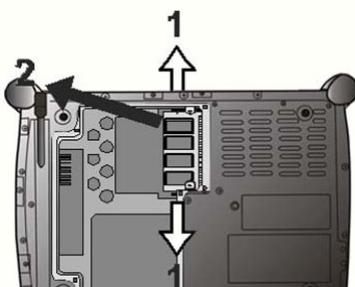

inserting a Memory Card

1. Hold the memory card by its edges with the edge-connector side towards the slot.
2. Hold the card at a shallow angle (about 25 degrees) and insert the edge connector into the connector slot (4). The "gold teeth" of the edge connector should no longer be visible when the card is fully inserted.
3. Press the card downwards so that is flat inside the compartment (4). You may hear an audible click as the latches of the connector lock the card in place

System Software

Software List

Operating System (bundled with OS model)

Your hard drive already contains all the software you need to operate the Tablet PC

Audio and Video Drivers

These utility programs and drivers are included for the PC Card drive, the sound system and graphics sup-system

System Recovery

If your machine bundled with OS, we provide the service DVD to recover your operation system.

Before you start

Your Service DVD includes Wasay Recovery System in DVD content. Follow the steps in the appropriate section below to recover the operating system and the system software.

The factory has pre-partitioned your system's hard disk, so you may directly install the system software; however, if you change a new hard disk, you must first partition it.

If you reinstall your operating system, all of the data originally on the hard disk will be overwritten. Before reinstalling the operating system, carefully backup any important data.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user's authority to operate this equipment. (Example-use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.