



Table of contents

OVERVIEW	3
SAFETY INSTRUCTIONS	4
Main Functions	7
Basic Operations	
Home screen.	9
Install the APK application1	11
Uninstall the APK application1	
Movies1	13
Camera1	14
Music	15
Blue tooth	17
Regular Settings1	18
DEVICE SPECIFICATION	20
Connect computer and Common Issues	21

FCC Warning Statement


FCC Statement This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation .

Changes or modifications not expressly approved by the party responsible for compliance could void the . user's authority to operate the equipment.

- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device , pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

OVERVIEW

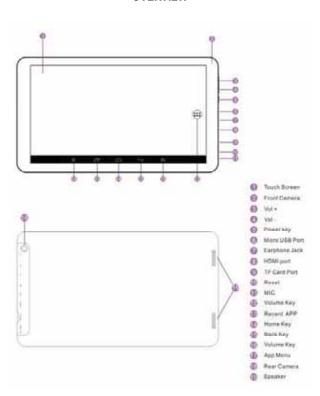

SAFETY INSTRUCTIONS

Read these safety instructions before using your device and store them for possible future reference. Always follow these basic safety precautions when using your mobile device. This reduces the risk of fire, electric shock, and injury.

- Do not expose this product to rain or moisture.
- Keep the device out of direct sunlight and heat sources.
 Protect the power cord. Route power cords so that they are not likely to be walked on or pinched by items placed on or against them. Pay particular attention to the point where the cord attaches to the device.
 Only use the AC adapter included with the device. Using any other power
- adapter voids your warranty.

 Do not remove the cover. There are no user-serviceable parts inside
- If the charger cord is damaged, have it repaired by the manufacturer, its servicer or a similarly qualified person in order to avoid any hazard.
- The charger is not intended for use by persons (including children) with reduced physical, sensory or mental capacity. Persons who have not read the manual, unless they have received explanations by a person responsible for their safety and supervision, should not use this unit.

 Children should be monitored to ensure that they do not play with the charger.
- The device contains small parts that may present a choking hazard.

 The charger should always be readily accessible.
- The device should not be exposed to dripping or splashing water.
 No objects filled with liquids such as vases shall be placed on the device.
- Always leave a minimum distance of 10 cm all around the unit to ensure sufficient ventilation.
- · Naked flame sources, such as candles, should not be placed on top of the
- The device is intended for use only in a moderate temperature climate.
- CAUTION: Danger of explosion if battery is incorrectly replaced or not replaced by the same type or equivalent.
- The battery should not be exposed to excessive heat such as sunshine, fire or similar elements.

Clean your Device Treat the screen gently. To clean fingerprints or dust from the screen, we recommend using a soft, non-abrasive cloth such as a camera lens cloth. SWITCH OFF IN RESTRICTED AREAS

Turn off the power when the use of the mobile device is not authorized or when it may cause interference or danger, for example; on board an aircraft, near medical equipment, fuel, chemicals or blasting sites.

ROAD SAFETY COMES FIRST
Check the current laws and regulations in the area where you drive, regarding

- the use of mobile devices such as this mobile device.

 Do not hold this mobile device while driving
- Concentrate fully on the driving
 Radio Frequency (RF) can affect certain electronic systems in your car, such as
- the audio-stereo system or security equipment.

 An airbag inflates with great force. Do not store the mobile device or any of its accessories in the area above the bag or in its deployment area.

AUTHORIZED PERSONNEL

Only qualified personnel are authorized to install or repair this product ACCESSORIES

Only use batteries, chargers and other accessories which are compatible for this device. Do not connect incompatible products.

KEEP YOUR DEVICE DRY
Your device and its accessories are not water proof. Keep them dry. Precautions for use

This mobile device conforms to guidelines for exposure to radio frequency. Your mobile device is a radio transmitter and receiver. It was designed to meet the limits recommended by international guidelines on the exposure to radio waves. These guidelines were developed by an independent scientific organization, the ICNIRP, and include safety margins designed to ensure the protection of all, regardless of their age or state of health.

Radio Frequency Interference

Radio frequency emissions from electronic equipment can interfere with other electronic equipment and can cause malfunctions. Although this mobile device has been designed, tested and manufactured in accordance with the EU regulations on radio frequency emissions, the mobile device's wireless transmitter and electrical circuits can cause interference with other electronic equipment. We recommend that you take the following precautions:

Plane: Wireless equipment can cause interference in aircraft.

Turn off the mobile device before boarding a plane
Do not use on the runway without the crew's permission.
Vehicles: Telephone radio- frequency emissions can affect a motor vehicle's electronic systems. With regards to your vehicle, check with the manufacturer or dealer.

Medical device:

To avoid any interference with a medical device, manufacturers of medical devices recommend a minimum distance of 15cm between wireless equipment and a medical implant such as a pacemaker or defibrillator. The following is

- recommended to people who have such devices:
 •Always keep the wireless device at a distance of over 15cm from the medical device.
- Do not carry the wireless device in a breast pocket.
- Hold the wireless device at the ear opposite the medical device
- Turn off the wireless device if there is any suspicion of interference occurring.
 Follow the instructions provided by the manufacturer of the medical device.

If you are fitted with a medical implant and have any questions regarding the use of wireless equipment, consult your doctor.

Warning: If you use headphones, there is a risk of not being able to hear outside sounds clearly. Do not use headphones if there is a risk of endangering your safety.

Some wireless devices can interfere with the proper functioning of hearing aids. Other medical devices:

Radio transmitting equipment, including wireless devices such as this mobile device, can interfere with the operation of inadequately protected medical equipment. Consult a doctor or the manufacturer of the medical equipment to see if the equipment is adequately protected from external Radio Frequency energy. Turn your device off in places where regulations apply, especially in hospitals. Health Facilities:

Hospitals and health facilities may be using equipment that is particularly sensitive to external radio-frequency emissions. Turn your mobile device off when staff or signs tell you to.
Blasting sites and identified areas:

Blasting sites and identified areas:
Switch off your equipment in zones where the atmosphere is potentially explosive.
Follow all official instructions. Sparks in such areas could cause an explosion or fire, resulting in serious bodily injury or death. Switch off your device in gas stations, especially near the gas pumps. Carefully observe instructions on use in fuel depots, storage and distribution areas, at chemical plants or in areas where explosives are used

Areas with a potentially explosive atmosphere are often, but not always clearly marked. These include areas where it is normally advisable to switch off engines ntarked. These include areas where it is normally advisable to switch oil engines, the area below deck on boats, facilities where chemicals are transferred or stored and areas where the air contains chemicals or particles such as grain, dust or metallic powder. Check with the manufacturers of vehicles that use LPG (such as butane or propane) if the device can be used safely in their vicinity.

butane or propane) if the device can be used sarely in their vicinity.

All our mobile devices conform to international standards and regulations, and where appropriate national recognition, to limit the exposure of users to electronic magnetic fields. These standards and regulations were adopted after extensive scientific research. This research does not link the use of mobile phones with any adverse effects on health if the equipment is used in accordance to standards and regulations.

However, if you want to reduce the levels of exposure to radio frequency

radiation you can limit your time using the mobile device in wireless mode because the length of time is a contributing factor to the exposure received by a person. Similarly, keeping the mobile device away from the body is another factor, as exposure levels lessen dramatically with distance.

Main Functions

- 5 Point Capacitive Touch

- Drail capacitive louch
 Dual cameras front 0.3mp, back 2.0mp
 Built-in microphone, super long time recording
 Support 3D games and function customization
 OS: Google Android 4.4.2
 Music play: support MP3, MP1, FLAC, APE, OGG, AAC
 Video play up to 720P: full format video supports RM, RMVB, AVI, MKV, MP4, MPG, 3GP 3GP

GP
Picture browse: support JPEG, JPG, BMP, PNG formats
Support TF card function, (64GB Max)
Support E-book reading, dependent bookmarks
Automatically browsing, horizontal and vertical screen, Switching function
Free set of energy-saving settings, display brightness, the interface background
Email: Gmail, Email-client
At the bottom of the screen, you'll find the Navigation buttons. They're always available,
No matter what you're doing with your tablet, you can always go back to the main
Home screen or return to previous screens:

Icon	Name	Description
\leftarrow	Back	Open the previous screen you were working in, even if it was a different app. Once you back up to the Home screen, you can't go back any further in your history.
	Home	Screen shot here
	Recent apps	Opens Home. If you're viewing a left or right Home screen, opens the central Home Screen
ძ −	Volume-	Turn down the voice
4+	Volume+	Turn up the voice
(SSS)	App	From main page "All Apps" screen opens. This is where you can see all your apps, including those downloaded from Android market. You can move app loons to any of your Home screens.

Basic Operations

1. Turn on

A long press on the power button turns on the device. $\mbox{\bf 2.}$ Turn off

Press & hold down the power button until the "power off" icon appears, touch this icon once & choose "OK" then the unit will shut down.

3. Power Reset

Crashes or freezing images may occur in the process of usage due to Smart operating system. Turn power off and restart to solve this problem or tap the RESET button to force shutdown then reboot if crashes or freezing images occur again.

4. Screen Saver

Press the power button, turn off the screen into the screen saver state. If you want to activate screen, press the power button again to enter the screen lock state, then slide the lock button to unlock.

5. Back to the desktop

Tap the Home icon "les" on the lower part of the home screen, this will allow you to return to the desktop under any interface.

6. Back to the previous interface
Tap the Back icon " on the lower part of the home screen and this will allow you to return to the previous desktop under any interface.
7. Settings

Tap the Settings icon " on the lower middle part of the home screen to access all settings of the tablet. You can also gain access from the "All App" interface.

8. Charging
Plug the DC connector of adapter into the DC-in of device. Plug the adapter into AC power socket. While charging, the device may heat up. This is normal and should not affect your device's lifespan or performance. When the battery is fully charged (the charging icon is no longer moving), unplug the adapter driver from the device and then from the power socket.

[Warning]
Make sure the machine is on a single charge once a month. If you are not going to use the device for a long period, shut down the device after fully charged before storing it away.

Please do not use while charging.

Before using the device for the first time, you should charge the battery. The power adapter (charger) is a key component of the device and plays a vital role in protecting it to work properly and your safety.

Unauthorized chargers can cause batteries to explode or damage your device. Any damage caused by misuse voids the warranty.

Home screen

1. By default, the home screen can open multiple pages; implied icons are "Browser" and "Camera", etc. Sliding left / right can switch desktop display.



2. Set wallpaper
Long press the blank space of the home screen, then pop up "Select
Wallpaper from", Choose an image according to the categories.



3. Display all applications

All installed applications will be displayed if you tap """, this control is located at the bottom of the screen under the main interface.



4. Notification barUnder the main interface, tap the status bar icon, such as USB connection into the notifications panel, which can display the current status of the USB, TF card status and the running application and status.

5. Mobile Desktop icon
Under the home screen, long press the application icon on the home screen, then you can move the selected icon after the icon is enlarged.

6. Delete the desktop iconUnder the home screen, long press the application icon on the home screen, move the selected icon to the trash can (or remove) icon in the upper middle of the screen after the icon is enlarged, then stop pressing when the icon area displays orange and the desktop icon can be deleted.