

Part No. DXMA1902091 A © 2022 Stanley Black & Decker, Inc.

FCC ID: 2ADH6-1902091D
DID: D058328

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

DEWALT® and the DEWALT Logo are trademarks of the DEWALT Industrial Tool Co., or an affiliate thereof and are used under license. The yellow/black color scheme is a trademark for DEWALT power tools & accessories.

Manufactured by E-filliate Inc.
11321 White Rock Rd.
Rancho Cordova, CA 95742 USA

*If you have questions or comments, contact us.
Pour toute question ou tout commentaire, nous contacter.
Si tiene dudas o comentarios, contáctenos.*

888-480-9885

**INSTRUCTION MANUAL
GUIDE D'UTILISATION
MANUAL DE INSTRUCCIONES**

INSTRUCTIVO DE OPERACIÓN, CENTROS DE SERVICIO Y PÓLIZA DE GARANTÍA. **ADVERTENCIA:** LÉASE ESTE INSTRUCTIVO ANTES DE USAR EL PRODUCTO.

DEWALT®

**DXMA1902091 A
Jobsite Pro Wireless Earphones
Auriculares Inalámbricos de Trabajo
Ecouteurs Sans Fil Pour Emplois**

Definitions: Safety Guidelines

The definitions below describe the level of severity for each signal word. Please read the manual and pay attention to these symbols.

▲ DANGER: Indicates an imminently hazardous situation which, if not avoided, **will result in death or serious injury**

▲ WARNING: Indicates a potentially hazardous situation which, if not avoided, **could result in death or serious injury**.

▲ CAUTION: Indicates a potentially hazardous situation which, if not avoided, **may result in minor or moderate injury**.

▲ NOTICE: Indicates a practice not related to personal injury which, if not avoided, **may result in property damage**.

IF YOU HAVE ANY QUESTIONS OR COMMENTS ABOUT THIS PRODUCT, CALL US TOLL FREE AT **888-480-9885**.

▲ WARNING! Read and understand all instructions. Failure to follow all instructions listed below may result in electric shock, fire and/or serious personal injury.

SAVE THESE INSTRUCTIONS

Thank you for purchasing the Jobsite Pro Wireless Earphones. These earphones allow the user to listen to audio wirelessly from up to 33 feet from a paired phone or tablet.

Make sure the earphones are fully charged before using them for the first time. See “Charging Procedure” for instructions.

Jobsite Pro Wireless Earphones Safety Warnings

- **▲ WARNING:** This manual contains important safety and operating instructions for this Jobsite Pro Wireless Earphones. Before using the Jobsite Pro Wireless Earphones, read this manual and all labels on the Jobsite Pro Wireless Earphones.
- Before using the Jobsite Pro Wireless Earphones, read all instructions and cautionary markings on the Jobsite Pro Wireless Earphones.
- Shock hazard. Do not allow any liquid to get inside the Jobsite Pro Wireless Earphones. Electric shock may result
- The Jobsite Pro Wireless Earphones are rated IPX6 and have been tested to withstand powerful water jets for up to 1 minute. They are not designed to be submerged underwater.

- **When operating the Jobsite Pro Wireless Earphones outdoors, always provide a dry location.**
- **Do not operate the Jobsite Pro Wireless Earphones if it has received a sharp blow, been dropped or otherwise damaged in any way.**
- **Do not disassemble the Jobsite Pro Wireless Earphones, there are no user serviceable parts.**

Important Safety Instructions for All Rechargeable Batteries

The battery is not fully charged out of the carton. Before using the earphones, read the safety instructions below and then follow the charging procedures outlined.

READ ALL INSTRUCTIONS

- **Do not incinerate the battery module even if it is severely damaged or is completely worn out.** *The battery can explode in a fire. Toxic fumes and materials are created when lithium batteries are burned.*
- **If battery contents come into contact with the skin, immediately wash area with mild soap and water.**
If battery liquid gets into the eye, rinse water over the open eye for 15 minutes or until irritation ceases. If medical attention is needed, the battery electrolyte is composed of a mixture of liquid organic carbonates and lithium salts.
- **Contents of opened battery cells may cause respiratory irritation.** *Provide fresh air. If symptoms persist, seek medical attention.*
- **Do not charge or use the battery in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.**
- **DO NOT modify the battery in any way to fit a non-compatible charger as the battery may rupture causing serious personal injury.**
- **DO NOT splash or immerse in water or other liquids.**
- **Do not store or use the earphones in locations where the temperature may reach or exceed 105° F (40° C) (such as outside sheds or metal buildings in summer).** *For best life, store earphones in a cool, dry location.*
- **The Jobsite Pro Wireless Earphones should not be disposed of as municipal solid waste.** *To recycle it, contact your local hazardous waste processor or contact Call 2 Recycle® on their website, call2recycle.org, or by phone at 877-273-2925 to find the nearest drop-off location for lithium-polymer batteries.*

▲ WARNING: Burn hazard. Battery liquid may be flammable if exposed to spark or flame.

▲ WARNING: Fire hazard. Never attempt to open the battery pack for any reason. If the battery pack is cracked or damaged, do not insert the charging cable. Do not crush, drop or damage the battery. Do not use the earphones if they have received a sharp blow, been dropped, run over or damaged in any way (e.g. pierced with a nail, hit with a hammer, stepped on). Damaged batteries should be returned to a service center for recycling.

Charging Procedure

1. Charge the wireless earphones by connecting a TYPE C power-in cable to the earphones' charging port.
 2. Plug the USB connector into a USB port on any computer or USB power adapter.
 3. When charging, a red light on the controller will illuminate. Once the light turns blue, the earphones are fully charged.
 4. When the battery is empty, it will take up to two hours to fully charge them.
- ▲ Caution:** Always replace port cover after charging.

Important Charging Notes

1. Longest life and best performance can be obtained if a device is charged when the air temperature is between 65°F and 75°F (18° – 24°C). DO NOT charge a device in an air temperature below +40°F (+4.5°C), or above +105°F (+40.5°C). This is important and will prevent serious damage to the device.
2. The earphones may become warm to the touch while charging. This is a normal condition, and does not indicate a problem. To facilitate the cooling of the earphones after use, avoid placing the earphones in a warm environment such as in a metal shed or an uninsulated trailer.
3. If the earphones do not charge properly:
 - a. Check operation of the receptacle by plugging in a lamp or other appliance.
 - b. Check to see if the receptacle is connected to a light switch which turns the power off when you turn out the lights.
 - c. Move the earphones to a location where the surrounding air temperature is

approximately 65°F – 75°F
(18° – 24°C).

4. Do not freeze or immerse the earphones in water or any other liquid.

▲ WARNING: *Shock hazard. Don't allow any liquid to get inside the earphones. Electric shock may result.*

▲ WARNING: *Burn hazard. Do not submerge the earphones in any liquid or allow any liquid to enter the earphones. Never attempt to open the earphones for any reason. If the plastic housing of the earphones breaks or cracks, return it to a service center for recycling.*

Pairing Procedure

1. Place the earphones within one meter of your phone or tablet during pairing.
2. Power-on the earphones by pressing and holding the **⏻** key on the earphone controller until you see the indicator light alternately flash blue and red. Voice prompts will indicate pairing mode is enabled.
3. Enable the Bluetooth function of your

phone or tablet, search the Bluetooth devices and select “**DEWALT 2091**” for pairing and connection.

4. After the earphones are successfully paired to your phone or tablet, the blue light on the earphones will blink slowly. Voice prompts will confirm pairing is successful. The pairing mode will be maintained for three minutes. If pairing and connection are unsuccessful beyond two minutes, the headset will automatically switch to stand-by mode.
5. After pairing is completed, the earphones and your phone or tablet will recognize each other without pairing again.
6. To remove the pairing connection, enter the Bluetooth settings of your phone or tablet. Select “**DEWALT 2091**” and select the “Forget” option.

Note that the Jobsite Pro Wireless Earphones can pair to a max. of 2 devices. If you experience difficulty pairing a new device, remove a pairing connection from an existing device.

Controller Functions

- On/Off: Press and hold the **⏻** key to turn on/off.
- Pause: Press the **⏻** key to pause playback, and press the key again to resume playback.
- Volume increase: Tap the **+** key; volume reduction: Tap the **-** key.

Note that pressing and holding down the - key instead of tapping it will result in starting the current song or audio file from the beginning. Pressing and holding down the + key will result in advancing from one song or audio file to the next.

- Advance: press and hold the **+** key to move forward to the next track.
- Return: press and hold the **-** key for go back to the previous track.
- Answer/hang up: press the **⏻** key for two seconds and then release it.

Storage Recommendations

1. The best storage place is one that is cool and dry, away from direct sunlight and excess heat or cold.
2. For long storage, it is recommended to store the earphones in a cool dry place for optimal results.

Lifetime Limited Warranty

In case of product failure, E-filliate Inc. will issue a replacement. **DO NOT RETURN PRODUCT TO STORE.** Instead, please call 888-480-9885, 8:00 a.m.-5:00 p.m. PT, Monday - Friday, or e-mail us using dewaltinfo@efilliate.com.

Products improperly used, abused or altered are not covered under policy.

Customer Service

We're here to help. If you have a problem with this product or have questions on how to use it, please contact us. You do not need to contact the retailer you purchased this product from. Please contact one of our service representatives, using the contact info listed above, before shipping merchandise to us. Please provide the product number, DXMA1902091, when contacting us.

11321 White Rock Road
Rancho Cordova, CA 95742 USA

Arbitration Clause

Any controversy or claim against E-filliate Inc. and/or Affiliated Entities shall be settled by arbitration administered by the American Arbitration Association (“**AAA**”) in accordance with its Consumer Arbitration Rules (“**AAA Rules**”). Unless otherwise agreed, any arbitration hearing(s) will take place in the city and state in which you reside. Judgment on the award rendered by the arbitrator(s) may be entered in any court having jurisdiction thereof.

Federal Communications Commission (FCC) Statement. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received,

including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide Reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by **E-filiate Incorporated** may void the FCC authorization to operate this device. Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

RF exposure statement:

The device complies RF exposure requirement and can installed and used without restriction