

Please note: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT SAFETY INSTRUCTIONS FOR ALL RECHARGEABLE BATTERIES

The battery is not fully charged upon purchase. Before using the earbuds, read the safety instructions below and then follow the charging procedures outlined.

READ ALL INSTRUCTIONS

Earbuds are splash and sweat resistant with a rating of IPX4 under IEC standard 60529.

Splash and sweat resistance are not permanent conditions and resistance might decrease as a result of normal wear and tear. Do not try to charge wet earbuds.

The charge case does not have any IP rating.

Liquid damage is not covered under warranty.

Do not incinerate the battery module even if it is severely damaged or is completely worn out. The battery can explode in a fire. Toxic fumes and materials are created when lithium batteries are burned.

If battery contents come into contact with the skin, immediately wash area with mild soap and water. If battery liquid gets into the eye, rinse attention is needed, the battery electrolyte is composed of a mixture of liquid organic carbonates and lithium salts.

Contents of opened battery cells may cause respiratory irritation. Provide fresh air. If symptoms persist, seek medical attention.

DO NOT charge or use the battery in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.

DO NOT modify the battery in any way to fit a non-compatible charger as the battery may rupture causing serious personal injury.

DO NOT splash or immerse in water or other liquids.

DO NOT store or use the earbuds in locations where the temperature may reach or exceed 105° F (40° C) (such as outside sheds or metal buildings in summer). For best life, store earphones in a cool, dry location. The True Wireless Earbuds should not be disposed of as municipal solid waste. To recycle it, contact your local hazardous waste processor or contact Call 2 Recycle® on their website, call2recycle.org, or by phone at 877-273-2925 to find the nearest drop-off location for lithium-polymer batteries.

⚠WARNING: Burn hazard. Battery liquid may be flammable if exposed to spark or flame.

⚠WARNING: Fire hazard. Never attempt to open the battery pack for any reason. If the battery pack is cracked or damaged, do not insert the charging cable. Do not crush, drop or damage the battery. Do not use the earphones if they have received a sharp blow, been dropped, run over or damaged in any way (e.g. pierced with a nail, hit with a hammer, stepped on).

Damaged batteries should be returned to a service center for recycling.

GUARANTEED FOR LIFE

E-filliate warrants to the consumer that the product and all accessories provided in the sales package ("Product") are free from material defects in material and workmanship when used normally and in accordance with operation instructions.

E-filliate will repair or replace (at E-filliate's option), without charge, a Materially Defective Product. If we repair or replace a Materially Defective Product under the terms of this warranty, this warranty also applies to repaired or replacement Products. If we repair this Product, we may use new or refurbished replacement parts. If we choose to replace this Product, we may replace it with a new or refurbished Product of the same or similar design. E-filliate will return repaired or replacement Products to you in working condition. We will retain defective parts, or equipment. Repair or replacement of Product is your exclusive remedy.

This warranty does not cover Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water or other liquid intrusion, or Product that has been damaged due to repair, alteration or modification by anyone other than an E-filliate authorized representative.

Customer Service:

We're here to help. If you are not fully satisfied with this product or have questions on how to use it, please contact E-filliate Inc. You do not need to contact the retailer from whom the product was purchased. Please contact one of our service representatives before shipping merchandise to us.

www.affiliate.com

support@affiliate.com

(800) 592-7031 toll-free

(916) 858-1000

 
(916) 858-1009 FAX

**11321 White Rock Road
Rancho Cordova, CA 95742 USA**

**Customer service representatives are available
8 a.m.-5 p.m. PT, M-F**

True Wireless Earbuds with Charging Case

Instruction Manual

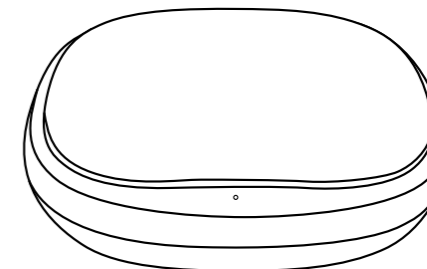

Item no: 190 9031

Package Contents

- True Wireless Earbuds - left and right
- Charging case
- Type C charging cable
- Ear cushions - 3 pairs
- User manual

 
Thank you for purchasing the **True Wireless Earbuds with Charging Case**.
With this wireless headset, you can:

- Enjoy convenient wireless hands-free calls
- Control wireless music
- Switch between calls and music

Components at a Glance


TRUE WIRELESS EARBUDS:

- 1 Microphone
- 2 Touch pad
- 3 LED indicator (earbud)

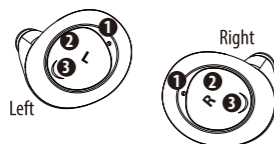


CHARGING CASE:

 - 1 Charging case
- 2 Battery light indicator
- 3 Type C charge port

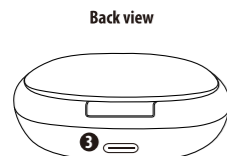

Back view

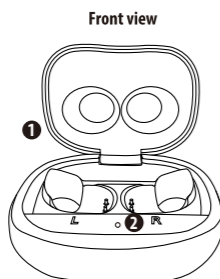 

Front view

EARBUD CUSHIONS:

- 1 3 sizes of cushions
Small, Medium & Large



CHARGER CONNECTOR CABLE :

- 1 Type C to USB



Getting Started

Charging Your Case

Connect the Type C end of the provided USB cable into the charging case, and USB A end into a power source.

- The green LED light on the front panel indicates charging in progress.
- When the case is fully charged, the green light will stay on.

Charging Your Earbuds

- Place the earbuds in the charging case. Close the charging case cover for earbuds to charge.
- The white LED light inside the charging case indicates earbud charging in progress.
- When the earbuds are fully charged, the white light turns off.

Pairing Your Earbuds with Your Bluetooth Device

1. Open the charging case, the earbuds will power on automatically and enter pairing mode, the green LED will flash. Take out both earbuds from the charging case.

2. Turn on the Bluetooth function of your Bluetooth device. Select "TWS G5" and enter the earbuds passcode "0000" (4 zeros) if prompted. For devices featuring Bluetooth 3.0 or higher, the passcode is not required.

3. When successfully connected to a phone or other Bluetooth device, you will hear "DI-DU", which means both earbuds are connecting to the Bluetooth device.

Single Earbud Pairing (Mono mode)

1. Take either earbud from the charging case. The earbud will power on automatically.

2. Turn on the Bluetooth function on your device. Select "TWS G5". Once the pairing is successful, you will hear "DI-DU".

Pairing Your Earbuds with Another Bluetooth Device

Make sure the Bluetooth function in any other previously paired device is turned off. Then follow the steps in **Pairing Your Earbuds with Your Bluetooth Device** for the new device.

Using Your Earbuds

Turn on the Bluetooth function of your Bluetooth device and take out both earbuds from the charging case. The earbuds will automatically power on and reconnect to your previously paired Bluetooth device.

If the last connected device is not available, the earbuds will search and reconnect to the next most recently connected device. The earbuds will turn off after 5 mins if no device is available.

POWER ON/OFF

Task	Multi-function button	Operation
Power on	Earbuds	Long press earbud touch button for 1.5 seconds
Power off	Earbuds	Click once then press and hold earbud touch button for 3 seconds

MANAGE YOUR MUSIC

Task	Multi-function button	Operation
Play or pause music	Right/Left Earbud	Click any earbud once
Skip forward	Right earbud	Double-click the right earbud touch button
Skip backward	Left earbud	Double-click the left earbud touch button

CALL CONTROL

Task	Multi-function button	Operation
Pick up/ Hang up	Right/Left Earbud	Click any earbud once
Reject incoming call	Right/Left Earbud	Double-click any earbud

VOICE CONTROL

Task	Multi-function button	Operation
Siri/Google	Right/Left earbud	Triple-click any earbud

LED INDICATOR STATUS

Status	Indicator
Low battery level - Charging case	White LED flashes quickly
Low battery level-Earbuds	Green LED flashes quickly for 1.5 seconds with a prompt "DI-DU" every 60 seconds.

FACTORY RESET

Press and hold earbud's touch button for 8 seconds under power off state, there will be prompt of "D00-D00" and the green LED will stay on for 1.5 seconds.

TECHNICAL DATA

EARBUDS

Music time: Up to 7 hours per charge(Total up to 40 hours with charging case)
Talk time: Up to 6 hours per charge(Total up to 35 hours with charging case)
Standby time: 300 hours
Charging time: 1 hour
Rechargeable lithium ion battery: 50mAh on each earpiece
Frequency band: 2.4 GHz ISM Band
Operating range: Up to 10 meters (33 feet)

CHARGING CASE

Charging time: 2 hours
Rechargeable Li-ion battery: 650mAh

FCC ID: 2ADH6-1909031

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.