

CLICK&GO!



Wireless
Phone Camera Remote
Instruction Manual



Thank you for purchasing the Click & Go™ Wireless Phone Camera Remote. Use it to remotely activate your smartphone's front or rear camera for still photos or video.

Before using your Click & Go™ Wireless Phone Camera Remote for the first time, please read these instructions carefully.

Package contents

- Click & Go™ Phone Camera Remote
- 1 (one) CR2032 battery (pre-installed)
- Attachable lanyard

Important safety information

This device uses a disposable battery. Improper use of batteries can result in corrosive fluid release, overheating or explosion. Battery fluid is both toxic

and corrosive and can cause burns. To reduce risk of injury, keep batteries out of reach of children. Do not open or puncture batteries. Do not incinerate or heat batteries, and keep them out of hot places. Batteries need to be disposed or recycled in accordance with local laws. To recycle used batteries, contact your local hazardous waste processor, or contact Call2Recycle (website call2recycle.org, phone 877.273.2925) to find the nearest drop-off location for expired batteries. If a battery leaks inside the battery compartment, carefully remove all batteries and clean the battery compartment with a damp paper towel, taking care to not contact skin with the battery fluid. If battery fluid comes into contact with skin, flush with water immediately.

Other precautions

This product is not a toy. Keep the Click & Go™ Wireless Phone Camera Remote away from children. Do not drop or toss the camera remote or use excessive force when operating it.

This product is not waterproof and should not be used around water or in areas with excessive moisture.

Keep the camera remote away from excessive heat or cold. Avoid operating or storing the camera remote near fire, on stoves, or inside sealed cars in hot weather.

Note Operation of the Click & Go™ Wireless Phone Camera Remote does not require an app download. The remote is operational once it is paired with your phone.

Replacing the battery

The Click & Go™ Wireless Phone Camera Remote requires one “CR2032” battery which is pre-installed and should last approximately one year. To replace the battery, first use a small screwdriver to remove the cover from the battery compartment. Then replace the battery, taking care to maintain the same orientation. Replace the battery compartment cover.

Pairing

Before using, you must first pair the Click & Go™ Wireless Phone Camera Remote to your phone.

To pair the remote to your phone, turn Bluetooth® on your phone or tablet. To activate searching mode, press the button on Click & Go™ shutter for 3 seconds until the indicator light is flashing. Choose “Click&Go” from the list and press “pair.” Turn on the camera app on your phone or tablet. If the pairing is lost, repeat this procedure.

Compatibility:

Click & Go™ works with the following iOS devices:
iPhone 6 Plus, iPhone 6, iPhone 5S, iPhone 5C, iPhone 5, iPhone 4S, iPhone 4, iPad mini, iPad Air, iPad (4th generation), iPad (3rd generation), iPad 2, iPod touch (5th and 4th generation). Requires iOS 6.0 or later.
Click & Go™ works with the following Android devices:
Samsung Galaxy S 5, S 4, and S III, Galaxy Note 3, 2, Tab 2, Note 8.0, and Note 10.1, Google Nexus 4, 5, 6, 7, 9, and 10. Requires Android 4.1 or later.
Click & Go™ may not be compatible with any other Samsung or Android devices.

Operation

To use the Click & Go™ Wireless Phone Camera Remote, position your phone where you want to take pictures from. You may want to use a portable tripod to stabilize your phone to minimize the risk of damage.
Now get into the picture! When you and your fellow camera subjects are ready, press the button on Click & Go™ Wireless Phone Camera Remote. The captured image will be stored on your phone where camera images are normally stored. You can remotely capture as many pictures as your phone's memory allows.
When using movie-capture apps, pressing the remote button will begin video capture. Pressing it again will end capture and save the video segment.

The Click & Go™ Wireless Phone Camera Remote can be used up to 30 feet (10m) from the phone, but radio interference, walls, windows and other obstacles may reduce that distance.

Troubleshooting tips

- The Click & Go™ Wireless Phone Camera Remote will go to sleep after 90 sec if there is no connection. Once it is paired correctly, the device will sleep after 2 minutes without any action. When it is in sleep mode, press any key to wake up the device.

Lifetime Limited Manufacturer's Warranty

For the life of this product, E-filliate warrants that this product shall be free of defects in materials and workmanship.

Customer service

We're here to help. If you have a problem with this product or have questions on how to use it, please contact E-filliate Inc. You do not need to contact the retailer you purchased this product from. Please contact one of our service representatives before shipping merchandise to us.

E-filliate Inc.

www.efilliate.com

support@efilliate.com

(800) 592-7031

(916) 858-1000

FAX (916) 858-1009

11321 White Rock Road

Rancho Cordova, CA 95742

Customer service representatives are available between 8 a.m. and 5 p.m. Pacific time, Monday through Friday.

Trademarks

Android™ and Nexus® are trademarks of Google Inc.

Bluetooth® is a registered trademark of Bluetooth® SIG, Inc.

iPad®, iPhone® and iPod touch® are registered trademarks of Apple Inc.

Galaxy S® and Galaxy Note® are registered trademarks of Samsung Electronics Co., Ltd.

Click & Go™ is a trademark of E-filliate Inc.

All other marks are properties of their respective owners.

Declaration of Conformity

This device complies with part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct

the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult an experienced radio/TV technician for additional help.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.