


208.5 mm

88.9 mm

Powerbank with wireless charger Instruction Manual XO-9771

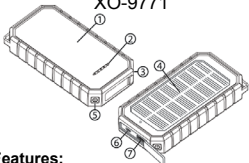

Features:

1. Wireless Charging Surface
2. LED Indicators
3. Flashlight
4. Solar Panel
5. ON/OFF Button
6. Type-C Input
7. USB A Output

What's included:

- 1 x 10000 mAh Fast Wireless Power Bank
- 1 x USB to Type C Charging Cable
- 1 x Instruction Manual

Tech Specifications

- Battery: 10000mAh/37Wh
- Type-C Input: DC5V/2.4A; 9V/1.67A
- USB A Output/Type C Output: DC5V/2.4A max
- Wireless Output: 5W/7.5W/10W Fast Charge
- Solar Panel Input: 5V/150mA

LED Indicators:

- ON/OFF Button: Press once to view the remaining power capacity.
- There is a total of 5 LED indicators, starting from left to right with the first three LEDs showing remaining capacity(30%-65%-100%).
- The remaining 4th and 5th LEDs shows the wireless charging for 10W and 5W devices.

INSTRUCTIONS:

1. Charging the Powerbank:

- Charge the powerbank fully before usage.
- Connect the provided charging cable to a quick charge AC adapter and to the Type-C charging port on the powerbank(6).
- Once connected the LED Indicator will begin to flash blue when charging, once fully charged LED will turn solid BLUE.

2. Charging mobile phones and other electronic devices:

- Connect the charging cable to your mobile phone/device using the appropriate connector. Connect the USB part of the cable into USB A Output(7) or Type C tip into Type C input (6). LED indicator will illuminate when charging.
- Remove the USB cable from your mobile device when it is fully charged.

3. Wireless Charging Function:

- To turn on the wireless charging function, Press the ON/OFF button(5), the 5th LED indicator will glow RED, then 4th one glows GREEN.
- Place wireless charging supported mobile device on the charging surface(1). If the device supports 5W, LED indicator displays RED; If the device supports 10W, LED indicator displays GREEN.
- Phone will begin to charge automatically.
- ** Note: When wireless charging, if the LED indicator flashes RED, there is an object between the device and charging surface interfering with the charging process.

4. Activate Flashlight Function(3):

- To activate the flashlight press and hold the ON/OFF button until the light turns ON.
- Press and hold to turn OFF the light.

5. Charging with the Solar Panel:

- Place power bank in bright/consistent sunlight.
- Power bank will begin to charge once exposed to the sunlight.

SAFETY PRECAUTIONS:

WARNING—When using this product, basic precautions should always be followed, including the following:

1. Read all the instructions before using the product.
2. Charge the power bank fully before initial use.
3. The unit's full performance is achieved only after 2 or 3 completed charge and discharge cycles.
4. To reduce the risk of injury, close supervision is necessary when the product is used near children.
5. Do not expose the device to moisture.
6. Do not use the device in excess of its output rating. Overload outputs above rating may result in a risk of fire or injury.
7. Do not use the device if damaged or modified.
8. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
9. Do not disassemble the device. Take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or injury.
10. Do not use or store product in extreme temperatures. Do not leave the product in a vehicle. High Temperatures may shorten the life expectancy of the product or result in overheating and explosion.

11. Have servicing performed by a qualified repair person using only identical replacement parts.
12. This will ensure that the safety of the product is maintained.
13. Do not overcharge Phone. Unit may get hot with excessive use. Remove Phone when it is fully charged. Never charge for more than 7 hours at a time.
14. Attachments on the back of your phone can impede the effectiveness of the wireless charger, and lead to overheating. You must remove attachments from the phone before charging on this device.

** Note: In order to charge devices, use only the accessory cable or the cable included with your own device by the manufacturer.

FCC Statement:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.