

Budget Outdoor Speaker

FCC ID: 2ADK3XO-9838

Functions:

- 1.Vol-/Previous Track
- 2.Play/Pause/Power Button
- 3.Vol +/Next Track
- 4.Micro-USB charging port
5. Microphone

What's included:

- 1 x Speaker
- 1 x USB to Micro-USB Charging Cable
- 1 x Instruction Manual

Tech Specifications:

- * Playtime:up to 2 hours at max volume
- * Charging time: about 2 hours
- * Pairing Name: "Blackwater Speaker"

Instruction:

1. Charging the Speaker: Connect the provided charging cable to a power source and to the micro USB port on the speaker.

Red LED light when charging the speaker, light turn OFF when fully charged

2. Bluetooth Setup:

Press and hold power button to turn ON the speaker ,LED Indicator will flash BLUE when in pairing mode. Turn on the Bluetooth function on mobile device, Select "Blackwater Speaker" pairing name. LED will turn solid BLUE if successfully paired, Speaker will Remark:automatically pair if the mobile device has been paired before.

Playing Music:

Short press “Power Button” key to pause music.

A second short press will resume playing music again. Long press “Previous track/Vol-” , the speaker will play the previous track.

Short press to reduce speaker volume. Long press “Vol+/Previous Track”, the speaker will play the next track.

Short press to increase speaker volume.

Call Function:

Short press “Power Button” to answer a incoming call, press again to end call.

Long press to reject the call.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.