 
 


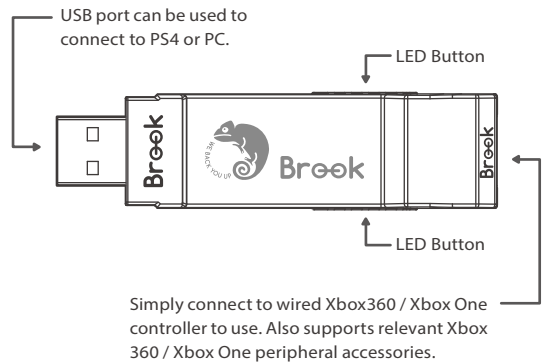

X360, X1, Xbox Elite 1, Xbox Elite 2 → PS4

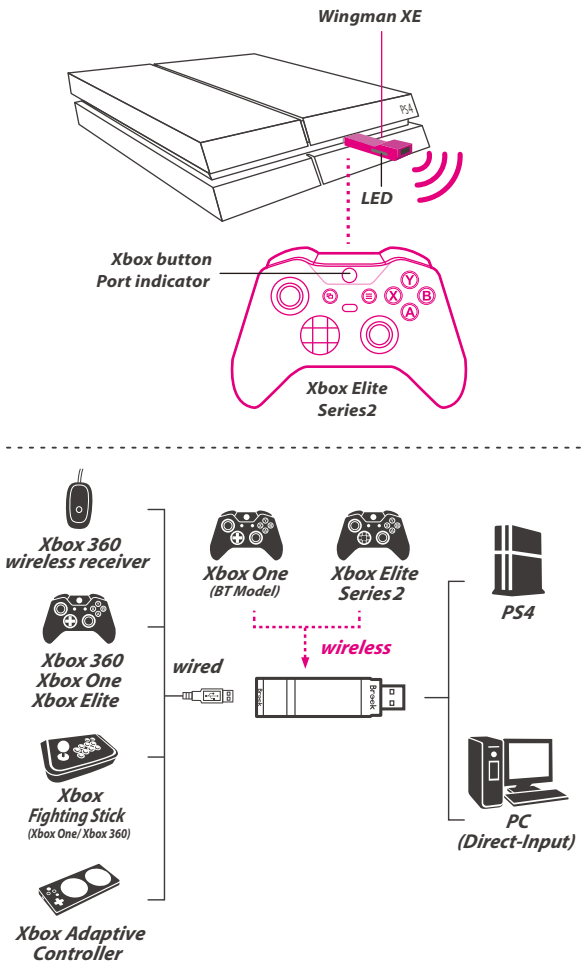

• Each Wingman XE can only connect to a single Xbox 360 / Xbox One device. Wingman XE supports most of the accessories that are compatible with original factory specifications. To expand the number of supported accessories, firmware will be updated irregularly.



LED Display	
Lighting	Status
Blue LED Permanently on	The connector and the device are currently connected.
Blue LED Slow blinking (Once every two seconds)	Wired device is not connected Wireless device is searching for connection...
Blue LED Fast blinking	Wireless connection mode is ON. Searching for pairing device...
Red LED Blinking	Turbo-Remap button is being pressed
Red LED Permanently on	Entering Turbo-Remap Settings

Connecting to the Device

step.1
Insert Wingman XE into the PS4 console USB port. Slow blinking of the **Blue LED** indicates that the connection to the console is successful.

step.2
Wired Connection:
Connect the X360/X1 wired controller or game pad to Wingman XE through the USB port.

Using a X360 wireless controller:
Simply connect the X360 wireless receiver to the Wingman XE through the USB port.

Wireless Connection:
Connect the Xbox One wireless controller (Bluetooth model) or the Xbox One Elite Series 2 to the Wingman XE and the controller will be ready for use. When connecting, hold the LED buttons at the two sides of the Wingman XE for 1 second to enter wireless connection mode. Then press the **Pair button** on the wireless controller to begin pairing. Fast blinking of **Blue LED** indicates that pairing is in progress.

step.3
Check whether the two **Blue LEDs** at the sides of the Wingman XE are permanently on. This indicates that the connection is completed.

Connection Pairing Supplementary Instructions

step.1
Holding the LED buttons on the two sides of the Wingman XE for 1 second will activate wireless connection pairing mode. The Wingman XE will engage in pairing with surrounding Bluetooth devices. The pairing mode will end if:
A. The connection pairing with the wireless controller is successful.
B. The connection pairing is unsuccessful after 1 minute.
C. The LED buttons are held for 1 second.


step.2
Wireless connection records between an Xbox One wireless controller (with Bluetooth function)/Xbox One Series 2 and the Wingman XE will be erased if a wired connection is used. Wireless connection re-pairing will be required if wireless connection is used.

step.3
If Xbox One Elite Series 2 controller is used, please turn off controller profile settings to prevent interference with Wingman XE's Turbo or Remap settings. As Xbox One Elite Series 1 controller is incapable of turning off profile settings, using Xbox One Elite Series 1 controller might result in Remap function overlapping.

Corresponding Buttons		
List for PS4, Xbox360 and XboxOne Game Pads		
PS4 Game Pad	Xbox360 Game pad	XboxOne Game pad
D-Pad (U/D/L/R)		
Lx / Ly		
Rx / Ry		
×	A	A
○	B	B
□	X	X
△	Y	Y
L1	LB	LB
R1	RB	RB
L2	LT	LT
R2	RT	RT
L3	LSB	LSB
R3	RSB	RSB
OPTIONS	START	MENU
SHARE	BACK+ START	VIEW+ MENU
PS Key	Xbox Guide Key	Xbox Guide Key
TouchPad Key	BACK	VIEW

Touch Pad Simulation Function

Using the Xbox 360 controller:
BACK + R Stick can simulate the PS4's Touchpad button.
BACK + START can simulate the PS4's SHARE button.

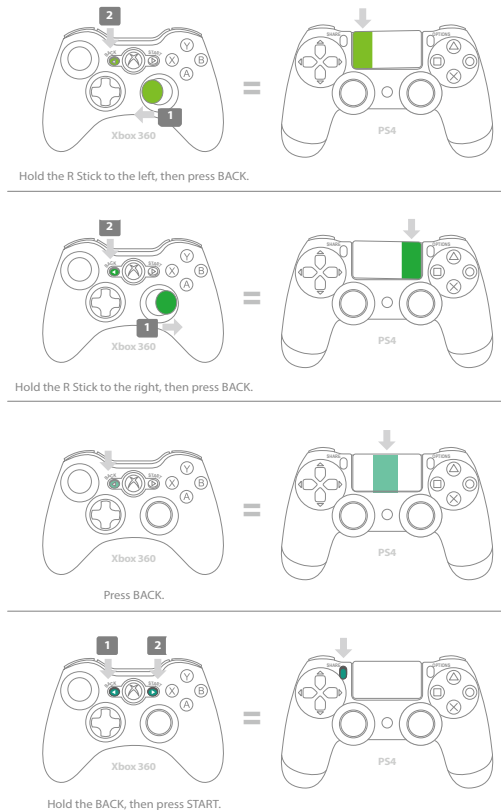

Touch Pad Simulation Function

Using the Xbox One controller:
VIEW + R Stick can simulate the PS4's Touchpad button.
VIEW + MENU can simulate the PS4's SHARE button.



Turbo Function Settings

The following instructions are based on the Xbox One controller. For those using an Xbox 360 controller, please refer to the **Corresponding Buttons List for PS4, Xbox360 and XboxOne Game Pads**.

Turbo Function Settings
Buttons that can be set as Turbo function buttons include: A, B, X, Y, LB, RB, LT, RT, LSB, RSB 10 (hereinafter referred to as FK)

Step 1. Enter setting mode:
Press VIEW + Xbox Guide, the **RED LED** of the Wingman XE will be permanently on.

Step 2. Choosing a FK button: (e.g. Setting A as turbo function)
Hold VIEW, then press A

Step 3. Completing Setting Mode:
Release all buttons, then press MENU to save settings.

Step 4. Exit setting mode:
Press Xbox Guide, the **BLUE LED** of the Wingman XE will be permanently on.

Cancelling Turbo Function

Step 1. Enter setting mode:
Press VIEW + Xbox Guide, the **RED LED** of the Wingman XE will be permanently on.

Step 2. Erasing all Turbo function buttons
Press VIEW + MENU

Step 3. Exit setting mode:
Press Xbox Guide, the **BLUE LED** of the Wingman XE will be permanently on.

Button Remap Settings

The following instructions are based on the Xbox One controller. For those using an Xbox 360 controller, please refer to the **Corresponding Buttons List for PS4, Xbox360 and Xbox One Game Pads**.

Button Remap Settings
Buttons that can be Remap include: A, B, X, Y, LB, RB, LT, RT, LSB, RSB 10 (hereinafter referred to as FK)

Step 1. Enter setting mode:
Press MENU + Xbox Guide, the **RED LED** of the Wingman XE will be permanently on.

Step 2. Choosing a FK button: (e.g. Setting X as A+B) Press X

Step 3. Choosing button to be set:
Hold VIEW, then press A + B.

Step 4. Completing setting mode:
Release all buttons, then press MENU to save settings.

Step 5. Exit setting mode:
Press Xbox Guide, the **BLUE LED** of the Wingman XE will be permanently on.

Cancelling Button Remap Settings

Step 1. Enter setting mode:
Press MENU + Xbox Guide, the **RED LED** of the Wingman XE will be permanently on.

Step 2. Erasing all settings for Button Remap Settings.
Press VIEW + MENU.

 
Step 3. Exit setting mode:
Press Xbox Guide, the **BLUE LED** of the Wingman XE will be permanently on.

FCC Statement:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.
• Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
• Ambient Operating Temperature0°C to +50°C


CE
FCC ID: 2ADKM005A
P/N: Wingman XE
M/N: ZPP005A, ZPP005C, ZPP005D, ZPP005F
For more details please visit our official website at **www.brookaccessory.com**
202006V2



X360, X1, Xbox Elite 1, Xbox Elite 2 均可 ➡ PS4

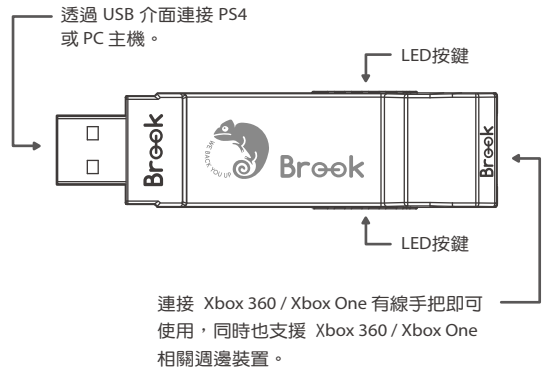

 - 每個 Wingman XE 一次僅能對應一支 Xbox 360 / Xbox One 裝置。Wingman XE 支援大多數符合原廠規格之相容配件，並不定時藉由韌體更新擴充支援清單。

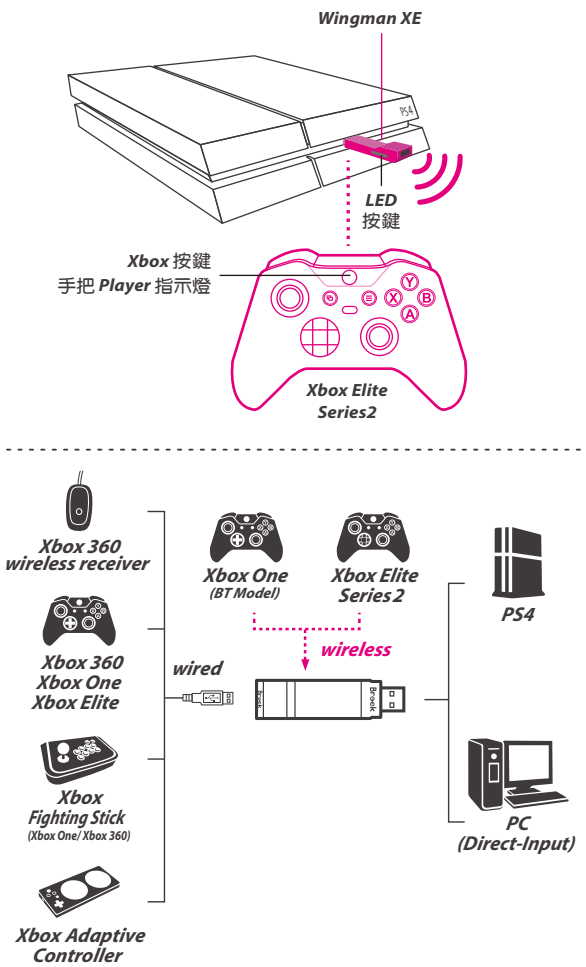

LED	
燈 號	狀 態
藍色 LED 恆亮	轉接器與裝置連線工作中
藍色 LED 慢速閃爍 (兩秒閃一次)	有線裝置未接續、無線裝置連線搜尋中
藍色 LED 快速閃爍	無線註冊模式啟動、搜尋配對裝置中
紅色 LED 閃爍	Turbo-Remap 功能鍵被按下
紅色 LED 恆亮	進入 Turbo-Remap 設定模式

連線使用

step.1
將 Wingman XE 連接到 PS4 主機的 USB 連接埠，當 藍色 LED 慢速閃爍即代表與主機連線成功。

step.2
有線連接：
將 X360/X1 有線手把或大搖台以 USB 線連接至 Wingman XE 即可使用。

無線連接：
將 Xbox 360 無線遊戲接收器與 Wingman XE 透過 USB 介面連接即可使用。

無線連接：
將 Xbox One 無線控制器（藍芽規格）或 Xbox One 菁英手把二代與 Wingman XE 進行無線配對連線後即可使用。配對時需按壓 Wingman XE 兩側的 LED 按鍵1秒鐘以進入無線配對狀態，並按下無線控制器上的無線註冊鍵以進行配對。此時呈現藍色 LED 快速閃爍狀態。

無線註冊鍵

step.3
確認 Wingman XE 兩側顯示為 藍色 LED 恆亮，即表示遊戲控制器連線完成。

配對補充說明

step.1
按壓 Wingman XE 兩側的 LED 按鍵1秒鐘後會進入無線配對模式，並會對周遭的藍芽裝置進行配對，當發生以下任一狀況時會退出配對模式：

- A. 與無線手把配對成功
- B. 配對超過一分鐘仍未成功
- C. 再次按壓 LED 按鍵 1 秒鐘

step.2
使用 Xbox One 無線控制器（藍芽規格）或 Xbox One 菁英手把二代與 Wingman XE 進行無線配對後，若改為有線連接，將導致控制器本身的無線配對紀錄被清除。再次以無線連線方式使用時，需重新進行無線配對。

step.3
若使用 Xbox One 菁英手把二代，請關閉手把的 Profile 設置，以避免與 Wingman XE 本身的 Turbo 或 Remap 設置互相干涉。Xbox One 菁英手把一代因沒有關閉 Profile 功能，可能造成 Remap 功能的重疊。

按鍵配置對應表		
PS4, Xbox360, XboxOne 手把		
PS4 手把	Xbox360 手把	XboxOne 手把
D-Pad (U/D/L/R)		
Lx / Ly		
Rx / Ry		
×	A	A
○	B	B
□	X	X
△	Y	Y
L1	LB	LB
R1	RB	RB
L2	LT	LT
R2	RT	RT
L3	LSB	LSB
R3	RSB	RSB
OPTIONS	START	MENU
SHARE	BACK+ START	VIEW+ MENU
PS 鍵	Xbox 鍵	Xbox 鍵
觸控板鍵	BACK	VIEW

觸控板模擬功能

使用 **Xbox 360** 控制器：

Back 按鍵加上右搖桿可模擬 PS4 的觸控板按鍵。

Back 按鍵加上 START 按鍵可模擬 PS4 SHARE 按鍵。

Hold the R Stick to the left, then press BACK.

Hold the R Stick to the right, then press BACK.

Press BACK.

Hold the BACK, then press START.

觸控板模擬功能

使用 **Xbox One** 控制器：

VIEW 按鍵加上右搖桿可模擬 PS4 的觸控板按鍵。

VIEW 按鍵加上 MENU 按鈕可模擬 PS4 SHARE 按鍵。

Hold the R Stick to the left, then press VIEW.

Hold the R Stick to the right, then press VIEW.

Press VIEW.

Hold the VIEW, then press MENU

連射功能設定

以下說明使用 Xbox One 控制器為範例，使用 Xbox 360 控制器請參照按鍵配置對應表。

連射功能設定

允許設定連射功能的按鍵包括：A、B、X、Y、LB、RB、LT、RT、LSB、RSB 10個按鍵（以下稱為FK）。

Step 1. 進入設置模式：
按 VIEW + Xbox Guide 鍵，Wingman XE 將顯示 紅色 LED 恆亮。

Step 2. 選擇 FK 按鍵：(例如，A 設置 Turbo 功能)
按住 VIEW，然後按 A。

Step 3. 完成設置模式：
釋放所有按鍵，然後按 MENU 儲存設定。

Step 4. 退出設置模式：
按 Xbox Guide 鍵，Wingman XE 將顯示 藍色 LED 恆亮。

取消連射功能

Step 1. 進入設置模式：
按 VIEW + Xbox Guide 鍵，Wingman XE 將顯示 紅色 LED 恆亮。

Step 2. 清除所有 Turbo 功能按鍵：
按 VIEW + MENU 鍵。

Step 3. 退出設置模式：
按 Xbox Guide 鍵，Wingman XE 將顯示 藍色 LED 恆亮。

重新分配設定

以下說明使用 Xbox One 控制器為範例，使用 Xbox 360 控制器請參照按鍵配置對應表。

重新分配設置

允許重新分配設置的按鍵包括：A、B、X、Y、LB、RB、LT、RT、LSB、RSB 10個按鍵（以下稱為FK）。

Step 1. 進入設置模式：
按 MENU + Xbox Guide 鍵，Wingman XE 將顯示 紅色 LED 恆亮。

Step 2. 選擇 FK 按鍵：(例如，X 做 A + B 功能)
按 X 鍵。

Step 3. 選擇重新分配按鍵：
按住 VIEW，然後按 A + B 鍵。

Step 4. 完成設置模式：
釋放所有按鍵，然後按 MENU 儲存設定。

Step 5. 退出設置模式：
按 Xbox Guide 鍵，Wingman XE 將顯示 藍色 LED 恆亮。

取消重新分配

Step 1. 進入設置模式：
按 MENU + Xbox Guide 鍵，Wingman XE 將顯示 紅色 LED 恆亮。

Step 2. 清除所有重新分配按鍵的設定：
按 VIEW + MENU 鍵。

Step 3. 退出設置模式：
按 Xbox Guide 鍵，Wingman XE 將顯示 藍色 LED 恆亮。

低功率電波輻射性電機管理辦法

▶ 第十二條
經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

▶ 第十四條
低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

P/N: Wingman XE
M/N: ZPP005A, ZPP005C, ZPP005D, ZPP005F

更多詳細操作請上 Brook 官網查詢
www.brookaccessory.com

202006V2

