 


**NONSTOP™**

# Station **A**

 
 
Setup &  
Usage Guide

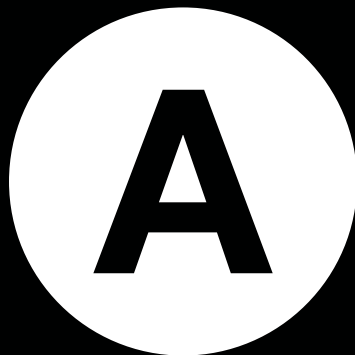

Qi Certified Fast Wireless charging

## Interface & Display

- 1 Qi charging area
- 2 USB CHARGING PORT (1A)
- 3 USB CHARGING PORT (2.4A)
- 4 Bluetooth audio button
- 5 Volume lower button
- 6 Snooze
- 7 Volume louder button
- 8 Aux In button
- 9 ALARM button
- 10 DIMMER button
- 11 MINUTE Set button
- 12 HOUSE Set button
- 13 Time display
- 14 Alarm display
- 15 Date display
- 16 Aux In Audio indicator
- 17 Bluetooth indicator
- 18 Qi Charging indicator
- 19 Auto DST indicator

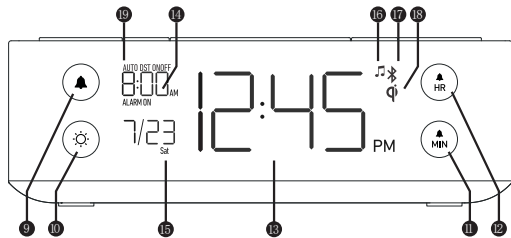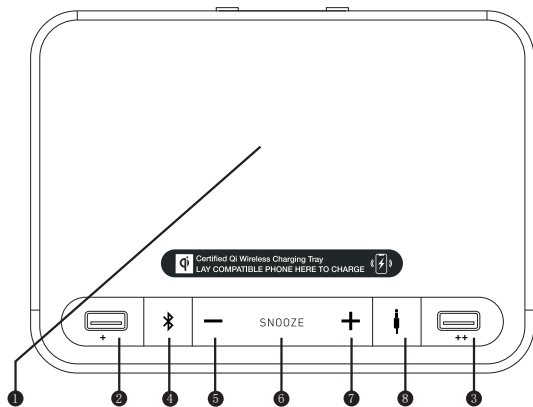


## Back Panel & Ports

- 20 Port cover latch
- 21 Line in cord pass through
- 22 Power cord pass through
- 23 Security screws
  
- 24 Aux In Audio port
- 25 DC Power port
- 26 Time Set button
- 27 Hour Quick Adjust button


## Specifications

Power .....	DC 9V 4.0A Adapter
AC Power Supply .....	100-240V ~ 50/60Hz 1.0A Max
Qi Charging Pad .....	10W
USB Charging Ports .....	1A / 2.4A

 Port Cover Closed

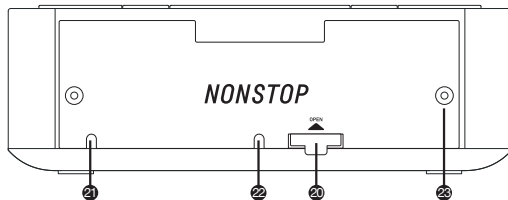

Port Cover Open

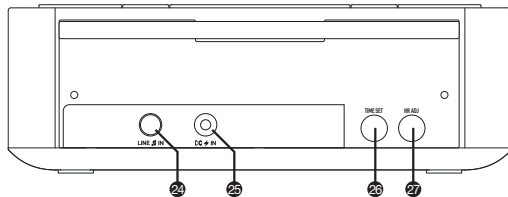 

## Installation

Open the Port Cover and insert the small end of the AC/DC adapter into the DC Power port located on the back of the Station A. Connect the other end to a wall outlet (110V AC).

If desired, connect the Aux In Audio cord into the port.

Align the cord(s) to the pass through openings and close the Port Cover. If desired, use the security screws to limit guest access to the ports.

## Quick Time Set

Station A comes with the date and time already set.

To simply adjust the hour to your local time zone, press the "Hour Adjust" button on the back of Station A.

## Auto DST

Auto-DST by default will ship as "on".

Press both "time set" and "hour adjust" together to toggle DST on/off, the display will show "AUTO DST OFF" or "AUTO DST ON" momentarily above the alarm time on the upper left.

## Full Date & Time Set

1. On the back of Station A, press and hold TIME SET button, the hour digits will flash. Press HOUR button to set the hours. (You can tap or hold down to change the time faster). As you cycle through, the hours will change from AM to PM.
2. Press TIME SET button again, the minutes digits will flash. Press MINUTE button to set the minutes.
3. Press TIME SET button again, with the display will begin flashing "18 ", press the HOUR button or MINUTE button to set the years.
4. Press TIME SET button again. The display will flash "1/1 ", press the HOUR button repeatedly to advance the correct current month, then press TIME SET button to confirm.
5. Now set the day by pressing the MINUTE button repeatedly to advance the current day, then press TIME SET button again to confirm (or if no key pressed for about 10 seconds, it will automatically exit the setup).

## Setting the Alarm

To set the time, press the HR button and MIN button to change the alarm time.

Press the ALARM button to turn "ON". When the alarm is on, the 📌 icon will appear the display.

## Using the Alarm

To snooze, tap the SNOOZE button on the top. The Alarm will sounds again after 10 minutes.

To STOP Alarm, press the ALARM button. The 📌 icon on the display will turn off and the alarm will not sound the next day.

## Display Brightness

There are three (3) levels of display brightness. Repeatedly press the DIMMER button to select the desired setting.

## Qi wireless charging

Place your wireless device on top of the Station A. Charging will begin on contact. When wirelessly charging, the Qi charging indicator will flash slowly.

**NOTE:** Works with all Qi certified compatible devices including: iPhone 8, iPhone X models and Android Phones.

**NOTE:** Provides 10W of charging power for faster Qi wireless charging.

**NOTE:** Station A has a protective circuit that detects when foreign objects or devices that are Qi certified are placed on the charging and will disable power to the charger as a safety precaution. When triggered the LED indicator will flash quickly.

## USB Charging

Station A features two USB charging ports located on the front of the device. The USB port on the left indicated by "+" provides 1A of power to charge phones and other devices. The USB port on the right indicated by "++" provides 2.4A of power to charge phones and other devices.

## Listening with Bluetooth

1. With the Station A plugged in, press the BLUETOOTH button to turn on the speaker in Bluetooth mode. The Bluetooth icon will appear on the display and flash.
2. Power on your Bluetooth compatible device and search for "Station A" under the Bluetooth settings of your audio streaming device. After a few seconds it should detect the Station A, at which time you can select the Station A and establish a wireless Bluetooth connection. The Bluetooth icon will stop flashing.
3. Tap + or - button to increase or decrease volume;

### NOTE:

When in pairing mode, it will only last for 30 seconds, then it will stop being available to pair.

The range for Bluetooth is a max of approximately 30ft.

To disconnect a device that is connected, press and hold the Bluetooth buttons for 2 seconds.

To turn the speaker off, hold the Bluetooth button down for 5 seconds.

## Listening with Aux In Audio

1. To listen to music from an external audio device (e.g. iPhone, iPad, iPod shuffle, mobile phone, MP3 player, digital media player, etc.) plug the aux in 3.5mm audio cable in the the headphone port on your device.
2. Press the Aux In button to turn the speaker on. The Aux In music icon will be displayed on the screen.
3. Press + or - to increase or decrease volume.
4. Press the Aux In button again to turn the speaker off.

### NOTE:

When using Aux In, the playback volume is set by both the volume on Station A and the output volume on your attached playback device. If no audio is heard, please make sure that the volume on both Station A and your attached device is turned up.

## SAFETY PRECAUTIONS

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or ground-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
13. **SURGE PROTECTORS:** It is recommended to use a surge protector for AC connection. Lightning and power surges ARE NOT covered under warranty for this product.
  - a. Do not expose this unit or the AC/DC adaptor to dripping or splashing water. Keep liquid-filled objects, such as vases, away from this unit and AC/DC adaptor.
  - b. To ensure that this unit is completely disconnected, unplug it from the wall.
  - c. Ensure that the AC/DC adaptor is easily accessible.
  - d. Please note the information printed underneath the unit.
  - e. Do not impede the ventilation of this unit by covering the ventilation openings with items such as newspapers, table-cloths, curtains, etc.
  - f. Keep open flames, such as lighted candles, away from this unit.
  - g. Do not place this unit in closed bookcases, racks, or other spaces without proper ventilation.

## FCC STATEMENTS

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Compliance information: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limit set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body

### Supplier's Declaration of Conformity

Product Name: Station A

Model number: NSA

Responsible party:

Nonstop, Inc.

+1 775-398-3038

connect@nonstopproducts.com





## CAUTION

RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**

---



**DANGEROUS VOLTAGE:** The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

---



**ATTENTION:** The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

---

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

---

**ATTENTION: POUR ÉVITER LES CHOC ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISES ET POUSSER JUSQU'AU FOND.**

---

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.**

***NONSTOP***<sup>TM</sup>

Nonstop Inc. All Rights Reserved.