

# MODULE LIGHT SPEAKER User's Manual

## 1. Installation



## 2. Function

The MODULE LIGHT SPEAKER: 1102136 (120V/60Hz) plays songs through radio frequencies and Bluetooth modules. Turn on the Bluetooth feature on your phone, and you'll instantly find the FAN SPEAKAR Bluetooth device and click to connect. Open the music player software on the phone and play the music through the Bluetooth speaker.

## 3. Warning

DISCONNECT POWER AT SERVICE ENTRANCE BEFORE CLEANING OR SERVICING. ADD GRILLE CURRENT TO FAN CURRENT FOR TOTAL CURRENT DRAW. INSTALL ONLY WITH MODELS INDICATED IN THE INSTALLATION INSTRUCTIONS.

COUPEZ L'ALIMENTATION AU PANNEAU ÉLECTRIQUE AVANT LES TRAVAUX DE NETTOYAGE OU D'ENTRETIEN. ADDITIONNEZ LA CONSOMMATION DE COURANT DE LA GRILLE À CELLE DU VENTILATEUR POUR OBTENIR L'APPEL TOTAL DE COURANT. S'INSTALLE UNIQUEMENT AVEC LES MODÈLES INDIQUÉS DANS LES DIRECTIVES D'INSTALLATION.

## **FCC WARING**

Any Changes expressly or modifications not approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### **FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .

This transmitter must not be co - located or operating in conjunction with any other antenna or transmitter.

This equipment should be installed and operated with minimum distance 20cm between the radiator &you body.

## **ISEDC RSS warning**

This device complies with Innovation, Science and Economic Development Canada Compliance licence-exempt RSS standard (s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

*Le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:*

- (1) *l'appareil ne doit pas produire de brouillage, et*
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.*

### **ISEDC Radiation Exposure Statement:**

This equipment complies with ISEDC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.

### **IC exposition aux radiations:**

Cet équipement est conforme avec ISEDC les limites d'exposition aux rayonnements définies pour un contrôlé environnement. Cet émetteur ne doit pas être co-localisés ou fonctionner en conjonction avec une autre antenne ou émetteur . Cet équipement doit être installé et fonctionner à au moins 20 cm de distance d' un radiateur ou de votre corps.