
Size: 222.75(W) x 100(H)mm

FRONT SIDE

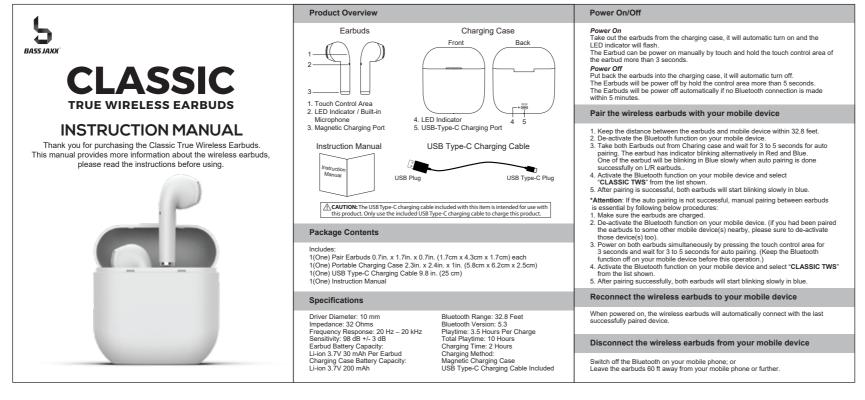

BACK SIDE

Answer / Reject a call	FAQ	
When receive a call, click touch control area once (on either earbud) to accept the call, or answer the call normally via your mobile phone. Touch and hold touch control area for 2 seconds to reject it.	If the wireless earbuds cannot be paired with your device, please try the following: Ensure that your earbuds are in pairing mode or reconnection mode Ensure that Bluetooth search function of your mobile device is activated.	FCC STATEMENT 1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference.
End a call	If the wireless earbuds will not turn on:	 (1) This device may not cause naminal interference. (2) This device must accept any interference received, including interference that may cause undesired operation.
To end the call, just click touch control area once at any side of earbud with Beep sound to end it.	Make sure the earbuds are fully charged. Can I change the battery for the earbuds and the charging case?	Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Functions	The wireless earboards and the charging case use a built-in non-detachable battery which cannot be removed.	NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a
Pause / Play Music: Click touch control area once. Skip to next track of music: Double click the touch control area.	If the charging case cannot be recharged: If you use a power outlet, ensure that the power supply is connected securely	residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction
Charging your Earbuds	and the outlet works. If you use a computer, ensure that it is connected and the USB port is powered.	may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which
 Open the charging case cover. Insert the Classic Earbuds into the charging case. The earbuds will start to charge automatically. LED indicator of the earbud will be turned to Red when charging your earbuds. The Blue LED on Charging case will be on. Once fully charged, all LED will be off. 	 ⚠ Safety instructions for the lithium battery and charging the product The input voltage to the product is 5V 1A. In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/ adapter for charging the product. 	 can be determined by turning the equipment off and on, the user is encouraged try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which th receiver is connected. Consult the dealer or an experienced radio/TV technician for help.
Recharge Charging Case	 Only charge the product at ambient temperatures between 10°C/ 50°F and 40°C/104°F. 	RF warning statement:
⚠ For your safety, please always use appropriate 5V input charger/Adapter to charge the product. DO NOT USE Quick Charging USB Adapter to charge the product, as it might damage the product. 1. Use the USB Type-C charging cable provided with the packaging. 2. Connect the USB Type-C plug to USB Type-C charging port on the charging case, then connect the USB plug to a USB port on a computer or wall adapter to begin charging.	 Do not heat above 70°C/158°F, eg. Do not expose to sunlight or throw into fire. Switch off the product after use. Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user 	The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.
 The Red LED on the charging case will be flashing during charge. Once fully charged, the Red LED will be on. NOTE: You must select a qualified charger from a regular manufacturer.	using this product In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development.	FCC ID: 2ADM5-EP-0652-C ITEM# EP-0652-AST6
• You must charge the charging case and earbuds if it has been not used for more than 6 months. USB Plug USB Type-C Plug		Distributed by 1616 Holdings, Inc 701 Market Street, Suite 20 Keep All Relevant Information For Philadelphia, PA 1910 Future Reference Made in China
oob i lug oob i lype o riug		Future Reference Made in China

