
Date: 18 Jan 2022 Product: EP-0655 IM

Size: 222.75(W) x 100(H)mm



FRONT SIDE

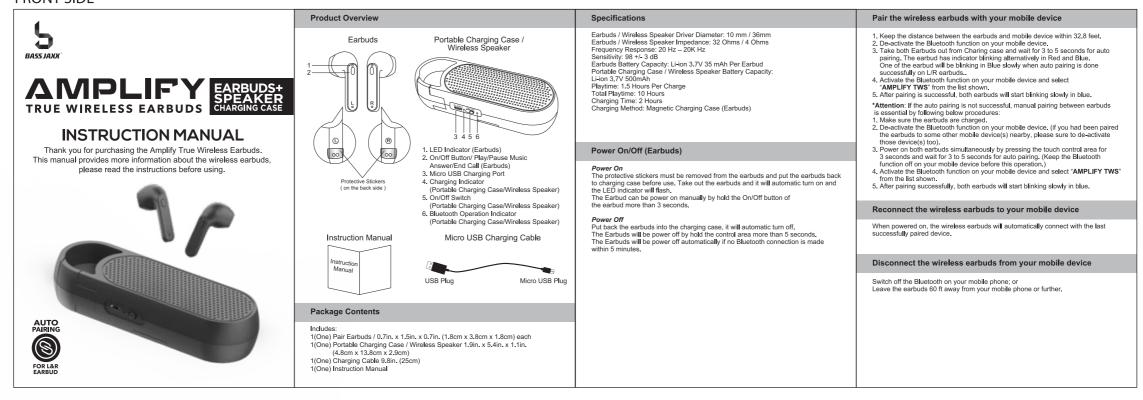

BACK SIDE

Answer / Reject a call (Earbuds)	Power On/Off (Portable Charging Case / Wireless Speaker)	FAQ (Wireless Speaker)	
When receive a call, click On/Off button once (on either earbud) to accept the call, or answer the call normally via your mobile phone. Click On/Off button hold touch control area for 2 seconds to reject it.	Power On Slide the ON/OFF switch to the "ON" position. Power On Slide the ON/OFF switch to the "OFF" position.	If the Wireless speaker cannot be paired with your device, please try the following: Ensure that your speaker is in pairing mode or reconnection mode. Ensure that Bluetooth search function of your mobile device is activated. If the Wireless speaker cannot be recharged:	(1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation. 2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna Increase the separation between the equipment and receiver Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
End a call (Earbuds)	Note: Always power off the speaker when not in use. If the Wireless speaker cannot be recharged: If you use a power outlet, ensure that the power supply is co		
To end the call, just dick On/Off button once at any side of earbud with Beep sound to end it.		and the outlet works. If you use a computer, ensure that it is connected and the	
Functions (Earbuds)			
Pause / Play Music: Short press ON/Off button. Go back to previous song: Press Left ON/OFF button for 1 second. Advance to next song: Press Right ON/OFF button for 1 second. Volume up: Double click Right ON/OFF button to increase. Volume down: Double click Left ON/OFF button to reduce.	Power on the wireless speaker. Activate the Bluetooth function on your phone within range and select "AMPLIFY SPEAKER" from the list shown. You will hear a beep sound when pairing is successful.		
Charging your Earbuds	Reconnect Wireless speaker to your mobile device		
Open the charging case cover. Insert the Earbuds into the charging case. The earbuds will start to charge automatically. LED indicator of the earbud will be turned to Red when charging. Once fully charged, all LED will be off.	When powered on, the wireless speaker will automatically connect with the last successfully paired device.	▲ Safety instructions for the lithium battery and charging the product -The input voltage to the product is 5V 1AIn order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/ adapter for charging the productOnly charge the product at ambient temperatures between 10 deg °C/ 50 deg °F and 40 deg °C/104 deg °F Do not heat above 70 deg °C/158 deg °F, eg. Do not expose to sunlight or throw into fire.	
Recharge Portable Charging Case / Wireless Speaker	FAQ (Earbuds) Only charge the product at ambient temperatures between 10 deg °C/ 50 deg °F and 40 deg °C/104 deg °F. If the wireless earbuds cannot be paired with your device, If the wireless earbuds cannot be paired with your device,		RF warning statement: The device has been evaluated to meet general RF exposure requirement. The
⚠ For your safety, please always use appropriate 5V input charger/Adapter to charge the product, DO NOT USE Quick Charging USB Adapter to charge the product, as it might damage the product.			device can be used in portable exposure condition without restriction.
1. Use the Micro USB charging cable provided with the packaging. 2. Connect the Micro USB plug to Micro USB charging port on the charging case, then connect the USB plug to a USB port on a computer or wall adapter to begin charging. 3. The Red LED on the charging case will be on during charge. 4. Once fully charged, the Red LED will be off. NOTE: You must select a qualified charger from a regular manufacturer.		Earbuds - FCC ID: 2ADM5-EP-0655 Speaker - FCC ID: 2ADM5-EP-0655-SPK	
You must charge the charging case and earbuds if it has been not used for more than 6 months. USB Plug Micro USB Plug	which calling be relitived.		Distributed by 1616 Holdings, Inc. 701 Market Street, Suite 200 Keep All Relevant Information For Philadelphia, PA 19106 Future Reference Made in China