
Date: 3 JUN 2024 Product: EP-0717 IM

Size: 222.75(W) x 100(H)mm



FRONT SIDE

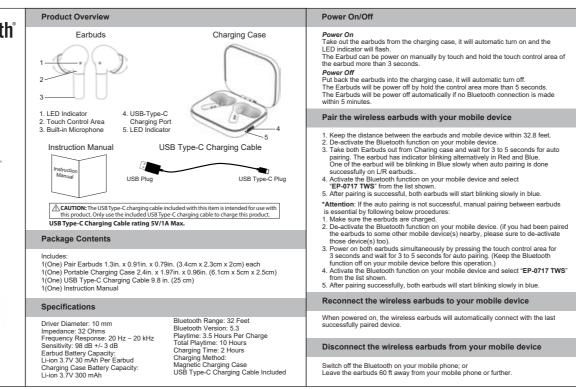



BACK SIDE

Answer / Reject a call	FAQ	FCC STATEMENT
When receive a call, click touch control area once (on either earbud) to accept he call, or answer the call normally via your mobile phone. Touch and hold touch control area for 2 seconds to reject it.	If the wireless earbuds cannot be paired with your device, please try the following: Ensure that your earbuds are in pairing mode or reconnection mode Ensure that Bluetooth search function of your mobile device is activated. If the wireless earbuds will not turn on: Make sure the earbuds are fully charged. Can I change the battery for the earbuds and the charging case? The wireless earbuds and the charging case use a built-in non-detachable battery which cannot be removed. If the charging case cannot be recharged: If you use a power outlet, ensure that the power supply is connected securely and the outlet works. △ Safety instructions for the lithium battery and charging the product The input voltage to the product is 5V 1A. In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/ adapter for charging the product. Only charge the product at ambient temperatures between 10°C/50°F and 40°C/104°F. Do not heat above 70°C/158°F, eg. Do not expose to sunlight or throw into fire. Switch off the product after use. Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product. In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development.	This device complies with the part 15 of the FCC rules. Operation is subject to following two conditions:(1) this device may not cause harmful interference, and (2 device must accept any interference received, including interference that may of undesired operation. Caution: changes or modifications not expressly approved by the party responsible compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a too B digital device, pursuant to Part 15 of the FCC Rules. These limits are design provide reasonable protection against harmful interference in a residential install. This equipment generates, uses and can radiate radio frequency energy and, installed and used in accordance with instructions may cause harmful interference to rare a complete that installations. However, there is no guarantee that interference to rare television reception, which can be determined by turning the equipment off and on user is encouraged to try to correct the interference by one or more of the folic
End a call To end the call, just click touch control area once at any side of earbud with Beep sound to end it.		
Functions		
Pause / Play Music: Click touch control area once. Skip to next track of music: Double click the right side earbud touch control area. Back to previous track of music: Double click the left side earbud touch control area. Voice Assistant: Press and hold the touch control area for 2 seconds.		
Charging your Earbuds		measures: Reorient or relocate the receiving antenna.
1. Open the charging case cover. 2. Insert the earbuds into the charging case. 3. The earbuds will start to charge automatically. 4. LED indicator of the earbud will be turned to Red when charging your earbuds. The Blue LED on Charging case will be on. 5. Once fully charged, all LED will be off.		Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to w receiver is connected. Consult the dealer or experienced radio/TV technician for help. RF warning statement: The device has been evaluated to meet general RF exposure requirement. The can be used in portable exposure condition without restriction.
Recharge Charging Case \$\Delta\$. For your safety, please always use appropriate 5V input charger/Adapter to charge the product. DO NOT USE Quick Charging USB Adapter to charge the product, as it might damage the product. 1. Use the USB Type-C charging cable provided with the packaging. 2. Connect the USB Type-C plug to USB Type-C charging port on the charging case, then connect the USB plug to a wall adapter to begin charging. 3. The Red LED on the charging case will be flashing during charge. 4. Once fully charged, the Red LED will be stop flashing.		The Bluetooth* word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by 1616 Holdings, Inc. is under license. Other trademarks and trade names are those of their respective owners.
Vou must select a qualified charger from a regular manufacturer. You must charge the charging case and earbuds if it has been not used for more than 6 months.		FCC ID: 2ADM5-EP-0717 ITEM# EP-0717 Distributed by 1616 Holding 701 Market Street, Suite Philadelphia, PA 1910
USB Plug USB Type-C Plug		For Future Reference Made in China