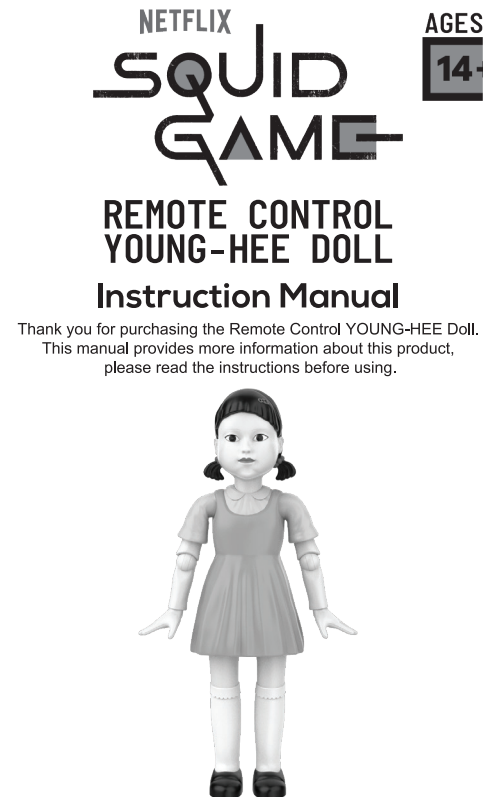 
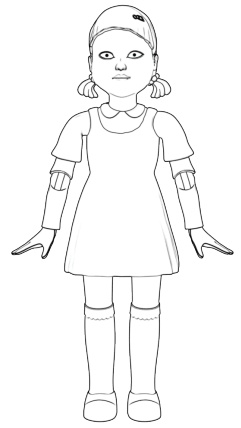 
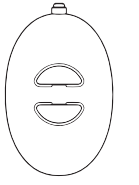 
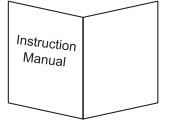 
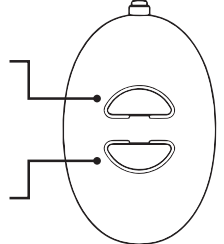 
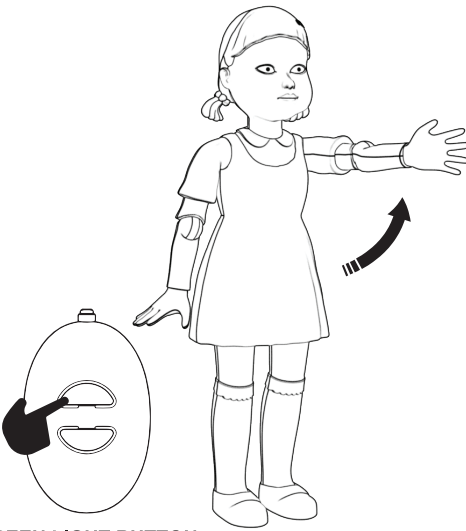 
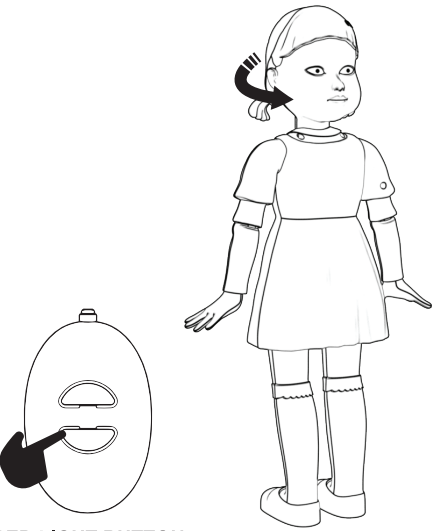 
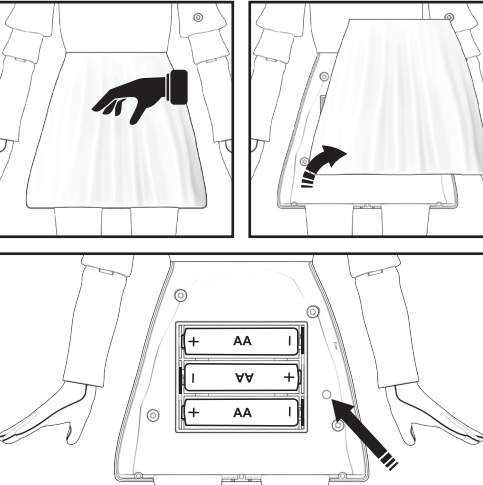 
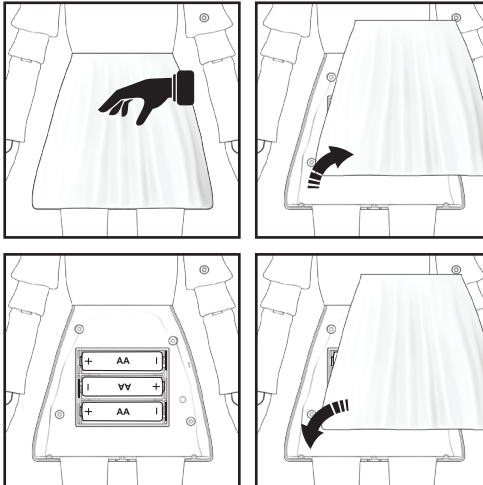 
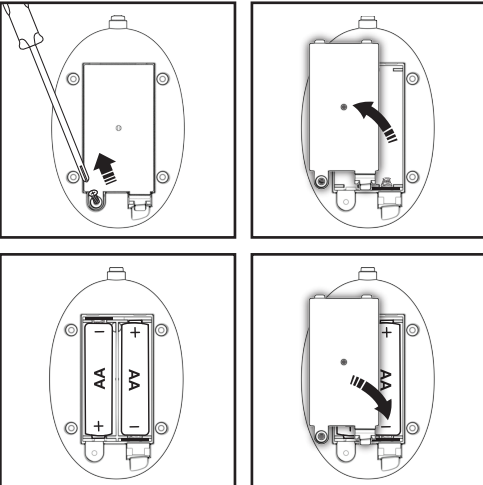 


# ET-0827 SQUID GAME DOLL\_IM

22FEB24

Size : 420 x 110 mm

雙面印刷

 <p><b>AGES 14+</b></p> <p>Thank you for purchasing the Remote Control YOUNG-HEE Doll. This manual provides more information about this product, please read the instructions before using.</p>	<p><b>Product Overview</b></p>  <p>Remote Control YOUNG-HEE Doll</p>  <p>Remote Control</p>  <p>Instruction Manual</p>	<p><b>Package Contents</b></p> <p>Includes:          1(One) Remote Control YOUNG-HEE Doll          15.6in. x 8.5in. x 3.66in. (39.6cm x 21.6cm x 9.3cm)          1(One) Remote Control          2.36in. x 3.85in. x 1.5in. (6cm x 9.8cm x 3.8cm)          1(One) Instruction Manual</p> <p><b>Specifications</b></p> <p>Frequency: 2.4 GHz          FCC ID: 2ADM5-ET-0827          Remote Control YOUNG-HEE Doll Power Supply:          3 x AA 1.5V Batteries (Not Included)          Remote Control Power Supply:          2 x AA 1.5V Batteries (Not Included)</p> <p><b>Remote Controller</b></p> <p><b>GREEN LIGHT BUTTON</b></p> <ul style="list-style-type: none"> <li>LIFTS ARM 90°</li> <li>SAYS "GREEN LIGHT"</li> <li>COUNTDOWN BEGINS</li> </ul>  <p><b>RED LIGHT BUTTON</b></p> <ul style="list-style-type: none"> <li>TURNES HEAD 180°</li> <li>SAYS "RED LIGHT"</li> <li>EYES LIGHT UP</li> </ul>	<p><b>Standard Control</b></p> <p>Note: To avoid losing control, always pay attention when controlling the Remote Control YOUNG-HEE Doll.</p>  <p><b>GREEN LIGHT BUTTON</b></p> <p>LIFTS ARM 90°          SAYS "GREEN LIGHT"          COUNTDOWN BEGINS</p>	<p><b>Standard Control</b></p>  <p><b>RED LIGHT BUTTON</b></p> <p>TURNES HEAD 180°          SAYS "RED LIGHT"          EYES LIGHT UP</p>	<p><b>Power On/Off</b></p>  <p><b>Power On/Off</b></p> <p>To turn on or turn off the Remote Control YOUNG-HEE Doll, pull out the battery box cover to access the On/Off switch.</p> <p>Press the switch briefly to power on, and hold it for 2 seconds to power off and reset the arms and head back to their original position.</p>
<p><b>Batteries Installation For Remote Control YOUNG-HEE Doll</b></p>  <p>To install batteries into the Remote Control YOUNG-HEE Doll, pull out the battery box cover to access the battery compartment. Insert 3(Three) X AA 1.5V Alkaline Batteries (Not Included) into the battery box. Ensure that the batteries are inserted as shown in the diagram. Finally, replace the battery box cover.</p> <p><b>Notice:</b></p> <p>When inserting the batteries, you must insert according to the correct polarity, the Remote Control YOUNG-HEE Doll won't function if batteries are reversed.</p>	<p><b>Batteries Installation For Remote Controller</b></p>  <p>To install batteries into the Remote Controller, unscrew the screw on the battery box cover to open the cover. Insert 2(Two) X AA 1.5V Alkaline Batteries (Not Included) into the battery box. Batteries should be placed as shown on the diagram. Replace the battery box cover and tighten the screw.</p> <p><b>Notice:</b></p> <p>When inserting the batteries, you must insert according to the correct polarity, the Remote Controller won't function if batteries are reversed.</p>	<p><b>Performance Tips</b></p> <ol style="list-style-type: none"> <li>Do not put the Remote Control YOUNG-HEE Doll on grass, sand or go through water.</li> <li>Do not play the Remote Control YOUNG-HEE Doll in windy or rainy weather.</li> <li>Do not move the Remote Control YOUNG-HEE Doll into any sharp object.</li> <li>Keep fingers, hair and loose clothing away from Remote Control YOUNG-HEE Doll.</li> </ol> <p><b>Care and Maintenance</b></p> <p>Always use dry and soft cloth to clean this product.          Avoid this product from being exposed to sunlight or heat.          Avoid immersing these toys in water, otherwise, the electronic parts may be damaged.          Check the product regularly. If any damages are discovered, please stop using immediately, until it is completely repaired in good working condition.</p>	<p><b>IMPORTANT: BATTERY INFORMATION</b></p> <p><b>For AA Batteries</b></p> <p><b>⚠ WARNING: TO AVOID BATTERY LEAKAGE</b></p> <ol style="list-style-type: none"> <li>Be sure to insert the batteries correctly, and always follow the toy/game and battery manufacturers' instructions.</li> <li>Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.</li> <li>Always remove weak or dead batteries from the product.</li> <li>Remove the battery if the product is left unused for a long period of time.</li> </ol>	<p><b>Warning</b></p> <p>This product is suitable to be used by people who has operating experience in remote toy or aged no less than 14 years old.</p> <p>Please do not put the product in your mouth to prevent choking hazard of small parts.</p> <p>Please do not put the finger into available interspaces.</p> <p>Please do not play the product in a brutal way such as throwing, crashing or twisting it.</p> <p>Please store the smaller-sized product accessories in places that are out of reach of children, in order to avoid the occurrence of accidents.</p> <p>Avoid placing the batteries in places in high temperatures and avoid exposure to heat.</p> <p>When young children are operating the product, it shall be ensured that the adults are guiding and making sure the product control is within the viewing range of the controller (or instructor) so that it makes the control of the toy more convenient.</p> <p>When the product is not in use, please switch off the power supplies of the toy, and remove the batteries from the product.</p> <p>Please note that we won't take any responsibility for any wrong operation as this may result in severe injury or loss of property, and we cannot control the operating process during the time when the user assembles or uses this product.</p> <p>Once this product is sold, we won't be responsible for any safety responsibility during the time the user operates or uses controls this products.</p>	<p><b>FCC Statement</b></p> <p>This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> <li>Reorient or relocate the receiving antenna.</li> <li>Increase the separation between the equipment and receiver.</li> <li>Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.</li> <li>Consult the dealer or experienced radio/ TV technician for help.</li> </ul> <p>RF warning statement:          The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p> <p>FCC ID: 2ADM5-ET-0827</p> <p><b>Class 1 LED product</b></p> <p>Distributed by 1616 Holdings, Inc.          701 Market Street, Suite 200          Philadelphia, PA 19106          Made In Shantou, China</p> <p>SQUID GAME™/© Netflix. Used with permission.          Keep All Relevant Information for Future Reference <b>Item# ET-0827</b></p>