

ET-0904 Hello Kitty Birthday Confetti_IM R2

17APR24

Size : 350 x 110 mm

雙面印刷

<div data-bbox="189 451 512 633"> <h2>HELLO KITTY[®]</h2> <p>REMOTE CONTROL FIGURE WITH POP CONFETTI FUNCTION</p> </div> <div data-bbox="512 419 585 480"> <p>AGES 8+</p> </div> <div data-bbox="207 654 491 686"> <h3>Instruction Manual</h3> </div> <div data-bbox="152 692 549 766"> <p>Thank you for purchasing the Hello Kitty Remote Control Figure With Pop Confetti Function. This manual provides more information about this product, please read the instructions before using.</p> </div> <div data-bbox="268 772 439 1120"> </div>	<div data-bbox="595 419 778 439"> <p>Product Overview</p> </div> <div data-bbox="640 470 1007 756"> <p>Hello Kitty Remote Control Figure Remote Control</p> </div> <div data-bbox="640 817 1007 1103"> <p>Cardboard Interchangeable Number Sheet Confetti Packet</p> </div> <div data-bbox="854 960 1007 1103"> <p>Instruction Manual</p> </div>	<div data-bbox="1068 419 1251 439"> <p>Package Contents</p> </div> <div data-bbox="1068 459 1464 633"> <p>1(One) Remote Control Figure 8.3in. x 9.2in. x 15in. (21.3cm x 23.3cm x 28.2cm) 1(One) Remote Control 2in. x 1.42in. x 7.4in. (5.1cm x 3.6cm x 18.8cm) 1(One) Cardboard Interchangeable Number Sheet 13.39in. x 9.06in. (34cm x 23cm) 1(One) Confetti Packet 0.35oz. (10gm) 1(One) Instruction Manual</p> </div> <div data-bbox="1068 654 1220 674"> <p>Specifications</p> </div> <div data-bbox="1068 705 1464 807"> <p>FCC ID: 2ADM5-ET-0904 Remote Control Figure: 4(Four) x AA 1.5V Alkaline Batteries (Not Included) Remote Control: 2(Two) x AAA 1.5V Alkaline Batteries (Not Included)</p> </div> <div data-bbox="1068 868 1251 889"> <p>Remote Controller</p> </div> <div data-bbox="1098 909 1449 1083"> <p>Forward Button Launch Confetti Button Backward (With Angle) Button</p> </div>	<div data-bbox="1541 419 1724 439"> <p>Standard Control</p> </div> <div data-bbox="1541 470 1983 511"> <p>Note: To avoid losing control, always pay attention when controlling the Hello Kitty Remote Control Figure.</p> </div> <div data-bbox="1602 521 1922 735"> <p>Move Forward</p> </div> <div data-bbox="1617 776 1907 817"> <p>Control Hello Kitty Remote Control Figure to move forward</p> </div> <div data-bbox="1602 848 1922 1062"> <p>Move Backward (With Angle)</p> </div> <div data-bbox="1617 1093 1907 1124"> <p>Control Hello Kitty Remote Control Figure to move backward (with angle)</p> </div>	<div data-bbox="1999 419 2182 439"> <p>Refill The Confetti</p> </div> <div data-bbox="2029 459 2365 715"> </div> <div data-bbox="2014 725 2441 766"> <p>Pull out the top of the hat and fill the confetti in the chamber. Install the top of the hat back in place after refill.</p> </div> <div data-bbox="1999 786 2212 807"> <p>Launch The Confetti</p> </div> <div data-bbox="2060 827 2395 1073"> </div> <div data-bbox="2075 1052 2380 1124"> <p>Launch Confetti Control Hello Kitty Remote Control Figure to launch the confetti</p> </div>	<div data-bbox="2472 419 2853 439"> <p>Decorate With The Number Cardboard</p> </div> <div data-bbox="2609 470 2762 705"> </div> <div data-bbox="2487 725 2914 746"> <p>Detach each number/shape from the Cardboard Number Sheet.</p> </div> <div data-bbox="2533 786 2868 1083"> </div> <div data-bbox="2533 1093 2868 1113"> <p>Insert the number/shape into the rail of the cake.</p> </div>
<div data-bbox="122 1154 259 1175"> <p>Power On/Off</p> </div> <div data-bbox="137 1216 564 1645"> </div> <div data-bbox="137 1665 396 1757"> <p>Power On/Off Slide the ON/OFF Switch to ON to turn on the Hello Kitty Remote Control Figure. Slide the ON/OFF Switch to OFF to turn off the Hello Kitty Remote Control Figure.</p> </div>	<div data-bbox="595 1154 1037 1175"> <p>Batteries Installation For Hello Kitty Remote Control Figure</p> </div> <div data-bbox="595 1216 1037 1645"> </div> <div data-bbox="595 1665 1037 1737"> <p>To install batteries into the Hello Kitty Remote Control Figure, unscrew the screw on the battery box cover to open the cover. Insert 4(Four) X AA 1.5V Alkaline Batteries (Not Included) into the battery box. Batteries should be placed as shown on the diagram. Replace the battery box cover and tighten the screw.</p> </div> <div data-bbox="595 1768 1037 1829"> <p>Notice: When inserting the batteries, you must insert according to the correct polarity, the Hello Kitty Remote Control Figure won't function if batteries are reversed.</p> </div>	<div data-bbox="1068 1154 1510 1175"> <p>Batteries Installation For Remote Controller</p> </div> <div data-bbox="1068 1216 1510 1645"> </div> <div data-bbox="1068 1665 1510 1737"> <p>To install batteries into the Remote Controller, unscrew the screw on the battery box cover to open the cover. Insert 2(Two) X AAA 1.5V Alkaline Batteries (Not Included) into the battery box. Batteries should be placed as shown on the diagram. Replace the battery box cover and tighten the screw.</p> </div> <div data-bbox="1068 1768 1510 1829"> <p>Notice: When inserting the batteries, you must insert according to the correct polarity, the Remote Controller won't function if batteries are reversed.</p> </div>	<div data-bbox="1541 1154 1724 1175"> <p>Performance Tips</p> </div> <div data-bbox="1541 1195 1983 1297"> <ol style="list-style-type: none"> Do not drive the Hello Kitty Remote Control Figure on grass, sand or go through water. Do not drive the Hello Kitty Remote Control Figure in windy or rainy weather. Do not drive the Hello Kitty Remote Control Figure into any sharp object. Keep fingers, hair and loose clothing away from Hello Kitty Remote Control Figure. </div> <div data-bbox="1541 1328 1754 1349"> <p>Care and Maintenance</p> </div> <div data-bbox="1541 1369 1983 1481"> <p>Always use dry and soft cloth to clean this product. Avoid this product from being exposed to sunlight or heat. Avoid immersing these toys in water, otherwise, the electronic parts may be damaged. Check the product regularly. If any damages are discovered, please stop using immediately, until it is completely repaired in good working condition.</p> </div> <div data-bbox="1541 1512 1922 1533"> <p>IMPORTANT: BATTERY INFORMATION</p> </div> <div data-bbox="1571 1553 1953 1849"> <p>For AAA Batteries ⚠ WARNING: TO AVOID BATTERY LEAKAGE 1) The batteries used with this product are small parts and should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone American Association of Poison Control Centers (1-800-222-1222). 2) Always purchase the correct size and grade of battery most suitable for intended use. 3) Do not mix old and new batteries, alkaline, standard (Carbon - Zinc) or rechargeable (Nickel-cadmium) batteries. 4) Clean the battery contacts and those of the device prior to battery installation. 5) Ensure the batteries are installed correctly with the regard to polarity (+ and -). 6) Always remove batteries if consumed or if product is to be left unused for a long time.</p> </div>	<div data-bbox="2029 1154 2166 1175"> <p>For AA Batteries</p> </div> <div data-bbox="2029 1185 2426 1328"> <p>⚠ WARNING: TO AVOID BATTERY LEAKAGE 1) Be sure to insert the batteries correctly, and always follow the toy/game and battery manufacturers' instructions. 2) Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. 3) Always remove weak or dead batteries from the product. 4) Remove the battery if the product is left unused for a long period of time.</p> </div> <div data-bbox="2029 1379 2090 1400"> <p>Warning</p> </div> <div data-bbox="2029 1420 2456 1451"> <p>This product is suitable for individuals with operating experience in remote toys or those aged 8 years old and above.</p> </div> <div data-bbox="2029 1461 2456 1492"> <p>Please do not put the product in your mouth to prevent choking hazards from small parts.</p> </div> <div data-bbox="2029 1502 2456 1533"> <p>Avoid inserting your fingers into available interspaces.</p> </div> <div data-bbox="2029 1533 2456 1584"> <p>Do not engage in rough play with the product, such as throwing, crashing, or twisting it. Store smaller-sized product accessories in places that are out of reach of children to prevent accidents.</p> </div> <div data-bbox="2029 1604 2456 1665"> <p>Avoid placing batteries in areas with high temperatures or exposing them to heat. When young children are operating the product, it is essential to ensure that adults are guiding them and maintaining visual control of the toy for convenient control.</p> </div> <div data-bbox="2029 1676 2456 1706"> <p>When the product is not in use, please switch off the power supply and remove the batteries.</p> </div> <div data-bbox="2029 1716 2456 1768"> <p>Please note that we cannot be held responsible for any injuries, property damage, or loss resulting from incorrect operation during the assembly or use of this product.</p> </div> <div data-bbox="2029 1768 2456 1798"> <p>Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.</p> </div> <div data-bbox="2029 1819 2334 1849"> <p>⚠ WARNING: CHOKING HAZARD Small parts. Not for children under 3 years</p> </div>	<div data-bbox="2472 1154 2624 1175"> <p>FCC Statement</p> </div> <div data-bbox="2472 1195 2929 1308"> <p>This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> </div> <div data-bbox="2472 1328 2929 1573"> <p>NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or experienced radio/ TV technician for help.</p> </div> <div data-bbox="2472 1594 2929 1645"> <p>RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p> </div> <div data-bbox="2472 1665 2624 1686"> <p>FCC ID: 2ADM5-ET-0904</p> </div> <div data-bbox="2472 1696 2517 1727"> </div> <div data-bbox="2472 1747 2685 1808"> <p>Distributed by 1616 Holdings, Inc. 701 Market Street, Suite 200 Philadelphia, PA 19106</p> </div> <div data-bbox="2472 1819 2624 1839"> <p>Made In Shantou, China</p> </div> <div data-bbox="2472 1839 2746 1860"> <p>Keep All Relevant Information for Future Reference</p> </div> <div data-bbox="2777 1676 2868 1747"> </div> <div data-bbox="2777 1747 2868 1768"> <p>SIL-35018</p> </div> <div data-bbox="2731 1768 2914 1819"> <p>© 2024 SANRIO CO., LTD. TM and ® denote U.S. Trademarks Used Under License. www.sanrio.com</p> </div> <div data-bbox="2807 1839 2929 1860"> <p>Item# ET-0904</p> </div>