
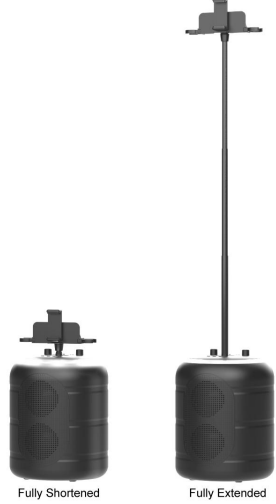
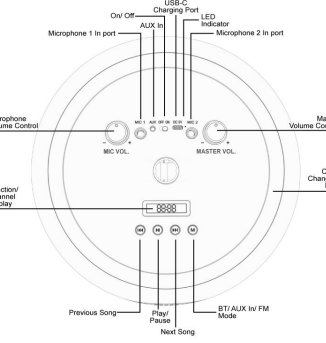

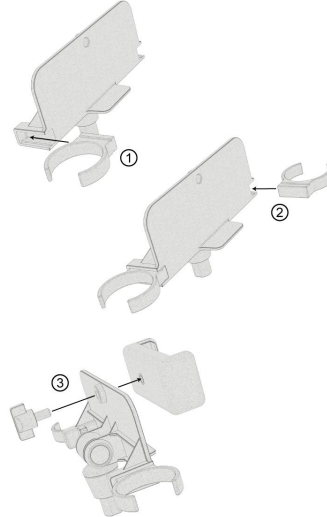
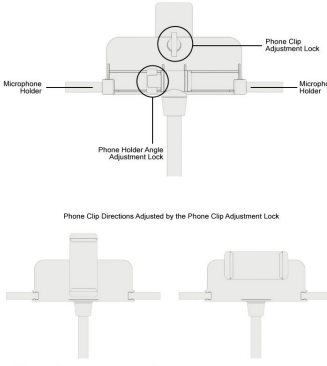



KM-0001 Karaoke Speaker Manual

Size: H: 200mm x W: 258mm

July 25 2023

 <p>BASS JAZZ</p> <h2>KARAOKE SPEAKER</h2> <p>WITH TELESCOPIC POLE & MICROPHONES</p> <h3>Instruction Manual</h3> <p>Thank you for purchasing the Karaoke Speaker. This manual provides more information about this Karaoke Speaker, please read the instructions before using.</p>	<h4>Product Overview</h4>  <p>Fully Shortened Fully Extended</p>	 <p>Microphone 1 In port, USB-C Charging Port, LED Indicator, Microphone 2 In port, Microphone Volume Control, AUX In, MIC VOL., MASTER VOL., Function/Channel Display, BT/AUX IN FM Mode, Previous Song, Play/Pause, Next Song, Color Charging LED</p> <h4>How To Use The Microphones</h4>  <ol style="list-style-type: none"> 1. Plug in the microphone jet to the microphone in port on the speaker. 2. Turn on the On/Off switch on the microphone (up: on/ down: off). 3. Use the microphone volume control to adjust the volume. <p>Caution: Please turn off the microphone before put into the microphone holder. Otherwise may cause loud squealing or damage the product.</p>	<h4>How To Install The Phone Holder</h4>  <ol style="list-style-type: none"> 1. Use the Phone Clip Adjustment Lock to adjust the direction desired (vertical or horizontal). 2. Use the Phone Holder Angle Adjustment Lock to adjust the angle desired. 3. Pull the phone clip on the adjustable side until the phone is able to fit in the phone clip, release the clip to hold the phone tight on the phone clip. <p>Note: Please use the Karaoke Speaker on flat surface.</p>	<h4>How To Use The Phone Holder</h4>  <p>Microphone Holder, Phone Clip Adjustment Lock, Phone Holder Angle Adjustment Lock, Phone Clip Directions Adjusted by the Phone Clip Adjustment Lock</p> <ol style="list-style-type: none"> 1. Use the Phone Clip Adjustment Lock to adjust the direction desired (vertical or horizontal). 2. Use the Phone Holder Angle Adjustment Lock to adjust the angle desired. 3. Pull the phone clip on the adjustable side until the phone is able to fit in the phone clip, release the clip to hold the phone tight on the phone clip. <p>Note: Please use the Karaoke Speaker on flat surface.</p>
<h4>Package Contents</h4> <ul style="list-style-type: none"> 1 (One) Karaoke Speaker with Telescopic Pole 13.1in. x 10.2in. x 10.2in. (33.4cm x 26cm x 26cm) Pole Fully Extends to 45.1in. (114.5cm) 1 (One) Charging Cable 19.7in. (50cm) 1 (One) Instruction Manual <p>*Smartphone Device Not Included</p> <h4>Power On/Off</h4> <p>Power on Slide the ON/OFF switch to the "ON" position on the speaker.</p> <p>Power off Slide the ON/OFF switch to the "OFF" position on the speaker.</p> <h4>Pair Karaoke Speaker with your mobile device</h4> <ol style="list-style-type: none"> 1. Keep the distance between your Karaoke Speaker and mobile phone (or other devices) within 32.8 Feet. 2. Power on the Karaoke Speaker. 3. Activate the Bluetooth function on your phone within range and select "KM-0001" from the list shown. 4. You will hear a beep sound when pairing is successful. <h4>Reconnect Karaoke Speaker to your mobile device</h4> <p>When powered on, the Karaoke Speaker will automatically connect with the last successfully paired device.</p>	<h4>Function</h4> <p>Karaoke/ Bluetooth Mode Play/Pause: Press the Play/ Pause Button Once. Next Track: Press the Next Button once. Previous Track: Press the Previous Button once. Accompaniment Mode On/Off: Press and hold the Mode Button. Disconnect / Reconnect Bluetooth device: Press and hold the Play/Pause Button.</p> <p>FM Radio Mode Switch to FM Mode: Press the Mode Button once and the channel will be displayed. Auto Scan: Press and hold the Play/Pause Button will start scan all available channels. Next Channel: Press the Next Button once. Previous Channel: Press the Previous Button once. Mute/Unmute: Press the Play/Pause Button once.</p> <p>Aux-In Mode Plug-in 3.5mm audio cable will automatically switch to Aux-In mode. Note: 3.5mm audio cable not included.</p>	<h4>Charging your Karaoke Speaker</h4> <ol style="list-style-type: none"> 1. Use the USB Type-C charging cable provided with this Karaoke Speaker. 2. Connect the USB plug to a USB port on a computer or wall adapter, then connect the USB Type-C plug to USB Type-C charging port on the speaker to begin charging. 3. The light will turn red while charging and will turn off once fully charged. <p>NOTE:</p> <ul style="list-style-type: none"> You must select a qualified charger from a regular manufacturer. You must charge the Karaoke Speaker if it has been not used for more than 6 months.  <h4>Technical Specification</h4> <p>Driver Diameter: 103 mm Impedance: 4 Ohms Power Supply: Li-Ion Battery 3.7V 1200 mAh Playtime: 2 Hours Charging Time: 3 Hours Bluetooth Range: 32.8 Feet Bluetooth Version: 5.3 USB Type-C Charging Cable Included</p> <p>CAUTION: The USB Type-C charging cable included with this item is intended for use with this product. Only use the included USB Type-C charging cable to charge this product.</p> <h4>FAQ</h4> <ul style="list-style-type: none"> If the Karaoke Speaker cannot be paired with your device, please try the following: Ensure that your speaker is in pairing mode or reconnection mode. Ensure that Bluetooth search function of your mobile device is activated. If the Karaoke Speaker cannot be recharged: If you use a power outlet, ensure that the power supply is connected securely and the outlet works. If you use a computer, ensure that it is connected and the USB port is powered. 	<p>⚠ Safety instructions for the lithium battery and charging the product</p> <ul style="list-style-type: none"> -The input voltage to the product is DC 5V 1A. -In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/ adapter for charging the product. -Only charge the product at ambient temperatures between 10°C/ 50°F and 40°C/ 104°F. -Do not heat above 70°C/ 158°F, eg. Do not expose to sunlight or throw into fire. -Switch off the product after use. -Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product. -In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development. 	<h4>FCC STATEMENT</h4> <ol style="list-style-type: none"> 1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation. 2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. <p>NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. <p>RF warning statement The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p> <p>FCC FCC ID: 2ADMS-KM-0001 Item# KM-0001 Class 1 LED product</p> <p>Keep All Relevant Information for Future Reference</p> <p><small>Distributed by 1616 Holdings, Inc. 701 Market Street, Suite 200 Philadelphia, PA 19106</small></p>