	Table of contents	1.Introduction	2.package includes	4.How to use
			2.package includes	
	1 Introduction 1 2 Kit Contents 2	Congratulations, and thank you for choosing the Bluetooth Wireless	1X Bluetooth Wireless Speaker	4.1.General Functions
	3 Connection Diagram	Speaker.		Desired Result Required Action
BLUETOOTH SPEAKER USER MANUAL	4 How to use 3 4.1 General function 3 4.2 Pairing to mobile phone 4 4.3 Charging your speaker 6 5 Technology specification 6-7	This manual will help you operate the Bluetooth Wireless Speaker, but you should first familiarize yourself with the Bluetooth functionality of your mobile phone or other devices before using	1X USB Charger	Turn on & Enter the pairing mode Press the "+ve" button for 3 seconds when the device is off. (Blue LeD quickly flash alternately with two beep tone voice).
BC	6 FAQ	the Bluetooth Wireless Speaker. Safety Rules	1X User Manual	You should use a Bluetooth function mobile phone or other Bluetooth Master Device and to perform pairing action (detail refer to the chapter about pairing)
	subject to the following two conditions(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate	<ol> <li>Please follow the rules depicted in this manual closely to ensure your safety.</li> <li>Before using this Bluetooth speaker, we would strongly encourage you to read through this user manual.</li> </ol>	3.Connection Diagram	Play/pause Play/pause Play/pause Play/pause Play/pause Play/pause Play/pause Play/pause Play/pause Press ⊷ to play when the device is playing. Novt / Short press For is for a single Short press For is for a single Short press For is for a single Short press For is for a single For a singl
	the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules,	2\ Be more wary of any edges, uneven surfaces, metal parts, accessories and	Volume down	Volume up music and long press H/V+ is for volume up.
	These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates. Uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions. May cause harmful	its packaging so as to prevent any possible injury or damage. 3\ Do not modify, repair or dismantle this	Enter the pairing mode/ Play / pause/ Turn off	Previous / Short press ++/v- is for previous music and long press ++/v- is for volume down.
	interference to radio or -television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the	Bluetooth speaker. Doing so may result in fires, electric shocks, complete breakdown of this Bluetooth speaker, etc. All of which, are not covered under	Charging Next / Volume up Previous /	Turn off Press the "ww" button for 3 seconds when the device is on. (a tone voice beep and all LED is off)
	following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from	4\ Do not use any diluents or volatile liquid	Volume down	Low battery (The LED flash) warning
	Connect the equipment function an outlet on a druit dimetent from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help. The battery is not replaceable.	to clean the Bluetooth speaker.	Turn on/ Enter the pairing mode/	Plug the charger to ⊙⊕⊕ port of the device. (Red LED is on)
	1	1	Play / pause/ Turn off	3
I.2.Pairing to Mobile phone or other device	Prining to a superior of Entertainment	4.3.Charging your speaker		Sakar Warranty Card
To use your Bluetooth speaker, you mustfirst pair your speaker with a phone or a computer.	<ul> <li>Pairing to a computer and Entertainment:</li> <li>If there is no Bluetooth function supported by</li> </ul>	The speaker is convenient to connect to AC charger or a USB charger with Mini DC 2.0	Parameter Value	This warranty covers the original consumer purchaser only
Once your Bluetooth speaker is paired to a			Loudspeaker	and is not transferable. It covers products that fail to functi properly UNDER NORMAL USAGE, due to defects in
specific mobile phone, they will remain paired	your computer, a Bluetooth adapter is	port marked with ⇔€. Make sure that your speaker is full charged for at least 6 hours	Output 3W	properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired at
and automatically recognize each other	your computer, a Bluetooth adapter is necessary. Fix the adapter with your computer	port marked with coe. Make sure that your speaker is full charged for at least 6 hours before initial use. Insert one terminal of your	Output 3W Signal-To-Noise 6 hours	properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired at charge for parts or labor for a period of one year.
specific mobile phone, they will remain paired and automatically recognize each other whenever they are within range.	your computer, a Bluetooth adapter is necessary. Fix the adapter with your computer and ensure its Bluetooth function is activated.	port marked with⊖œ⊕. Make sure that your speaker is full charged for at least 6 hours	Output 3W	properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired at charge for parts or labor for a period of one year. What Is Not Covered By Warranty: Damages or malfunctions not resulting from defects in
and automatically recognize each other	your computer, a Bluetooth adapter is necessary. Fix the adapter with your computer	port marked with ⇔ . Make sure that your speaker is full charged for at least 6 hours before initial use. Insert one terminal of your charger to AC main or USB port of PC and other terminal to DC 2.0 jack ∞ . While charging, the red LED light constantly.	Output     3W       Signal-To-Noise     6 hours       Playback Time     ≥75dB       Distortion     ≤1.0%       Charging Time     3 to 4 hours	properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired at charge for parts or labor for a period of one year. What is Not Covered By Warrany: Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions frr other than normal use, including hat you limited to, renair
and automatically recognize each other whenever they are within range.	your computer, a Bluetooth adapter is necessary. Fix the adapter with your computer and ensure its Bluetooth function is activated. • Turn on the speaker go to the pairing mode. • Open the Bluetooth software (such as	port marked with ⇔ . Make sure that your speaker is full charged for at least 6 hours before initial use. Insert one terminal of your charger to AC main or USB port of PC and other terminal to DC 2.0 jack . While charging, the red LED light constantly. When charging is completed, the LED turns off.	Output     3W       Signal-To-Noise     6 hours       Playback Time     ≥75dB       Distortion     ≤1.0%       Charging Time     3 to 4 hours       Dimension     80 mm×80 mm×42mm	properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired at charge for parts or labor for a period of one year. What Is Not Covered By Warranty: Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions fro other than normal use, including but not limited to, repair it unauthorized parties, tampering, modification or accident. What To Do When Service Is Required:
nd automatically recognize each other whenever they are within range. Pairing to a phone and Entertainment: Turn on your phone and ensure its Bluetooth unction is activated Turn on the speaker go to the pairing mode.	your computer, a Bluetooth adapter is necessary. Fix the adapter with your computer and ensure its Bluetooth function is activated. • Turn on the speaker go to the pairing mode. • Open the Bluetooth software (such as BlueSoleil) installed on your computer, and selects "Search your Bluetooth devices"	port marked with ⇔e. Make sure that your speaker is full charged for at least 6 hours before initial use. Insert one terminal of your charger to AC main or USB port of PC and other terminal to DC 2.0 jack et While charging, the red LED light constantly. When charging is completed, the LED turns	Output     3W       Signal-To-Noise     6 hours       Playback Time     ≥75dB       Distortion     ≤1.0%       Charging Time     3 to 4 hours       Dimension     80 mm × 80 mm × 42 mm	properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired at charge for parts or labor for a period of one year. What Is Not Covered By Warranty: Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions fro other than normal use, including but not limited to, repair it unauthorized parties, tampering, modification or accident. What To Do When Service Is Required:
Ind automatically recognize each other whenever they are within range. Pairing to a phone and Entertainment: Turn on your phone and ensure its Bluetooth unction is activated Turn on the speaker go to the pairing mode. Search your Bluetooth devices on your phone by following the phone's instructions. Refer to your phone's user manual for more	<ul> <li>your computer, a Bluetooth adapter is necessary. Fix the adapter with your computer and ensure its Bluetooth function is activated.</li> <li>Turn on the speaker go to the pairing mode.</li> <li>Open the Bluetooth software (such as BlueSoleil) installed on your computer, and selects "Search your Bluetooth devices" function. Refer to user manual of the Bluetooth software for more information.</li> </ul>	port marked with ∞∞. Make sure that your speaker is full charged for at least 6 hours before initial use. Insert one terminal of your charger to AC main or USB port of PC and other terminal to DC 2.0 jack∞∞. While charging, the red LED light constantly. When charging is completed, the LED turns off. Warning: • You must select a qualified charger from a	Output     3W       Signal-To-Noise     6 hours       Playback Time     ≥75dB       Distortion     ≤1.0%       Charging Time     3 to 4 hours       Dimension     80 mm×80 mm×42mm	properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired at charge for parts or labor for a period of one year. What Is Not Covered By Warranty: Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions fro other than normal use, including but not limited to, repair It unauthorized parties, tampering, modification or accident. What To Do When Service Is Required: When returning your defective product (postage pre-paid) service, your package should
nd automatically recognize each other whenever they are within range. <b>Pairing to a phone and Entertainment:</b> Turn on your phone and ensure its Bluetooth unction is activated Turn on the speaker go to the pairing mode. Search your Bluetooth devices on your phone ty following the phone's instructions. Refer to our phone's user manual for more nformation. After a few second the phone will list the Round speaker' as a discover device. Select	<ul> <li>your computer, a Bluetooth adapter is necessary. Fix the adapter with your computer and ensure its Bluetooth function is activated.</li> <li>Turn on the speaker go to the pairing mode.</li> <li>Open the Bluetooth software (such as BlueSoleil) installed on your computer, and selects "Search your Bluetooth devices" function. Refer to user manual of the Bluetooth software for more information.</li> <li>After a few second the "Round speaker" will list in Bluetooth software of your computer as a discover device. Select this icon and click right</li> </ul>	port marked with ⇔ . Make sure that your speaker is full charged for at least 6 hours before initial use. Insert one terminal of your charger to AC main or USB port of PC and other terminal to DC 2.0 jack ↔ . While charging, the red LED light constantly. When charging is completed, the LED turns off. Warning:	Output     3W       Signal-To-Noise     6 hours       Playback Time     ≥75dB       Distortion     ≤1.0%       Charging Time     3 to 4 hours       Dimension     (L×W×H)       Weight     86.7g   6.FAQ       1. Why is there no power even when the Speaker is power on?	properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired at charge for parts or labor for a period of one year. What Is Not Covered By Warranty: Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions fro other than normal use, including but not limited to, repair unauthorized parties, tampering, modification or accident. What To Do When Service Is Required: When returning your defective product (postage pre-paid) service, your package should include: 1. Copy of original bill of sale 2. A detailed written description of the problem. 3. Your return address and telephone number (Daytime) MAIL TO ADDRESS BELOW:
And automatically recognize each other whenever they are within range.  Pairing to a phone and Entertainment: Turn on your phone and ensure its Bluetooth unction is activated  Turn on the speaker go to the pairing mode. Search your Bluetooth devices on your phone y following the phone's instructions. Refer to rour phone's user manual for more nformation.  After a few second the phone will list the Round speaker' as a discover device. Select tand follow your phone instruction to select his pairing.  Your phone will confirm the pairing, and then	<ul> <li>your computer, a Bluetooth adapter is necessary. Fix the adapter with your computer and ensure its Bluetooth function is activated.</li> <li>Turn on the speaker go to the pairing mode.</li> <li>Open the Bluetooth software (such as BlueSoleil) installed on your computer, and selects "Search your Bluetooth devices" function. Refer to user manual of the Bluetooth software for more information.</li> <li>After a few second the "Round speaker" will list in Bluetooth software of your computer as a</li> </ul>	port marked with ⇔ . Make sure that your speaker is full charged for at least 6 hours before initial use. Insert one terminal of your charger to AC main or USB port of PC and other terminal to DC 2.0 jack ⇔ . While charging, the red LED light constantly. When charging is completed, the LED turns off. 	Output     3W       Signal-To-Noise     6 hours       Playback Time     ≥75dB       Distortion     ≤1.0%       Charging Time     3 to 4 hours       Dimension     80 mm × 80 mm × 42mm       (L×W×H)     86.7g       6.FAQ       1. Why is there no power even when the	properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired at charge for parts or labor for a period of one year. What is Not Covered By Warranty: Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions for other than normal use, including but not limited to, repair i unauthorized parties, tampering, modification or accident. What To Do When Service Is Required: When returning your defective product (postage pre-paid) service, your package should include: 1. Copy of original bill of sale 2. A detailed written description of the problem. 3. Your return address and telephone number (Daytime) MAIL TO ADDRESS BELOW: In the U.S. In the U.K. Sakar International Sakar UK Attention: Service Department 2D Siskin Parkway East 195 Canter Drive
and automatically recognize each other whenever they are within range. Pairing to a phone and Entertainment: Turn on your phone and ensure its Bluetooth unction is activated	<ul> <li>your computer, a Bluetooth adapter is necessary. Fix the adapter with your computer and ensure its Bluetooth function is activated.</li> <li>Turn on the speaker go to the pairing mode.</li> <li>Open the Bluetooth software (such as BlueSoleil) installed on your computer, and selects "Search your Bluetooth devices" function. Refer to user manual of the Bluetooth software for more information.</li> <li>After a few second the "Round speaker" will list in Bluetooth software of your computer as a discover device. Select this icon and click right button of mouse to select "pairing" item, then select "connect with audio device" with same operation.</li> </ul>	port marked with ⇔e. Make sure that your speaker is full charged for at least 6 hours before initial use. Insert one terminal of your charger to AC main or USB port of PC and other terminal to DC 2.0 jack≫e. While charging, the red LED light constantly. When charging is completed, the LED turns off. Warning: •You must select a qualified charger from a regular manufacturer. •You must charge the Bluetooth speaker if it has been not used for more than 12 months.	Output     3W       Signal-To-Noise     6 hours       Playback Time     ≥75dB       Distortion     ≤1.0%       Charging Time     3 to 4 hours       Dimension     ≤1.0%       (L×W×H)     80 mm×80 mm×42mm       weight     86.7g       6.FAQ       1. Why is there no power even when the Speaker is power on?       Ans: Ensure the battery is being charged up to 6 hours for first time using. The LED is lighted when it starts charging.	properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired at charge for parts or labor for a period of one year. What Is Not Covered By Warranty: Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions for other than normal use, including but not limited to, repair t unauthorized parties, tampering, modification or accident. What To Do When Service Is Required: When returning your defective product (postage pre-paid) service, your package should include: 1. Copy of original bill of sale 2. A detailed written description of the problem. 3. Your return address and telephone number (Daytime) MAIL TO ADDRESS BELOW: In the U.S. Sakar International Attention: Service Department 195 Carter Drive Edison, NJ 08817
nd automatically recognize each other whenever they are within range. Pairing to a phone and Entertainment: Turn on your phone and ensure its Bluetooth unction is activated Turn on the speaker go to the pairing mode. Search your Bluetooth devices on your phone y following the phone's instructions. Refer to our phone's user manual for more nformation. After a few second the phone will list the Round speaker'' as a discover device. Select and follow your phone instruction to select his pairing. Your phone will confirm the pairing, and then ress Yes/Ok. Finally, select to connect with Round	<ul> <li>your computer, a Bluetooth adapter is necessary. Fix the adapter with your computer and ensure its Bluetooth function is activated.</li> <li>Turn on the speaker go to the pairing mode.</li> <li>Open the Bluetooth software (such as BlueSoleil) installed on your computer, and selects "Search your Bluetooth devices" function. Refer to user manual of the Bluetooth software for more information.</li> <li>After a few second the "Round speaker" will list in Bluetooth software of your computer as a discover device. Select this icon and click right button of mouse to select "pairing" item, then select "connect with audio device" with same</li> </ul>	port marked with ⇔e. Make sure that your speaker is full charged for at least 6 hours before initial use. Insert one terminal 0 your charger to AC main or USB port of PC and other terminal to DC 2.0 jack≫e. While charging, the red LED light constantly. When charging is completed, the LED turns off.       Warning:       • You must select a qualified charger from a regular manufacturer.       • You must charge the Bluetooth speaker if it has been not used for more than 12 months.       5. Technical specification       Parameter     Value       Bluetooth specification	Output     3W       Signal-To-Noise     6 hours       Playback Time     ≥75dB       Distortion     ≤1.0%       Charging Time     3 to 4 hours       Dimension     80 mm × 80 mm × 42mm       (L×W×H)     80 mm × 80 mm × 42mm       Weight     86.7g       6.FAQ       1. Why is there no power even when the Speaker is power on?       Ans: Ensure the battery is being charged up to 6 hours for first time using. The LED is lighted when it starts charging.       2.There is no sound when playback.       Ans: Check the connection between speaker with phone or computer, if the	properly UNDER NORMAL USAGE, due to defects in     material or workmanship. Your product will be repaired at     charge for parts or labor for a period of one year.     What Is Not Covered By Warranty:     Damages or malfunctions not resulting from defects in     material or workmanship and damages or malfunctions frc     other than normal use, including but not limited to, repair I     unauthorized parties, tampering, modification or accident.     What To Do When Service Is Required:     When returning your defective product (postage pre-paid)     service, your package should     include:     1. Copy of original bill of sale     2. A detailed written description of the problem.     3. Your return address and telephone number (Daytime)     MAIL TO ADDRESS BELOW:     In the U.S.     In the U.K.     Sakar International     Xatention: Service Department     2D Siskin Parkway East     195 Carter Drive     You may also visit www.sakar.com for further assistance i
And automatically recognize each other whenever they are within range.  Pairing to a phone and Entertainment: Turn on your phone and ensure its Bluetooth unction is activated  Turn on the speaker go to the pairing mode. Search your Bluetooth devices on your phone y following the phone's instructions. Refer to rour phone's user manual for more nformation.  After a few second the phone will list the Round speaker' as a discover device. Select tand follow your phone instruction to select his pairing.  Your phone will confirm the pairing, and then	<ul> <li>your computer, a Bluetooth adapter is necessary. Fix the adapter with your computer and ensure its Bluetooth function is activated.</li> <li>Turn on the speaker go to the pairing mode.</li> <li>Open the Bluetooth software (such as BlueSoleil) installed on your computer, and selects "Search your Bluetooth devices" function. Refer to user manual of the Bluetooth software for more information.</li> <li>After a few second the "Round speaker" will list in Bluetooth software of your computer as a discover device. Select this icon and click right button of mouse to select "pairing" item, then select "connect with audio device" with same operation.</li> <li>Open your media player soft to play music, watch TV/move and play game, then all the</li> </ul>	port marked with ∞∞. Make sure that your speaker is full charged for at least 6 hours before initial use. Insert one terminal of your charger to AC main or USB port of PC and other terminal to DC 2.0 jack∞∞. While charging, the red LED light constantly. When charging is completed, the LED turns off. Warning: • You must select a qualified charger from a regular manufacturer. • You must select a qualified charger from a regular manufacturer. • You must select a qualified charger from a regular manufacturer. • You must select a qualified charger from a regular manufacturer. • You must select a qualified charger from a regular manufacturer. • You must charge the Bluetooth speaker if it has been not used for more than 12 months. S.Technical specification Bluetooth	Output     3W       Signal-To-Noise     6 hours       Playback Time     ≥75dB       Distortion     ≤1.0%       Charging Time     3 to 4 hours       Dimension     80 mm × 80 mm × 42mm       (L×W×H)     86.7g       6.FAQ       1. Why is there no power even when the Speaker is power on?       Ans: Ensure the battery is being charged up to 6 hours for first time using. The LED is lighted when it starts charging.       2. There is no sound when playback.       Ans: Check the connection between	properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired at charge for parts or labor for a period of one year. What Is Not Covered By Warranty: Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions for other than normal use, including but not limited to, repair unauthorized parties, tampering, modification or accident. What To Do When Service Is Required: When returning your defective product (postage pre-paid) service, your package should include: 1. Copy of original bill of sale 2. A detailed written description of the problem. 3. Your return address and telephone number (Daytime) MAIL TO ADDRESS BELOW: In the U.S. Sakar International Sakar UK Attention: Service Department 195 Carter Drive Edison, NJ 08817 You may also visit www.sakar.com for further assistance i