	Product Overview	Multi-Connection
<section-header><text><text><text><text><text></text></text></text></text></text></section-header>	Front Back Image: Im	Image: Second
<text><list-item><list-item><list-item><list-item><list-item><list-item><list-item><list-item><list-item><list-item><list-item></list-item></list-item></list-item></list-item></list-item></list-item></list-item></list-item></list-item></list-item></list-item></text>	 FAQ If the Viroless speaker cannot be paired with your device, plase try the following: Braure that your speaker is in pairing mode or reconnection mode. Ensure that your speaker action of your mobile device is activated. If the Viroless speaker cannot be recharged: If you use a power outlet, ensure that the power supply is connected securely and the outlet works. If you use a computer, ensure that it is connected and the UBB port is powered. If a fafety instructions for the lithium battery and charging the product. The input voltage to the product is DC 5V 1A. In order to charge the product is DC 5V 1A. Order de ranger/ adapter for charging the product. Ord harge the product at ambient temperatures between 10 deg °C/50 deg °F and 40 deg °C/104 deg °F. Do not heat above 70 deg °C/158 deg °F, eg. Do not expose to sunlight or throw into fine. With off the product after use. Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot cont to the operating process during the time the user using this product. In extense cases, abuse or missue of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development. 	<section-header><section-header><section-header><section-header></section-header></section-header></section-header></section-header>