

Size: H: 100mm x W: 387mm

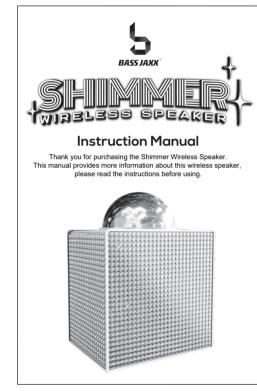

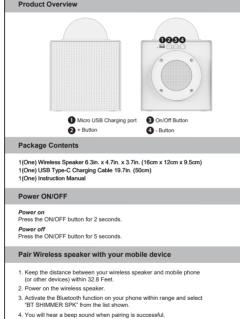

When powered on, the wireless speaker will automatically connect with the last

successfully paired device.

Technical Specification Driver Diameter : 50 mm Impedance : 3.2 Ohms Plaving Time: 1.5 - 2 Hours Charging Time: 2.5 - 3 Hours Power Supply : Li-Ion Battery 3.7V 500 mAh Bluetooth Range: 32.8 feet Bluetooth Version: 5.3 USB Type-C Charging Cable Included Bluetooth Mode Play/Pause - Short press the Power Button once. Next Track - Long press the + Button Previous Track - Long press the - Button Volume I In - Short press the + Button Volume Down - Short press the - Button FM Mode Switch to FM mode - Short press the Power Button twice. - Short press the Power Button twice again will back to Bluetooth mode. Auto Scan - Short press the Power Button three times Next Channel - Long press the + Button Previous Channel - Long press the - Button Volume Up - Short press the + Button Volume Down - Short press the - Button Disco Light Reconnect Wireless speaker to your mobile device - Press and hold the Power Button about 1 second until hear a "Do Do" sound, and

then release the button. The Disco Light will turn On or Off.

Charging your Wireless speaker

A For your safety, please always use appropriate 5V output charger/Adapter to charge the product DO NOT USE Quick Charging USB Adapter to charge the product, as it might damage the product.

- 1. Use the USB Type-C charging cable provided with the packaging.
- 2. Connect the USB Type-C plug to USB Type-C charging port on the product, then connect the USB plug to a USB port on a computer or wall adapter to begin charging
- 3. The LFD on the product will be on during charge.
- 4. Once fully charged, the LFD will be off.

- You must select a qualified charger from a regular manufacturer.
- . You must charge the product if it has been not used for more than 6 months.



▲ CAUTION: The USB Type-C charging cable included with this item is intended for use with this product. Only use the included USB Type-C charging cable to charge this product.

FAQ

 If the Wireless speaker cannot be paired with your device. please try the following:

Ensure that your speaker is in pairing mode or reconnection mode. Ensure that Bluetooth search function of your mobile device is activated.

If the Wireless speaker cannot be recharged:

If you use a power outlet, ensure that the power supply is connected securely and the outlet works. If you use a computer, ensure that it is connected and the USB port is powered.

A Safety instructions for the lithium battery and charging the product

-The input voltage to the product is DC 5V 1A.

-In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/ adapter for charging the product.

- -Only charge the product at ambient temperatures between 10°C/50°F and 40°C/104 °F.
- Do not heat above 70°C/158°F. Do not expose to sunlight or throw into fire. -Switch off the product after use.

-Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product.

-In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development.

FCC STATEMENT

- 1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may
- 2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



FCC ID: 2ADM5-SP-0219



Keep All Relevant Information for Future Reference

Item# SP-0219

Distributed by 1616 Holdings, Inc. 701 Market Street, Suite 200 Philadelphia, PA 19106