

SING

WIRELESS MICROPHONE SPEAKER

INSTRUCTION MANUAL

Thank you for purchasing the Sing Wireless Microphone Speaker. This manual provides more information about this wireless microphone speaker, please read the instructions before using.



Product Overview

* Disco LED light sold separately



Package Contents

Sing Wireless Microphone Speaker x 1pc
Micro USB Charging Cable x 1pc
Instruction Manual x 1

Power On/Off

Power on

Press and hold the ON/OFF button to power on the speaker.

Power off

Press and hold the ON/OFF button to power off the speaker.

Functions

- ◆ Short press + button to increase volume.
- ◆ Long press + button to next song.
- ◆ Short press - button to decrease volume.
- ◆ Long press - button to previous song.
- ◆ Short press E button to adjust the echo level (3 levels).
- ◆ Short press E button after max level to turn echo off.

Pair wireless speaker with your mobile device

1. Keep the distance between your wireless speaker and mobile phone (or other devices) within 32.8 Feet.
2. Power on the wireless microphone speaker.
3. Activate the Bluetooth function on your phone within range and select "SING KARAOKE" from the list shown.
4. You will hear a beep sound when pairing is successful.

Reconnect wireless speaker to your mobile device

When powered on, the wireless speaker will automatically connect with the last successfully paired device.

Charging your wireless speaker

1. Use the Micro USB cable provided with this wireless speaker.
2. Connect the Micro USB plug to Micro USB charging port on the speaker, then connect the USB plug to a USB port on a computer or wall adapter to begin charging.
3. The light will turn red while charging and will turn off once fully charged.

NOTE:

- You must select a qualified charger from a regular manufacturer.
- You must charge the wireless speaker if it has been not used for more than 12 months.



Technical specification

Driver Diameter: ----- 40mm
Impedance: ----- 4 Ohms
Frequency Response: ----- 20Hz - 20KHz
Battery Capacity: ----- 1200 mAh
Battery Type: ----- Li-ion Battery 3.7V
Playing time: ----- 2-3 hours
Charging time: ----- 2-3 hours
Bluetooth Range: ----- 32.8 Feet
Bluetooth Version: ----- 4.2

FAQ

◆ If the Wireless speaker cannot be paired with your device, please try the following:

Ensure that your speaker is in pairing mode or reconnection mode.
Ensure that Bluetooth search function of your mobile device is activated.

◆ If the Wireless speaker cannot be recharged:

If you use a power outlet, ensure that the power supply is connected securely and the outlet works. If you use a computer, ensure that it is connected and the USB port is powered.

⚠ Li-ion battery charging warning statement:

The input to the speaker is 5V 1A.

In order to charge the speaker in a safe manner and reliable conditions, please only adopt battery pack or USB ports from laptop or computer for charging this product.

Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: 2ADM5-SP-0409