	Product Overview	Charging your Wireless speaker	${ m ilde{\Delta}}$ Safety instructions for the lithium battery and charging the product	FCC STATEMENT	
S FABBRIC WIRELESS SPEAKER Instruction Manual Thank you for purchasing the Fabric Wireless Speaker. This more information about this wireless speaker.	Front Fr	 A For your safety, please always use appropriate 5V input charger/Adapter to charge the product. DO NOT USE Quick Charging USB Adapter to charge the product, as it might damage the provided with this wireless speaker. Connect the Micro USB cable provided with this wireless speaker. Connect the Vicro USB charging port on the speaker, then connect the USB plug to Micro USB charging port on the speaker, then connect the USB plug to a USB port on a computer or wall adapter to begin charging. The light will turn red while charging and will turn off once fully charged. NOTEE You must select a qualified charger from a regular manufacturer. You must charge the Wireless speaker if it has been not used for more than 12 months. 	-The input voltage to the product is DC 5V 1A. -In order to charge the product is DC 5V 1A. -In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/ adapter for charging the product. -Only charge the product at ambient temperatures between 10 deg °C/150 deg °F and 40 deg °C/104 deg °F. - Do not heat above 70 deg °C/158 deg °F, eg. Do not expose to sunlight or throw into fire. -Switch off the product after use. -Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product. -In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat	1. This device complies with Part 15 of the FCC Rules. Opera following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including cause undesired operation. 2. Changes or modifications not expressly approved by the µ compliance could void the user's authority to operate the equipm NOTE: This equipment has been tested and found to comply with B digital device, pursuant to Part 15 of the FCC Rules. These I provide reasonable protection against harmful interference in a miniataled and used in a cordiance with the instructions, unstalled and used in accordance with the instructions.	interference that may party responsible for itent. the limits for a Class milts are designed to scidential installation. cy energy and, if not
I his manual provides more information about this wireless speaker, please read the instructions before using.	Package Contents	USB Plug Micro USB Plug	generation, fire development or smoke development.	interference to radio communications. However, there is	'
	Fabric Wireless Speaker x 1pc Micro USB Charging Cable x 1pc Instruction Manual x 1pc	Technical specification		interference will not occur in a particular installation. If this eq harmful interference to radio or television reception, which ca turning the equipment off and on, the user is encouraged	n be determined by
	Power On/Off	Driver Diameter: 52mm Impedance: 4 Ohms		interference by one or more of the following measures: - Reorient or relocate the receiving antenna.	
	Power on Silde the ON/OFF switch to the "ON" position. Power off Silde the ON/OFF switch to the "OFF" position. Note: Always silde the Power switch to "OFF" position when not in use. Pair Wireless speaker with your mobile device	Power Supply: Li-lon Battery 3.7V 300 mAh Play Time: 1.5-2 Hours Charging Time: 1.5-2 Hours Bluetooth Range: 32.8 Feet Micro USB Cable Included		Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. RF warning statement: The device has been evaluated to meet general RF exposure requirement. The	
		FAQ		device can be used in portable exposure condition without restri	· ·
	Keep the distance between your wireless speaker and mobile phone (or other devices) within 3.2.8 Feet. Power on the wireless speaker. Activate the Bluetooth function on your phone within range and select "BT PRINTED SPK" from the list shown. You will hear a beep sound when pairing is successful.	If the Wireless speaker cannot be paired with your device, please try the following: Ensure that your speaker is in pairing mode or reconnection mode. Ensure that Bluetooth search function of your mobile device is activated.		FCC ID: 2ADM5-SP-0712	05743
	Reconnect Wireless speaker to your mobile device When powered on, the wireless speaker will automatically connect with the last successfully paired device.	 If the Wireless speaker cannot be recharged: If you use a power outlet, ensure that the power supply is connected securely and the outlet works. If you use a computer, ensure that it is connected and the USB port is powered. 		701 Market St	a, PA 19106