

Disney  
**FROZEN**  
**WIRELESS KARAOKE MICROPHONE**

**AGE 6+**

**Instruction Manual**

Thank you for purchasing the Wireless Karaoke Microphone. This manual provides more information about this wireless karaoke microphone, please read the instructions before using.



**Product Overview**

Front

Power Indicator  
On/Off Switch

Back

**Package Contents**

- Wireless Karaoke Microphone x 1
- Micro USB Charging Cable x 1
- Instruction Manual x 1

**Power On/Off**

**Power on**  
Switch on the Power Button.

**Power off**  
Switch off the Power Button.

Note: Always power off the karaoke microphone when not in use.

**Pair Wireless Karaoke Microphone with your mobile device**

1. Keep the distance between your wireless karaoke microphone and mobile phone (or other devices) within 32.8 Feet.
2. Power on the wireless karaoke microphone.
3. Activate the Bluetooth function on your phone within range and select "BT FROZEN MIC" from the list shown.
4. You will hear a beep sound when pairing is successful.

**Reconnect Wireless Karaoke Microphone to your mobile device**

When powered on, the wireless karaoke microphone will automatically connect with the last successfully paired device.

**Charging your Wireless Karaoke Microphone**

⚠ For your safety, please always use appropriate 5V input charger/Adapter to charge the product, **DO NOT USE** Quick Charging USB Adapter to charge the product, as it might damage the product.

1. Use the Micro USB charging cable provided with this Wireless Karaoke Microphone.
2. Connect the Micro USB plug to Micro USB charging port on the microphone, then connect the USB plug to a USB port on a computer or wall adapter to begin charging.
3. The LED Indicator will turn red while charging and will turn off once fully charged.

**NOTE:**

- You must select a qualified charger from a regular manufacturer.
- You must charge the Wireless Karaoke Microphone if it has been not used for more than 12 months.

USB Plug                      Micro USB Plug

**Technical Specification**

Driver Diameter: 40 mm	Bluetooth Range: 32.8 Feet
Impedance: 4 Ohms	
Power Supply: Li-ion Battery 3.7V 1200 mAh	Charging Method: USB Charging
Playtime: >10 Hours	Micro USB Charging Cable Included
Charging Time: 3 ~ 3.5 Hours	

**How to use**

Playing Music and Singing

1. Switch on your microphone
2. Connect the microphone to any audio device by Bluetooth in order to listen to music.
3. Play your music track and adjust volume by your audio device.

**FAQ**

- **If the wireless karaoke microphone cannot be paired with your device, please try the following:**  
Ensure that your microphone is in pairing mode or reconnection mode.  
Ensure that Bluetooth search function of your mobile device is activated.
- **If the wireless karaoke microphone cannot be recharged:**  
If you use a power outlet, ensure that the power supply is connected securely and the outlet works, if you use a computer, ensure that it is connected and the USB port is powered.

⚠ Safety instructions for the lithium battery and charging the product

- The input voltage to the product is DC 5V 1A.
- In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/ adapter for charging the product.
- Only charge the product at ambient temperatures between 10 deg °C/ 50 deg °F and 40 deg °C/104 deg °F.
- Do not heat above 70 deg °C/158 deg °F, eg. Do not expose to sunlight or throw into fire.
- Switch off the product after use.
- Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product.
- In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development.

**Warning**

This product is suitable to be used by people who has operating experience aged no less than 6 years old.

Please do not put the product in your mouth to prevent choking hazard of small parts.

Please do not put the finger into available interspaces.

Please store the smaller-sized product accessories in places that are out of reach of children, in order to avoid the occurrence of accidents.

Avoid placing the batteries in places in high temperatures and avoid exposure to heat.

When young children are operating the product, it shall be ensured that the adults are guiding and making sure the product control is within the viewing range.

When the product is not in use, please switch off the power supplies, and remove the batteries from the product.

Please note that we won't take any responsibility for any wrong operation as this may result in severe injury or loss of property, and we cannot control the operating process during the time when the user assembles or uses this product.

Once this product is sold, we won't be responsible for any safety responsibility during the time the user operates or uses controls this products.

**Care and Maintenance**

Always use dry and soft cloth to clean this product.

Avoid this product from being exposed to sunlight or heat.

Avoid immersing this product in water, otherwise, the electronic parts may be damaged.

Check the product regularly, If any damages are discovered, please stop using immediately, until it is completely repaired in good working condition.

**FCC STATEMENT**

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference.  
(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:  
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

**FCC**  
FCC ID: 2ADMS-SP-0752

**ITEM# SP-0752-FROZEN2**

1 922341 150048

Distributed by 1616 Holdings, Inc.  
701 Market Street, Suite 200  
Philadelphia, PA 19106  
Made in China

**Keep All Relevant Information For Future Reference**

Approval: \_\_\_\_\_ Date: \_\_\_\_\_