

Hisense

Hisense H30
(HLTE315E)

User Manual

Before using your phone, read the User Manual thoroughly.

Contents

Phone Basics

| | |
|-------------------------------|---|
| Your phone at a glance | 1 |
| Carrying out basic operations | 2 |
| Using the notification center | 6 |
| Using SIM and MicroSD cards | 7 |
| Battery charging | 9 |

Troubleshooting

| | |
|--|----|
| I can't turn my phone on | 12 |
| My phone keeps turning off automatically | 12 |
| I can't use an application on my phone | 12 |
| My phone's standby time is too short | 13 |
| My phone isn't charging properly | 13 |
| Touchscreen error when charging | 14 |
| I've forgotten my password | 14 |
| My PIN is locked | 14 |
| I can't use the Internet or make calls | 14 |
| My calls don't connect | 15 |
| Phone doesn't make a sound when it rings | 15 |

Phone

| | |
|-----------------------------|----|
| Making calls | 16 |
| Making calls from contacts | 16 |
| Making calls from call logs | 16 |
| Receiving calls | 16 |

Contacts

| | |
|------------------------|----|
| Importing contacts | 17 |
| Creating contacts | 17 |
| Searching for contacts | 17 |

Messages

| | |
|------------------|----|
| Sending messages | 18 |
|------------------|----|

| | |
|--------------------|----|
| Viewing messages | 18 |
| Searching messages | 18 |

Camera

| | |
|------------------|----|
| Taking photos | 18 |
| Recording videos | 19 |

Gallery

| | |
|---------------------------|----|
| Viewing photos or videos | 19 |
| Deleting photos or videos | 19 |
| Sharing photos or videos | 19 |

Chrome

| | |
|--------------|----|
| Using Chrome | 20 |
|--------------|----|

Clock

| | |
|-----------|----|
| Alarms | 20 |
| Clock | 21 |
| Timer | 21 |
| Stopwatch | 21 |

Calculator

| | |
|--------------------|----|
| Making calculation | 22 |
|--------------------|----|

Sound Recorder

| | |
|---------------------|----|
| Recording sound | 22 |
| Playing a recording | 22 |
| Managing recordings | 23 |

FM Radio

Security and Privacy

| | |
|--------------------|----|
| Fingerprint unlock | 23 |
| Face unlock | 24 |

Safety

| | |
|--------------------|----|
| Safety precautions | 26 |
|--------------------|----|

| | |
|-----------------------------|----|
| Safe battery charging | 29 |
| Protecting your hearing | 29 |
| Protecting the environment | 30 |
| Other important information | 30 |
| Disclaimer | 31 |
| IMEI Identification | 31 |
| Specification | 36 |

Safety symbols in this document

The following symbols are used throughout this document:



Warning: situations that could cause injury to yourself or others.



Caution: situations that could cause damage to your device or other equipment.



 
Notice: notes, usage tips, or additional information.

Phone Basics

Use the information in this section to get to know your phone better.

Your phone at a glance

Get to know your phone with the following figure and legend.

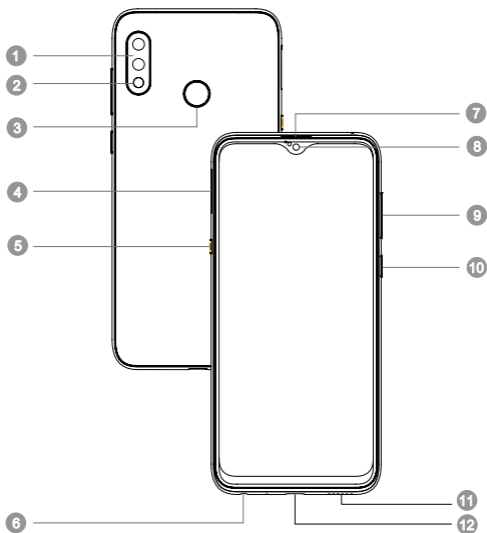

The phone features may vary based on your location, language, carrier and model.

| | |
|-----------------------|------------------|
| 1. Dual-lens camera | 7. Receiver |
| 2. Flashlight | 8. Front camera |
| 3. Fingerprint sensor | 9. Volume button |
| 4. Card slot | 10. Power button |
| 5. Smart button | 11. Loudspeaker |
| 6. Headset socket | 12. USB port |

Carrying out basic operations

This section describes how to carry out basic functions on your phone.

 


Before using your phone for the first time, fully charge your battery. For more information on charging your battery, see **Battery charging**.

Turning your phone on

- To turn your phone on, press and hold the power button until the screen turns on.
- When turning your phone on for the first time, or after performing data reset, follow the onscreen instructions to set up your phone.
- To force restart your phone, press and hold the power button until your phone vibrates.

Turning your phone off


To power off your phone, press and hold the power button, and then tap the  icon.

Using touchscreen gestures

This section describes how to use touchscreen gestures to help control your phone.


Tapping

 To open an app, to choose a menu item, to press an on-screen button, or to enter a character using the keyboard on the screen, tap it with your finger.

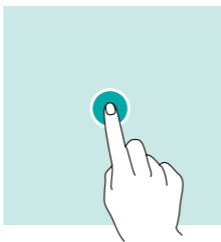


Tapping and holding

 Tap and hold an item or the screen for more than 2 seconds to access available options.

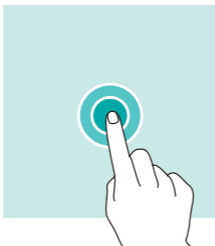

Swiping

 Swipe to the left or right on the home screen or the Apps screen to view other panels.

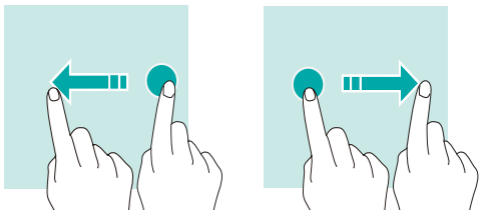


Swipe upwards or downwards to scroll through a web page or a list of items.



Spreading and pinching

 Spread two fingers apart on a web page, map or image to zoom in a part.

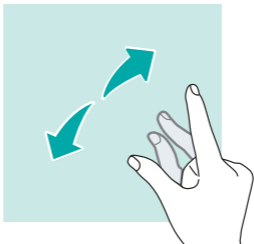


Pinch to zoom out.




Dragging

 To move an item, tap and hold it and drag it to the target position.

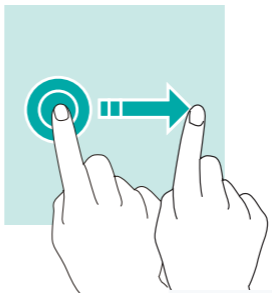

Using the navigation bar

You can find your navigation bar control at the bottom of your screen.

- To go back to the home screen, tap  .
- To open the list of recent apps, swipe up.
- To go to apps screen, swipe up twice.

Locking and unlocking screen

Locking the screen

- To lock the screen, press the power button.
- Go to **Settings > Display > Advanced > Sleep** to change how quickly your screen goes to sleep. The screen locks and goes into sleep mode when you don't use your phone for a while. This is to save power and stop accidental phone use.

Unlocking the screen

To unlock the screen, press the power button and swipe up.

 
Using the notification center

The notification center is where you can view the latest notifications relating to the operation of your phone.

Opening the notification center

To open and view the notification center:

- 1 Swipe down from the top of the screen to see the notification center.
- 2 Swipe down again from the top of the screen to see the shortcuts tab.

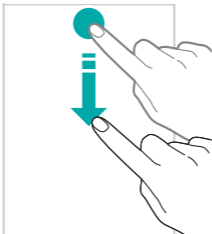

Closing the notification center

Swipe up or tap  to close the notification center.

Setting notification options

To set notification options, go to **Settings > Apps & notifications > Notifications**.

 
Using SIM and MicroSD cards

Inserting SIM and MicroSD cards

Always ensure that SIM and MicroSD cards are inserted correctly into your phone.

The following figure shows the correct way to insert SIM and MicroSD cards into your phone.

S1 is for SIM, and S2 is for MicroSD.

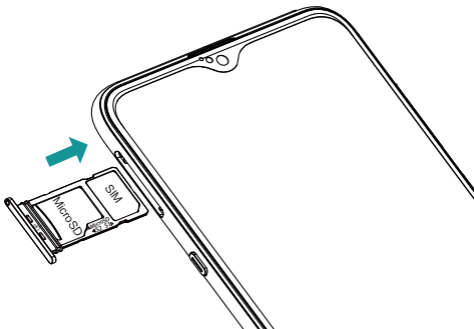

When inserting your card tray, make sure that the card tray is level and that the card is aligned correctly.

 


Do not use cut or modified SIM or MicroSD cards with your phone as these may not be recognized and could damage the card tray.

Ejecting SIM and MicroSD cards

Always ensure that SIM and MicroSD cards are ejected correctly from your phone.

The following figure shows the correct way to eject SIM and MicroSD cards from your phone.

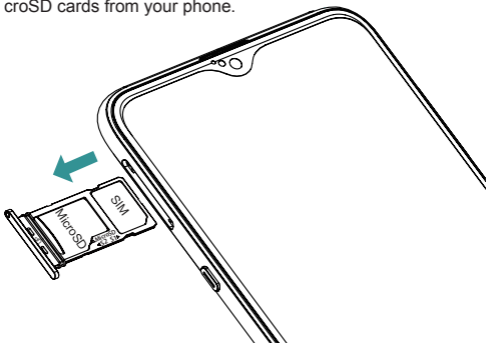

To eject SIM or MicroSD cards, insert your SIM eject pin into the small hole next to the card tray.



Be careful not to scratch your phone or hurt yourself when using your SIM eject pin. Store your SIM eject pin out of the reach of children to prevent accidental swallowing or injury.

Battery charging

Follow the instructions in this section to charge your battery safely and preserve battery life.

Charging your battery

Fully charge the battery before using it for the first time, or when the phone has not been used for a long time, or when the battery is low.

To charge your battery, do the following:

- 1 Connect your USB charging cable to your USB power adapter. Plug the end of the USB cable into the USB port, and the USB power adapter into a power socket. Connect the USB charging cable to the charging port on your phone.
- 2 Once your battery is fully charged, disconnect your phone from your USB charging cable.

Important safety precautions

The following precautions are extremely important and must be followed at all times:



The battery is built into the phone and is not removable. Do not try to remove the battery by yourself.



Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

To charge your phone safely, it is also important to pay attention to the following points:

- Use only approved chargers, batteries, and cables. Using an unapproved or incompatible power adapter, charger, or battery may damage your phone, shorten its lifespan, or cause a fire, explosion or other hazards.
- Avoid using your phone when it is charging. Do not cover your phone or power adapter.
- Connect your charger properly. Not connecting your charger properly can cause serious damage to your phone. Any damage caused by misuse is not covered by the warranty.
- Your phone can be safely charged at temperatures between 0°C and 40°C. Charging in environment where the temperature is below 0°C or higher than 40°C will harm battery performance and shorten battery life. Regular, long-term charging in extreme temperatures will damage your battery.
- Unplug your charger from the electric socket when not charging your phone.

Protecting your battery

For safe and effective charging that also protects your battery, you must also pay attention to the following points:

- If your AC power supply is lower voltage, or you charge from computer or other non-standard sources, you may need to charge your phone for longer.
- Your phone might not start straight away if the battery is low. Your phone will start normally once it has charged for a short while.

- The time your phone needs to charge may depend on room temperature and your battery level.
- The phone and charger may heat while charging.
- This is normal and shouldn't affect your phone's lifespan or performance. If your battery becomes much hotter than usual, stop charging your phone and put it in a cool place. If you phone surface is hot, avoid touching your phone for too long.

Other hardware features

USB on-the-go (OTG)

Your phone is USB on-the-go (OTG) compatible. This means your phone can host other USB devices, such as USB flash drives, digital cameras, mice, or keyboards. Use a standard OTG data cable when using this function.

Troubleshooting

This section lists common problems you may have when using your phone. Check to see whether your issue is listed here before contacting the Hisense service center.

I can't turn my phone on

If you can't turn your phone on, try the following:

- Press and hold power key for two seconds or longer.
- Check that the battery is fully charged before turning your phone on.
- Press and hold the power button until your phone vibrates.
- Check that your battery is properly connected to your phone, and that the connecting points are clean. If your phone has a built-in battery, contact the service center.

My phone keeps turning off automatically

If your phone keeps turning off automatically, try the following:

- Check your battery power. If the power is low, charge your phone.
- Check the softwares or applications to see if they are normal. If not, restart your phone.

I can't use an application on my phone

If you can't use an application on your phone, try the following:

- Check if your phone has sufficient storage. Delete some messages from your phone.

- Check if application is damaged. Uninstall the application or reinstall the application. If cannot be fixed, try resetting system.
- Chances are that the application is not compatible. Uninstall the application and choose a compatible version.
- Check and enable applications management permissions.

My phone's standby time is too short

If you your phone's standby time is too short, try the following:

- Chances are that the battery performance decreases. Please contact service center to change the battery.
- If you play games or listen to music for a long period of time, the standby time will be short. Please shorten the time.
- If the screen is too bright, adjust the brightness of the screen.
- If the phone is used in weak signal environment, the standby time will be short. Please move to strong signal locations.
- Turn off cellular data, GPS, Bluetooth, Wi-Fi switch when not using them.
- Close the application not used.
- Uninstall the applications not used for a long period of time.

My phone isn't charging properly

If you your phone isn't charging properly, try the following:

- Ensure that your phone is charging at a normal temperature.
- Plug the charger into a different socket.
- Recharge your phone for about half an hour.

- Chances are that the battery has a problem. If the battery has been built-in, contact service center.
- Ensure that the charger is not defective. If so, replace the charger.
- If the charger fails to charge, please change or repair it.

Touchscreen error when charging

If there is touchscreen error when charging, try the following:

- If the charging equipment is incompatible with your phone, it may cause some problems. Use charger supplied and stable charging equipment.
- Check whether softwares or applications are normal or not. Restart your phone.

I've forgotten my password

If you forget your password, contact service provider.

My PIN is locked

If you enter wrong PIN three times in a row, contact service provider.

I can't use the Internet or make calls

If you can't use the Internet or make calls, try the following:

- Chances are that signal is too weak. Move to an open area and try again.
- Chances are that the phone is out of service area. Check if the Internet is available.

- Chances are that airplane mode is on. Turn off airplane mode.
- Check if software is abnormal. If so, restart the phone.
- Check if SIM card has failure. If so, check or change SIM card.
- Ensure that the dialing is right.
- Check if cellular data setting has failure. If so, go to Settings to set up cellular data.
- Check if pre-paid charge has reached its limit. If so, contact service provider.

My calls don't connect

If your calls don't connect, try the following:

- Check if phone number is too long.
- Ensure international roaming service and international call service is enabled. If not, contact service provider.




Phone doesn't make a sound when it rings

If your phone doesn't make a sound when it rings, try to check if silent or vibrate mode is enabled.

Phone



Making calls

To make calls:

- 1 Tap .
- 2 Tap  to enter a phone number.
- 3 Tap  to make a call.




Making calls from contacts

To make calls from contacts:

- 1 Tap .
- 2 Tap  to choose a contact.
- 3 Tap the contact number.

Making calls from call logs

To make calls from call logs:

- 1 Tap .
- 2 Tap  to view all calls. Tap the name or number of the person you want to call.
- 3 Tap .

Receiving calls

To answer calls:

- If the screen is locked, swipe up to answer the call.
- If the screen is unlocked, tap **ANSWER** to answer the call.

To reject calls:

- If the screen is locked, swipe down to reject the call.
- If the screen is unlocked, tap **DECLINE** to reject the call.

Contacts



Importing contacts

To import contacts to your phone:

- 1 Tap .
- 2 Tap **IMPORT**.
- 3 Select an import option.



Creating contacts

To create a new contact:

- 1 Tap .
- 2 Tap .
- 3 Enter the contact's name, phone number and other contact information, and then tap **SAVE**.

Searching for contacts




To search for contacts:

- 1 Tap .
- 2 Use one of the following search methods:
 - Scroll up or down the contacts list.
 - Tap  at the top of the screen to search for a contact.
- 3 Select a contact. You can now call them, send them a text message, or edit their contact information.

Messages


Sending messages

To send messages:

- 1 Tap .
- 2 Tap  to create a message.
- 3 Add recipients and enter a message.
- 4 Tap  to send the message.

Viewing messages

To view messages:

- 1 Tap .
- 2 Select a contact on the message list.
- 3 View your conversation.

Searching messages


To search messages:

- 1 Tap .
- 2 Tap  to enter keywords to search messages.



Camera

Taking photos

To take photos:





- 1 Tap .
- 2 Swipe to **Photo** on the screen. Spread two fingers apart on

the screen to zoom in, and pinch to zoom out.

- 3 Tap  to take a photo. Your picture will be automatically saved to .

Recording videos


To record videos:

- 1 Tap .
- 2 Swipe to **Video** on the screen. Spread two fingers apart on the screen to zoom in, and pinch to zoom out.
- 3 Tap  to start recording the video. Tap  to stop recording. To capture an image from the video while recording, tap .

Gallery



Viewing photos or videos

To view photos or videos:

- 1 Tap .
- 2 Select a photo or a video.


 
Deleting photos or videos

To delete photos or videos:

- 1 Tap .
- 2 Tap and hold the photo or video that you want to delete, tap .

Sharing photos or videos


To share photos or videos:

- 1 Tap .
- 2 Select the photo or video that you want to share.
- 3 Tap . Select your sharing method.

Chrome

Using Chrome


Connect the web to search for information and bookmark your favorite web pages to access them conveniently.

- 1 Tap .
- 2 Enter the address field in the search bar. You will have access to web pages; moreover, bookmarks, multiple window switching and other functions are supported.


Clock

This app includes the following functions:

Alarms

Tap . From the **ALARM** tab, you can do the following steps to set your alarms:

Adding an alarm

Tap  and choose your alarm time, repeat times, alarm sound, and other preferences.

Enabling or disabling an alarm

To enable or disable an alarm, tap the toggle switch next to it.


Configuring the alarm settings

To configure the alarms, tap  > **Settings**.


Deleting an alarm

To delete an alarm, tap the alarm and then select **Delete**.

Clock

Tap . From the **CLOCK** tab, you can do the following steps to set your clock:




Adding a city

Tap . Enter a city name in the search bar or select a city from the list.



Deleting a city


Tap the city you have already selected, then the clock of the city has been deleted.

Timer

- 1 Tap .
- 2 Tap **TIMER**.
- 3 Set the countdown time and tap  to start the timer. Tap  to pause the countdown.

Stopwatch


- 1 Tap .
- 2 Go to the **STOPWATCH** tab.
- 3 Tap  to start the stopwatch. Tap **LAP** to count laps. Tap

 to pause the stopwatch. Tap **RESET** to reset the stopwatch.

Calculator

Use calculator to do simple or complicated calculations.

Making calculation




Tap , you can do simple calculations:

- Tap the number and calculate sign to do simple calculations.
- Go to advanced calculator tab by swiping left or rotating your screen.




Sound Recorder


The device supports long periods of recording. Make sure your device has available storage before recording.

Recording sound


- 1 Tap .
- 2 Tap  to start recording.
- 3 Tap  to stop recording. Touch **Done**, then the recording file is automatically saved in the phone. Touch **Discard**, the recording file is deleted.

Playing a recording


- 1 Tap .
- 2 Tap  to start recording.
- 3 Tap  to stop recording.

- 4 Tap  to play the recording.

Managing recordings

- 1 Tap .
- 2 Tap **Phone storage**.
- 3 Tap and hold a recording. You can play, rename, share or delete the recording files.

FM Radio

- 1 To use the FM Radio function, first you need to connect your headphones.
- 2 Tap  to activate.
- 3 Select the frequency following the app instructions and set the volume to a comfortable level.

Security and Privacy

Fingerprint unlock

Fingerprint unlock helps you unlock your phone faster and can improve security.

Adding a fingerprint

To add fingerprints:


- 1 Tap **Settings > Security & location > Fingerprint**.
- 2 To set a screen lock password, PIN or pattern along with your fingerprint follow the onscreen instructions.
- 3 To set your fingerprint, follow the onscreen instructions and

put your fingertip on the fingertip sensor. Press the sensor lightly until your phone vibrates. Repeat using different parts of your fingertip.

- 4 Tap **DONE**. You can now tap the sensor with your fingertip to unlock the screen.

Deleting fingerprint

To delete fingerprints:

- 1 Tap **Settings > Security & location > Fingerprint**.
- 2 Enter your password, PIN or pattern.
- 3 Tap  icon by the fingerprint you want to delete.

Adding another fingerprint

To add another fingerprint:

- 1 Tap **Settings > Security & location > Fingerprint**.
- 2 Enter your password, PIN or pattern.
- 3 Tap **Add fingerprint**.

Face unlock

Face unlock can be used to unlock your phone.

Adding a face

To add your face:

- 1 Tap **Settings > Security & location > Face**.
- 2 To set a screen lock password, PIN or pattern along with your face follow the onscreen instructions.
- 3 Tap **Add a face**. Read the instructions carefully.

- 4 Register your face. You can now use your face to unlock the screen.

Deleting a face

To delete your face:

- 1 Tap **Settings > Security & location > Face**.
- 2 Enter your password, PIN or pattern.
- 3 Tap **Clear facial recognition data**, and then tap **CLEAR**.

Safety

This section contains information on the secure and safe operation of your phone.

Safety precautions

For your safety and that of others, ensure you read, understand, and follow all of the information in this section.



Failure to obey the following safety information could result in fire, electric shock, injuries, or damage to your device or other property. Read all the safety information below before using your phone.

- Using unapproved or incompatible power adapters, chargers, or batteries may damage your phone, shorten its lifespan, or cause a fire, explosion, or other hazards.
- Your phone's ideal operating temperature is 0°C to 35°C. Your phone's ideal storage temperature is -20°C to 45°C.
- Pacemaker manufacturers recommend keeping a minimum distance of 15 cm between phone and pacemaker to prevent potential interference with the pacemaker. If you use a pacemaker, hold your phone on the side opposite to your pacemaker and do not carry your phone in your front pocket.
- Keep your phone and battery away from excessive heat and direct sunlight. Do not place your phone or battery on or in heating devices, such as microwave ovens, stoves, or radiators.
- Do not use your phone in a moist environment, such as bathroom. Prevent your phone from being soaked or

washed in liquid.

- Follow local laws and regulations while using your phone. To reduce the risk of accidents, do not use your wireless phone while driving.
- While flying in an aircraft or immediately before boarding, only use your phone according to instructions provided. Use of a wireless phone in an aircraft may disrupt wireless networks, can cause danger to aircraft operation, and may be illegal.
- To prevent damage to your phone's parts or internal circuits, do not use it in dusty, smoky, damp, or dirty environments or near magnetic fields.
- When charging your phone, plug the adapter into a socket which is near your phone and which is easy to reach.
- When not in use, unplug the charger from outlets and from the phone.
- Do not use, store or transport your phone in areas where flammables or explosives are stored (in a gas station, oil depot, or chemical plant, for example). Using your phone in these environments increases the risk of explosion or fire.
- Dispose of your phone, battery, and accessories according to local regulations. Do not throw phones or batteries away in your household trash bin or other non-recycling trash bin. Improper battery use or disposal may lead to fire, explosion, or other hazards.
- Consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.
- Obey any rules or regulations set by hospitals and health care facilities.

- Do not crash, throw, puncture, drop, squeeze, or bend your phone.
- Do not try to take apart your phone or its accessories. Only authorized personnel are allowed to service or repair the phone.
- Use a dry soft cloth to clean your phone. Do not use water, alcohol, detergent or any chemicals.
- Keep your phone and charger out of the reach of children. Do not let children use the phone or charger without supervision.
- Phone accessories and phone accessory parts, especially small parts, must also be kept away from children to prevent choking.
- Power off your phone in any area where there is a risk of explosions. Do not charge your phone or use your phone in areas where there are chemicals or particles in the air. Obey all signs and instructions.
- Strictly obey relevant instructions in this guide while using USB cable. Failure to follow instructions may result in your phone or PC being damaged.
- Only use USB version 2.0. USB equipment with your phone.
- Accessory must be used to keep EUT 10mm from Body for Body-worn RF exposure compliance.

Safe cleaning and maintenance

To ensure your safety and that of others, you must pay attention to the following safety tips when cleaning and maintaining your phone:

- Turn off your phone before cleaning and maintenance. Your charger should be unplugged from socket. Your phone and charger should be disconnected to prevent electric shocks or short circuiting.
- Do not wipe your phone or charger with benzyl alcohol, chemical substances, chemical agents or abrasive cleaning agents. This is to avoid damaging phone parts or the functioning of your phone. You may clean your phone with a slightly damp anti-static cloth.
- Do not scrape or alter the phone case, or the paint on the phone, as it may cause allergic reaction. If such reaction occurs, stop using your phone immediately and seek medical help.
- Wipe dust off power plug and keep it dry to avoid risk of fire.
- If your phone or accessories do not work properly, contact your local vendor.
- Do not disassemble device or its accessories by yourself.

Safe battery charging

Follow the information on safe battery charging in the Battery charging, Safety precautions, and Protecting your battery sections of this user manual.

Protecting your hearing



- To prevent possible hearing damage, do not listen at high volume levels for long periods.
- Fully understand user manual before use.
- Ensure your player at low volume levels or power off before you leaving.

Protecting the environment



- Obey the local regulations on device packaging, battery and used device disposal and bring them to the collection point for proper recycling.
- Take your used, unwanted lithium batteries to a designated place. Do not dispose of used devices or batteries in a household rubbish bin.
- Proper collection and recycling of your device help ensure electrical and electronic equipment waste is recycled in a manner that conserves valuable materials and protects human health and the environment.

Other important information

Important data usage and billing information

Your phone regularly connects to mail and Internet servers to improve your experience. This creates data exchanges that may be charged along with your existing package, or which may use prepaid credit.

To avoid billing problems related to Internet services, it is strongly recommended to use a suitable package or plan which includes unlimited Internet and emails and to avoid changing the default settings.

You can connect to Wi-Fi for faster, more streamlined service. If you can, use Wi-Fi for streaming, and for downloading games, videos and films.

Disclaimer

Unofficial headsets, chargers, and other accessories are not compatible with your phone. Using unofficial accessories can affect performance. Hisense is in no way responsible for any damage that occurs as a result of using unofficial accessories.

This user manual is intended to provide a general overview. Actual specifications and functions of your phone may be different from those contained in the user manual.

Your phone was fully tested after production. If there are any damages or defects due to manufacturing, follow the terms and conditions in the warranty card.

If there are issues with your phones related to operator features and services, follow the operator terms and conditions.

Note that your phone has specification and function limitations. These limitations cannot be considered manufacturer damage or as damage or defect of any kind.

Only use your phone for the purposes or functions for which it was designed.

IMEI Identification

The IMEI (International Mobile Equipment Identity) code can be found in the equipment package, on a label at the back of the battery cover or it can be displayed on screen by dialing the following combination of symbols and numbers in the phone keyboard (no spaces): *#06#.

Importador: Hisense México S. de R.L. de C.V.

Blvd. Miguel de Cervantes Saavedra,

No. 301 Torre Norte, Piso 2,

Col. Ampliación Granada,

Municipio o Demarcación Territorial Miguel Hidalgo,

C.P. 11520, Ciudad de México,

R.F.C. HME110512IY3, Tel: +52 55 55313515

BRAND: HISENSE

MODEL: HLTE315E

FCC ID: 2ADOBHLTE315E

ELECTRIC CHARACTERISTICS

ADAPTOR

BRAND: HISENSE

MODEL: CC10-050200U

INPUT: 100 – 240 V ~ 50 / 60 Hz 0.35 A

OUTPUT: 5 V $\overline{=}$ 2 A

RECHARGEABLE BATTERY

BRAND: HISENSE

MODEL: LPN385440C

MADE IN CHINA

Medical devices

Implanted medical devices, such as pacemakers, may be affected by the use of this product.

Avoid potential interference radiated from the product in the implanted medical device, by keeping the product at least 20 cm away from the device.

Do not carry the product in the chest pocket.

Turn off the product immediately if you suspect any interference.

ONLY FOR MEXICO

“For use in Mexico, the operation of this product is subject to the following two conditions: (1) this equipment or device may not cause detrimental interference and (2) this equipment or device must accept any interference, including interference that may cause unwanted operation.”

FCC Compliance

This phone complies with section 15 of FCC Regulations.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable

protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



Even though there may be differences between SAR levels of different phones and in different positions, all of them comply with the requirements of the government.

This device complies with Part 15 of the FCC Rules. Operation

is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: 2ADOBHLTE315E

Specification

| | |
|--|--|
| Brand | Hisense |
| Market | Hisense H30 |
| Model | HLTE315E |
| Dimensions | 164.37*77.1*8.75mm |
| OS | Android P |
| CPU | MTK P70 |
| Internal Memory | 4 GB RAM + 128 GB ROM |
| Camera | 16MP+2MP rear camera, 20MP front camera |
| Size | 6,53"(16,58 cm) |
| Resolution | FHD+ |
| Color | 16.7 millions of colors |
| LTE | Band 1/2/3/4/5/7/12/28/66 |
| 3G | Band 1/2/4/5 |
| 2G | 850/900/1800/1900 MHz |
| Bands that do NOT operate on your Hisense equipment | Band 10/26/38 |
| Data Speed | LTE DL 300Mbps |
| | LTE UL 75Mbps |
| WLAN | 802.11b/g/n/a/AC |
| Bluetooth | BT 4.2 |
| GPS | Yes |
| FM | Yes |
| Interface | Type-C |
| Battery | 3.85 V  4400 mAh(Rated) |
| | 3.85 V  4530 mAh(Typical) |

Copyright

Copyright © 2019 Hisense

The user manual is protected under international copyright laws.

No part of the user manual may be reproduced, distributed, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system, without the prior written permission of Hisense Group.

Some of the contents of the user manual may not apply to your device, depending on the software and your service provider. All information in this document is subject to change without notice.

Hisense