

Hisense E40

MODELO: HLTE229E.10



IMEI:XXXXXXXXXXXXXXXXXXXX

S/N:XXXXXXXXXXXXXXXXXXXX

TELEFONO: 5 V --- 2 A

Bateria de Li-Polimero

3,85 V --- 4 000 mAh

FCC ID:2AD0BLTE229E10



HECHO EN CHINA.

29*16mm

U L Y



Tip:

1. The phone supports only Nano-SIM and microSD cards. Non-nano or manually cut SIM cards can damage the phone.
2. To forcibly restart your phone, press and hold the power button.
3. Do not remove the back cover and battery. To have it replaced, contact a Hisense authorized service center.


Note: Follow all instructions carefully. Improper use will invalidate the warranty.
To protect your consumer rights, keep the above label safe.

POWER BUTTON

VOLUME BUTTONS

Procedure

- Step 1: Power off your phone before installing and removing the card tray.
- Step 2: Use the ejection pin to remove the card tray.
- Step 3: Put the Nano-SIM or microSD card onto the card tray.
- Step 4: Push the card tray into the phone.

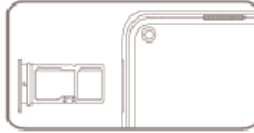

AI BUTTON

CARD TRAY