

Safety Precautions

Please read the safety precautions carefully to ensure the correct use of your mobile phone.

Do not crash, throw, or puncture your mobile phone. Avoid the falling, squeezing, and bending of your mobile phone.

Do not use your mobile phone in a moist environment, such as the bathroom. Prevent your mobile phone from being soaked or washed in liquid.

Do not switch on your mobile phone when it is prohibited to use or when the phone may cause interference or danger.

For driving safety, only a passenger should operate the device when the car is in motion and not the driver. Laws governing the use of electronic devices by the driver may be applicable in your country and/or jurisdiction.

Follow any rules or regulations in hospitals and health care facilities. Switch off your mobile phone near medical apparatus.

Switch off your mobile phone in aircraft. The phone may cause interference to control equipment of the aircraft.

Switch off your mobile phone near high-precision electronic devices. The phone may affect the performance of these devices.

Do not attempt to disassemble your mobile phone or its accessories. Only qualified personnel are allowed to service or repair the phone.

Do not place your mobile phone or its accessories in containers with a strong electromagnetic field.

Do not place magnetic storage media near your mobile phone. Radiation from the phone may erase the information stored on them.

Keep the product away from direct sunlight. Do not put your

mobile phone in a high-temperature place or use it in a place with flammable gas such as a gas station.

Keep your mobile phone and its accessories away from children. Do not allow children to use your mobile phone without guidance.

Use only approved batteries and chargers to avoid the risk of explosion.

Observe any laws or regulations on the use of wireless devices. Respect others' privacy and legal rights when using your wireless device.

Strictly follow the relevant instructions of this manual while using the USB cable. Otherwise your mobile phone or PC may be damaged.

This manual is for reference only, please refer to the material object as standard.

Use a dry soft cloth to clean the product; do not use water, alcohols, detergent or any chemicals.

Please backup any important data, repair or other causes may result in data loss.

Do not disconnect the product during memory formatting or file transfer operations. Otherwise, it may cause program failure or files damage.

Power supply & Charging

Only use the accessories supplied with the appliance. The use of incompatible accessories may have serious consequences and permanently damage your phone.

Only use the adapter supplied with the product.

This adapter is intended for indoor use only.

The mains cable is used as a connecting device. The wall outlet should remain readily accessible and access to the outlet

should not be blocked during use. To fully disconnect the appliance from the mains, unplug the AC/DC cable from the wall outlet. The wall outlet should be located near the appliance and should remain readily accessible.

The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc. to avoid overheating and malfunction. Maintain a clearance of at least 10cm around the appliance.

The apparatus should be used in a moderate climate.

The phone is built with an internal rechargeable battery: do not expose the product to excessive heat such as sunshine, fire or the like.

Battery contains materials which are hazardous and harmful for the environment.

Do not plug or unplug USB port with wet hands – risk of electric shock.

Medical device

Implanted medical device such as pacemaker may be affected by the product.

Avoid potential interference emitted from the product to the implanted medical device, keeping the product at least 20 cm away from the medical device.

Do not carry the product in the breast pocket.

Turn off the product immediately if you suspect any interference.

Hearing protection

This phone respects the current regulations for limiting the maximum output volume. Prolonged earphone listening at high volume could lead to hearing damage!



Stop using the product or lower the volume if you feel your ears ringing.

Do not turn up the volume too high, doctors warn against prolonged exposure to high volume.

Excessive sound pressure from earphones and headphones can cause hearing loss.

To prevent possible hearing damage, do not listen at high volume levels for long periods.

Please only use Hisense headphones with your phone.



Copyright

This product is for private use only. Copying CDs or downloading music, video or picture files for sale or other business purposes may be a violation of copyright law. Copyrighted materials, works of art and/or presentations may require authorization to be fully or partially copied or recorded. Please be aware of all such applicable laws concerning the recording and use of such contents for your country and jurisdiction.

Maintenance

 
Take care of the screen. The screen is covered with a glass layer that may be scratched or broken.

To clean fingerprints or dust from the screen, it is recommended to use a soft, non-abrasive cloth such as a camera lens cloth to clean the screen.

The package included

- Smartphone U688
- USB cable
- AC/DC Adaptor
- Battery
- Warranty Card
- Earphone
- Manual

Getting Started

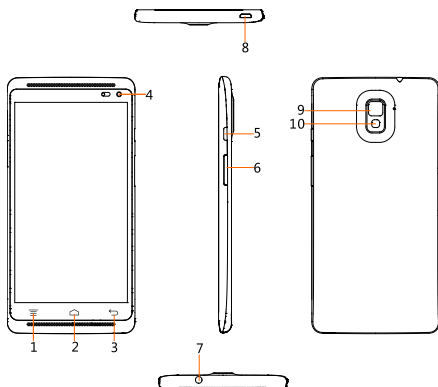


Number	Name
1	Menu Key
2	Home key
3	Back Key
4	Front camera

5	Power key
6	Volume key
7	3.5mm Headset Jack
8	USB Connector
9	Rear camera
10	Flash


Inserting the SIM card, Battery and SD Card

 1. Inset the sim card

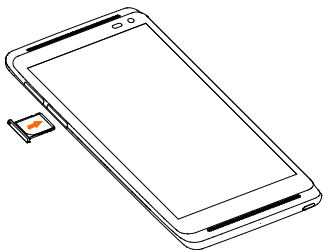


2. Insert SD card

 You may also insert a micro SD card (up to 32GB) to expand the storage memory of your phone.

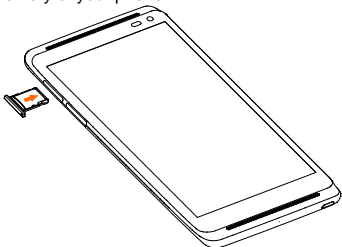

Charging the battery

 You must install and charge the battery to use your phone.

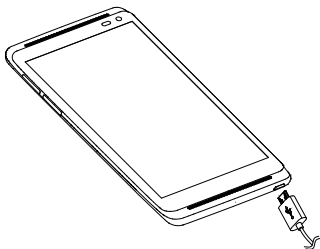

Connect data cable and charger, plug one end into your phone's USB port.

 
 
Plug the other end of the charger into the appropriate electrical outlet (100~240V AC).

For first time use, charge the battery for at least 5 hours before use. When your phone indicates that the battery is fully charged, remove the charger.

Turn your device on/off

Turn on the phone: Press and hold Power key for more than 3 seconds to turn on your phone.

Unlock the screen: Press and hold the lock icon and slide the unlock icon to unlock the screen.

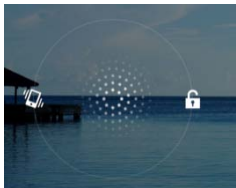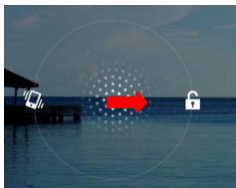


Turn off the phone: Press and hold Power key to pop up option menu, select “power off”.

Access the status bars

Hold the status bars with your finger, and drag it downwards to view notification page.



 
From the notification page you can access the shortcut menu:

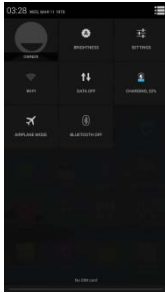

From the shortcut menu, you can quickly access to Bluetooth, Wifi, Data connection, battery status, etc.

Access the application page

 


To access the application list, on the Home screen, touch .

From the application list, you can:

- Touch an icon to open an application.
- Touch the WIDGETS tab to switch to the widget list.
- Hold on the icon for 1 sec to drag the icon to home page.

Manage recently used applications

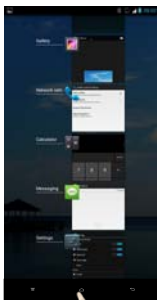


Press and hold the Home key for 2 seconds to view the recently used applications.




Tap on a recently used application to launch it or tap and slide to left or right to remove it from the list.

Answering a call

 The phone icon will appear when there is an incoming call.

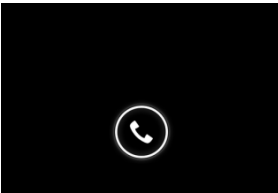

 
Press and hold the phone icon and slide to green phone icon to answer a call.

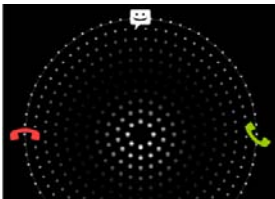

Making a call




From the home screen, tap phone icon.

Enter a phone number or name of a contact. Tap the contact and then tap phone icon  to place the call.


Adding contacts



From the Home screen, tap contact icon.

Click , you can add a new contact to the phone or card.

Changing Ringtone

1. From your Home screen Tap Settings. 
2. Tap sound → phone ringtone
3. Tap the desired ringtone
4. Tap ok


Sending Message




From the home screen, tap message icon.

Click CREATE MESSAGE to create a message. Input receiver's phone number and name to search in contacts.

Click "Type message" to edit the message.

When you are ready to send the message, click "

Get Connected

1. From your Home screen Tap Setting. 
2. Tap Wi-Fi and select ON.
3. Touch the desired network you wish to connect.
4. If the network is secured, enter the password.

Specification

FEATUR RES	OS	Android OS V4.4
	CPU	quad-core 1.2GHz
	Internal Memory	8GB(ROM)+1GB(RAM)
	External Memory	MicroSD, Max. 32GB
	2G Network	GSM 850/1800/1900MHz
	3G Network	WCDMA/HSPA+, 3GPP WCDMA850/1900/2100
	SIM Card	Single
BODY	Dimensions	85.4x170.4x8.45
DISPL AY	Type	TFT
	Size	6 Inches
	Resoution	HD
	Color	16.77 million color
	Multitouch	Yes
SOUN D	Alert Types	Vibration, Ringtone
	Loudspeaker	Yes
	3.5mm jack	Yes
DATA	GPRS	Yes
	EDGE	YES
	Speed	HSPA+ 21Mbps;
		HSUPA 5.76Mbps
	WLAN	WiFi 802.11b/g/n
	Bluetooth	V4.0
	USB	Micro USB v2.0, Support charging and data transfer

Imagin g	Main Camera	8.0Mpix AF
	Second Camera	Yes
	Flash	Yes
	Video Support	MP4, 3G2, 3GP, MPEG4, H264, H263
Multim edia	Supported memory card	Max. 32GB T-Flash
	Music support	MIDI, MP3, AAC, AAC+, OGG, AMR-NB
	Video Streaming	Yes
	MP3 Ringtone	Yes
	FM Radio	Yes
	Stereo Speaker	No
Battery	Type	3.8 V Lithium-ion
	Capacity	3000mAh
	Talk Time	WCDMA approximately 360 minutes
		GSM approximately 500 minutes
	Standby Time	WCDMA approximately 500 Hours
GSM approximately 600 Hours		
Connec tion	Interface	MICRO USB 2.0

FCC statements:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.**
- Increase the separation between the**

equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

RF

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types HS-U688 (FCC ID: 2AD0BU688) has also been tested against this SAR limit.

The highest SAR value reported under this standard during product certification for use when properly worn on the body is 1.304 W/kg and for head is 0.727 W/kg. Simultaneous RF exposure is 1.540W/Kg.

. This device was tested for typical body - worn operations with the back of the handset kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.