

G180 User Manual



Dear customer,

Thank you for purchasing the portable speaker G180. To ensure correct operation, please read this user manual carefully before operation.

Important Safety Instructions

- ◆ Do not use the speaker in special cold and hot environments.
- ◆ Please avoid the speaker dropping or hitting with a hard object, it may cause other hardware damage.
- ◆ Take care when charging the speaker, excessive prolonged charging will damage the battery lifetime. Charge the speaker to full capacity when using for the first time.
- ◆ When battery low, the lighting will be flashed in red and voice prompt “**Low Battery, Please Charge**”, please charge speaker in time.
- ◆ If does not use this speaker for long time, please charge at least once within one month, in order to prevent the lithium battery from causing and damaging because of excessive consumption.
- ◆ Adjust the volume to appropriate level to avoid disturbing others.

Features

- **Bluetooth 5.3 music& Mobile Hands-free communication**

- **Aux-in**

Work as the external speaker by connecting to the audio source of computer, mobile, PSP/MP3/MP4 etc.

- **USB Flash Disk/ Micro SD Card Music playing**

Support MP3/WAV/WMA/FLAC/APE music format, capacity up to 32G

- **FM radio**

With built-in antenna,FM Frequency: 87.5MHz ~ 108MHz

- **Support TWS(True Wireless Stereo) function**

two same speakers can in pair and play Bluetooth music in the same time

- **Support colorful ambient lighting beam**

With showing the speaker's volume, battery capacity & dancing with the music.

Technical Data

Bluetooth Version: 5.3

Driver: 44*80mm bass driver*1+36mm tweeter*1 + passive radiator* 2

Output: 20w

Aux In: 3.5mm

Li-Battery: 7.4V 2000mAh

Dimensions: $\Phi 74 \times H194$ mm

Charging jack: USB C

Weight: 493g

 
Working time: more than 10 hours

Bluetooth Distance: Single mode at 10m, TWS mode 5m

Package Contents

G180 speaker, USB-C charging Cable, User Manual

Slot and Keys

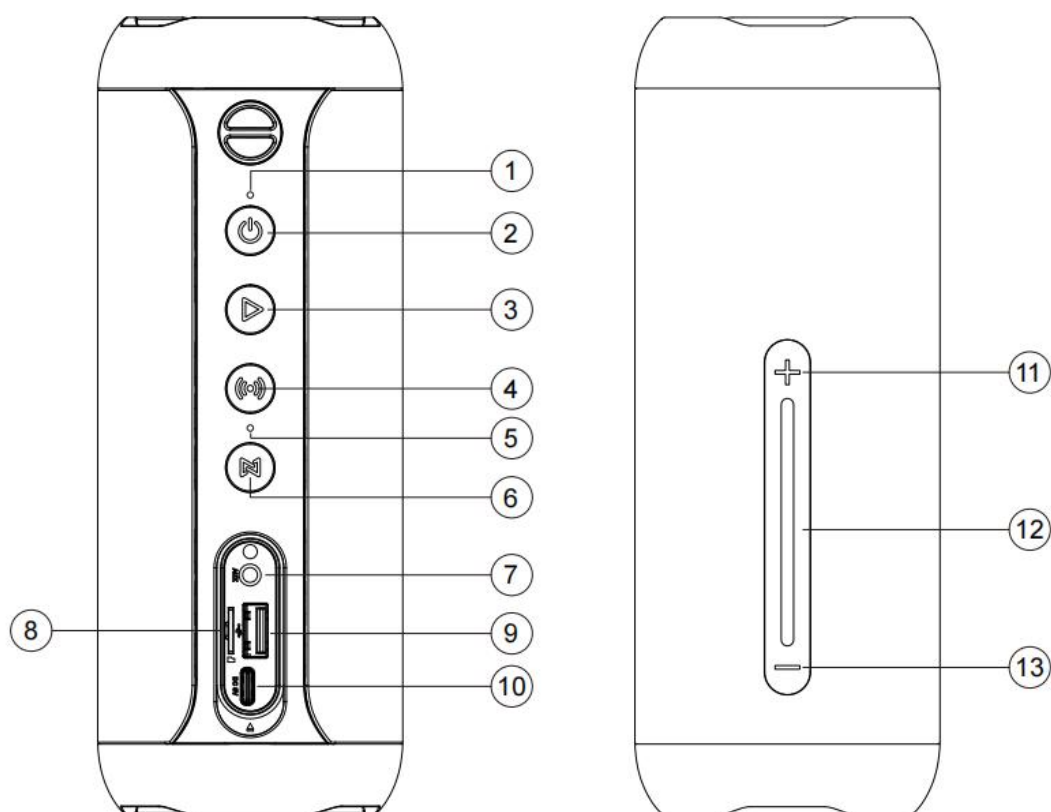

1.  Bluetooth indicator

2. 

Long press: Power on/Power off

Short press: Switch the working mode



Long press: Auto searching the FM channels under FM mode

Short press: Pause/Play


Double press: Switch lighting mode & turn off the lighting mode



Long press: Disconnect the Bluetooth pairing

Short press: Answer/end the call

Double press: Reject the call

5.  TWS mode indicator



Short press: Enter/Exit the TWS function

Double press: Clear the TWS pairing memory



Aux in port



 
8. USB Slot



9. Micro SD Card Slot






10. DC IN Charging Slot



Long press: Next track/FM channel

Short press: Volume up

Press the  and  button together and hold for 2 seconds can see the speaker's battery capacity

12.  Lighting beam

Music Volume / Battery Capacity / lighting mode


13. 

Long press: Previous track/FM channel

Short press: Volume down


Operation Instructions

1. Power on/off

1) Long press  button to power on/off the speaker.

Please note: The default working mode is Bluetooth mode. The default working volume around 50%.


2. Bluetooth


1) Turn on the Bluetooth of your phone, search for nearby devices. **G180** will be found on your mobile pairing list, please connect it. When connected, the speaker will prompt “**You are now connected**” and the  Bluetooth indicator will stop twinkle and in blue.

2) Please turn on your phone’s music player, and speaker will play the selected music.


3) The speaker will pair with the latest used Bluetooth device automatically. Long press

the  button to disconnect the current Bluetooth connection, and continue to long

press and Bluetooth will connect back. When a phone call comes in, short press the 


button to answer the call, press it again to hang up the call; double press the  button and the call will be rejected directly.

3. USB Flash Disk Music Playing


Inserting the USB Flash Disk into the speaker, short press the  button to enter the USB mode, the speaker will prompt “**USB Flash Drive Mode**”, then the speaker will play

the USB music directly.



 
4. Aux in Mode

Use the 3.5mm audio cable to connect the speaker to an audio source (PC, MP3/MP4, mobile phone). Short press the  button to switch and the speaker will prompt “Aux Mode” mode. The speaker will play the music from the audio source.

5. Micro SD Card Music Playing

Inserting the Micro SD card into the card slot. Short press the  button to switch to the Micro SD card mode, and the speaker will prompt “TF Card Mode”. Then, the speaker will automatically play the music.



6. TWS(True Wireless Stereo) function (only works in Bluetooth mode)



- 1) Power on 2pcs **G180** (ensure both speakers are in Bluetooth waiting to pair status).
- 2) Short press the  button on either one speaker can enter/exit the TWS function.
- 3) Once two speakers paired, the speaker  TWS light indicator flashing in blue is the master speaker, the other one  TWS light indicator in orange is the slave speaker. Use your phone to pair the master speaker **G180**, and play Bluetooth music on both speakers.

Please Note:

- 1) Two speakers should be under waiting for Bluetooth pairing status.
- 2) Under TWS mode, if you turn off one of the speaker, then another speaker will be turned off automatically.
- 3) The two speakers will be reconnected automatically after first connection once in connection range.

7. FM Mode

- 1) Power on the speaker. Short press the  button to enter the FM Radio mode. Long press the  button for 3 seconds to automatically search for local channels. Every time a radio channel is found, after playing for 3 seconds, continue to search for the next radio channel. After searching, it will play the last channel.


2) Long press the  button to switch to next channel. Similarly, long press the  button to switch the previous channel.

Please Note:

For better FM signal reception, the lighting will be off automatically under FM mode.

8. Colorful ambient lighting

1. There are three lighting effect mode: rhythm with music mode; colorful flow light mode; breathing light mode.

2. Double press the  button to switch the light mode and turn off the lighting.

9. Charging Function

1) When the battery low, the speaker will prompt “**Low Battery, Please Charge**” and the light will be flashed in red for 3 seconds, the speaker will automatically power off. Please charge the battery via a USB adaptor immediately.

2) When the speaker is powered off and charging, the lighting beam will turn red and show the current battery capacity. After full charged, the red light will stop flashing.

Please Note:

Please use the good quality adaptor to charge the speaker. We suggest use the adaptor specification at 5V/2A.

When speaker with low battery capacity, please charge the speaker immediately.

Do not charge in a sub-zero environment, charging below zero may cause damage to the battery.

Do not use the speaker while charging, the output power is lower than normal working status.

Troubleshooting

1. What should I do if the speaker can not pair with the Bluetooth device and play music accordingly?

1) Please check the specification/ the manual of the Bluetooth device (your mobile or computer), and check if the device can support the A2DP stereo audio transmission. If yes, please turn on the A2DP stereo mode.

2) Ensure the speaker is under the Bluetooth pairing status, if there are many Bluetooth devices nearby, the VM-BS55 will not easy to be found. Please turn off other Bluetooth devices.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on,

the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna.

.Increase the separation between the equipment and receiver.

.Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

.Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment. RF Exposure

Information

The device was evaluated to meet general RF exposure requirements. This equipment should be installed and used with a minimum distance of 0 mm between the radiator and your body.